



Gaming
Imaging
3D
Video
Entertainment
Photos
Graphics

EVGA nForce 730i Mainboard

User's Manual

User's Guide

EVGA nForce 730i
Motherboard

Table of Contents

User's Guide	i
EVGA nForce 730i Motherboard	i
Before You Begin...	ix
Parts NOT in the Kit	ix
Intentions of the Kit	ix
EVGA nForce 730i Motherboard	1
Motherboard Specifications.....	1
Unpacking and Parts Descriptions	4
Unpacking	4
Equipment.....	4
EVGA nForce 730i Motherboard.....	5
Hardware Installation	8
Safety Instructions	8
Preparing the Motherboard.....	9
Installing the CPU	9
Installing the CPU Fan	10
Installing System Memory (DIMMs)	10
Installing the Motherboard.....	11
Installing the I/O Shield	12
Securing the Motherboard into a System Case	12
Connecting Cables and Setting Switches	12
24-pin ATX Power (PW1)	14
8-pin ATX 12V Power (PW12).....	15

Connecting IDE Hard Disk Drives	15
Connecting Serial ATA Cables.....	16
Connecting Internal Headers	17
Front Panel Header	17
USB Headers	18
Audio.....	19
SPK Header	19
Fan Connections.....	20
COM1	21
FDD Connector	21
Expansion Slots	21
PCI Slots	22
PCI Express x1 Slots	22
PCI Express x16 Slot.....	22
Onboard Buttons	23
Clear CMOS Button.....	23
RESET and POWER Button.....	23
Post Port Debug LED and LED Status Indicators	25
Post Port Debug LED.....	25
LED Status Indicators	25
Configuring the BIOS	26
Enter BIOS Setup.....	27
Main Menu	27
Standard CMOS Features Menu	30
Date and Time.....	31
SATA Channel.....	31
Drive A.....	33
Halt On	33

Memory	34
Advanced BIOS Features Menu	35
Removable Device Priority	36
Hard Disk Boot Priority	36
CD-ROM Boot Priority	36
First/Second/Third Boot Device	36
Boot Other Device.....	37
Boot Up NumLock Status.....	37
Security Option	37
APIC Mode.....	38
MPS Version Control For OS	38
Full Screen LOGO Show.....	38
Advanced Chipset Features Menu	39
Spread Spectrum Control.....	40
Init Display First	40
Hybrid SLI	40
Display Detection	41
Onboard GPU	41
Frame Buffer Size.....	41
HPET Support	41
Retrain PCIE dev to Gen2.....	41
System BIOS Cacheable	42
Integrated Peripherals Menu.....	43
Storage Config.....	44
Onboard Devices	45
Legacy Devices.....	45
USB Device Setting.....	46

Power Management Setup Menu	47
ACPI Function	47
ACPI Suspend Type.....	48
Soft-Off by PBNT	48
WOL(PME#) From Soft-Off	48
S5 Resume by USB	48
Power On by Alarm	48
POWER ON Function.....	48
Hot Key Power On	49
PWRON After PWR-Fail.....	49
PnP/PCI Configuration Menu.....	50
Resources Controlled By	51
IRQ Resources	51
PCI/VGA Palette Snoop	51
Maximum Payload Size.....	52
PC Health Status Menu	53
SmartFan Function.....	54
Frequency/Voltage Control Menu.....	55
System Clocks	56
Frequency Settings.....	56
FSB & Memory Config	57
FSB - Memory Clock Mode.....	57
Memory Timing Setting.....	59
System Voltages	61
CPU Feature.....	63
CPU Clock Ratio Unlock.....	64
Installing Drivers and Software	65
Drivers Installation.....	65

Appendix A POST Codes for the EVGA nForce 730i Motherboard.....68

List of Figures

Figure 2.	PW1 Motherboard Connector	14
Figure 3.	BIOS CMOS Setup Utility Main Menu.....	28
Figure 4.	Standard CMOS Features Menu.....	30
Figure 5.	Advanced BIOS Features Menu.....	35
Figure 6.	Advanced Chipset Features	39
Figure 7.	Integrated Peripherals Menu	43
Figure 8.	Power Management Setup Menu.....	47
Figure 9.	PnP/PCI Configuration Menu	50
Figure 2.	PC Health Status Menu.....	53
Figure 3.	Frequency/Voltage Control Menu	55
Figure 4.	System Clocks Menu.....	56
Figure 5.	FSB & Memory Config Menu.....	57
Figure 6.	System Voltages Menu.....	61

Before You Begin...

Parts NOT in the Kit

This kit contains all the hardware necessary to install and connect your new EVGA nForce 730i motherboard. However, it does not contain the following items that must be purchased separately to make the motherboard functional.

- Intel Microprocessor
- System Memory
- Cooling fan for the Microprocessor
- Graphics Card
- Power Supply

EVGA assumes you have purchased all necessary parts needed to allow for proper system functionality.

Intentions of the Kit

This kit provides you with the motherboard and all connecting cables necessary to install the motherboard into a system case. If you are *building* a PC, you will use most of the cables provided in the kit. If however, you are *replacing* a motherboard, you will not need many of the cables.

When *replacing* a motherboard in a system case, you will need to reinstall an operating system even though the current drives have an operating system.

EVGA nForce 730i Motherboard

Thank you for purchasing the EVGA nForce 730i Motherboard, with integrated GeForce Graphics, this motherboard offers the tools and performance PC users' demand.

Motherboard Specifications

- ❑ Size
 - ATX form factor of 12 inch x 9.5 inch
- ❑ Microprocessor support
 - Intel Core 2 Extreme, Intel Core 2 Quad, Intel Core 2 Duo, Pentium EE, Pentium D, Pentium
 - Intel CPU frontside bus (FSB) interface with Hyper-Threading Technology support, running at up to 1333 MHz
- ❑ Operating systems:
 - Supports Windows XP 32bit/64bit and Windows Vista 32bit/64bit
- ❑ Contains NVIDIA GeForce 9300/nForce 730i Chipset
 - Support Hybrid SLI technology to enhance Add-on Graphic card performance by NVIDIA Software settings for Windows Vista only
- ❑ Integrated VGA
 - Integrated GeForce Series DirectX 10 Shader Model 4.0 graphics processor, 400MHz RAMDAC for analog display resolutions up to 2560x1600
 - GeForce Boost Technology which increases the performance of a discrete GeForce GPUs

- Next generation NVIDIA PureVideo HD video engine for full HD-DVD and Blu-ray content decode and playback even with entry level CPUs.
- Integrated HDMI interface with High-Definition Content Protection (HDCP) key support and protected audio stream mixing for full HDMI
- Support Full NVIDIA® nView® multi-display technology capability support D-SUB + DVI-D or HDMI
- ❑ System Memory support
 - Supports 128-bit dual channel JEDEC DDR2-800. Supports up to 8 GBs DDR2 memory.
- ❑ Twelve USB 2.0 Ports
 - Supports hot plug
 - Twelve USB 2.0 ports (four rear panel ports, eight onboard headers)
 - Supports wake-up from S1 and S3 mode
 - Supports USB 2.0 protocol up to 480 Mbps transmission rate
- ❑ Onboard Serial ATA II
 - 300MBps data transfer rate
 - Six S-ATA II connectors from south bridge and two S-ATA II connectors from JMicron's JMB363
 - NVIDIA MediaShield RAID with support for RAID 0, RAID 1, RAID 0+1, RAID 5, and JBOD
 - Supports hot plug and NCQ (Native Command Queuing)
- ❑ Onboard LAN
 - LAN interface built-in onboard
 - Supports 10/100/1000 Mbit/sec Ethernet
- ❑ Onboard Audio
 - Azalia High-Definition audio
 - Supports 8-channel audio
 - Supports S/PDIF output
 - Supports Jack-Sensing function

- ❑ Green Function
 - Supports ACPI (Advanced Configuration and Power Interface)
 - Supports S0 (normal), S1 (power on suspend), S3 (suspend to RAM), S4 (Suspend to disk - depends on OS), and S5 (soft - off)

- ❑ Expansion Slots
 - Three PCI slots
 - Two PCI Express x1 slot
 - One PCI Express x16 Graphics slots with PCI Express 2.0

Unpacking and Parts Descriptions

Unpacking

The EVGA nForce 730i motherboard comes with all the necessary cables for adding a motherboard to a system case. If you are replacing a motherboard, you may not need many of these cables.

All parts shipped in this kit are RoHS-compliant (lead-free) parts.

Equipment

The following equipment is included in the motherboard box.



The EVGA nForce 730i Motherboard

This PCI Express motherboard contains the NVIDIA GeForce 9300 Chipset and is Hybrid SLI-ready.



1 - Visual Guide

Helps to quickly and visually guide you through the hardware installation of the motherboard.



1 - I/O Shield

Installs in the system case to block radio frequency transmissions, protect internal components from dust, foreign objects, and aids in proper airflow within the chassis.

**1 - Floppy Cable**

Used to attach a floppy drive to the motherboard.

**1 - 2-Port SATA Power Cable**

Allows a Molex power connector to adapt to a SATA power connector.

**2 - SATA Signal Cable**

Used to support the Serial ATA protocol and each one connects a single drive to the motherboard.

**1 - IDE-ATA 133 HDD Cable**


Passes data between the IDE connection on the motherboard and IDE device.

**1 - Driver Installation CD**

Contains drivers and software needed to setup the motherboard.


EVGA nForce 730i Motherboard

The EVGA nForce 730i motherboard with the NVIDIA GeForce 9300/nForce 730i single chip is a PCI Express, NVIDIA GeForce Boost Technology ready motherboard. Figure 1 shows the motherboard and Figures 2 shows the back panel connectors.

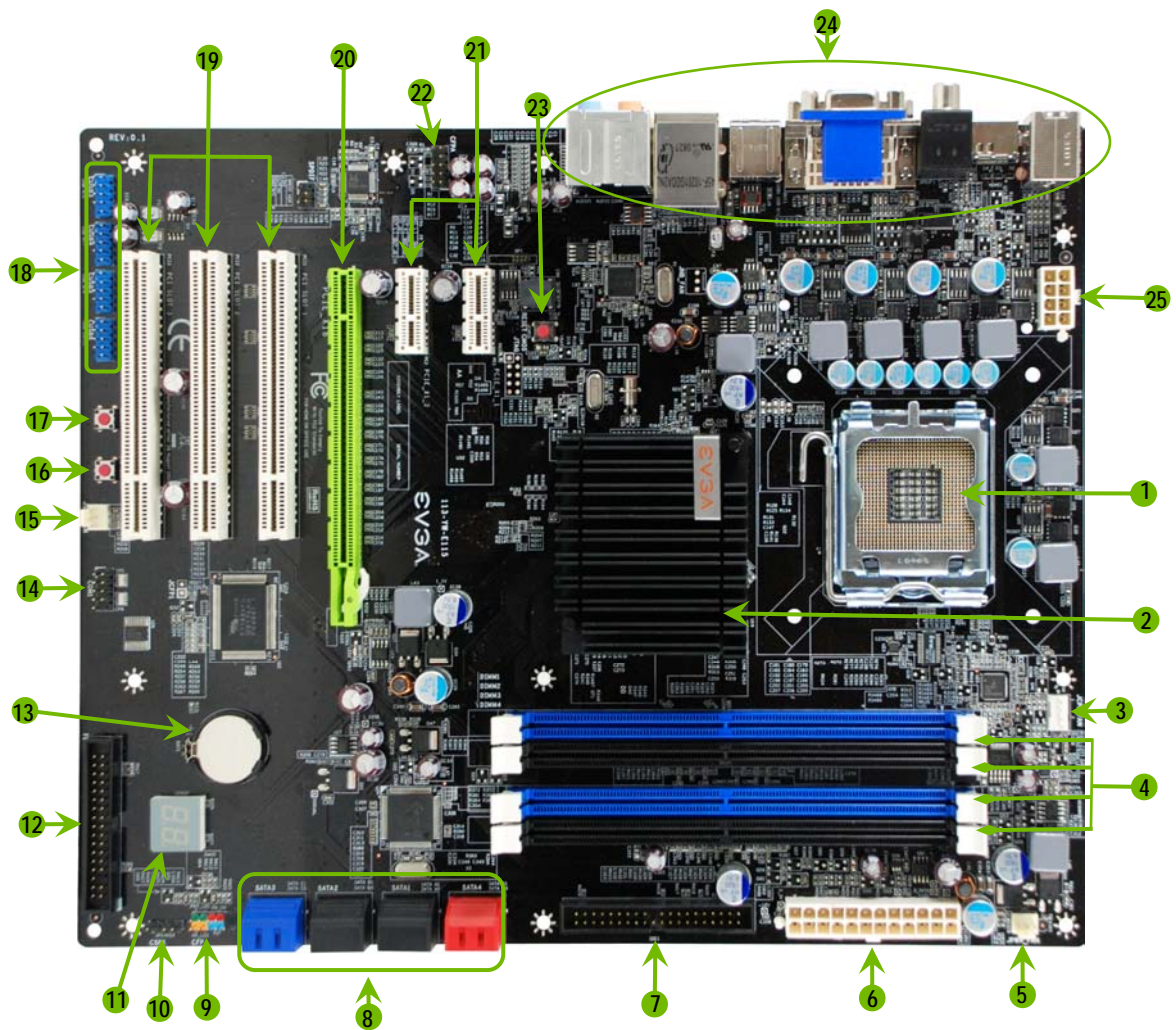


1. CPU Socket – LGA 775	11. Diagnostic Code Display	21. PCI Express x1 Slot
2. NVIDIA SPP (with passive heat sink)	12. FDD Connector	22. Front Panel Audio Connector
3. CPU Fan Connector	13. Motherboard Battery	23. Clear CMOS Button
4. DDR2 DIMM Slots 1 - 4	14. Serial Port Connector	24. Back Panel Connectors (Figure 2)
5. Power Fan Connector	15. System Fan Connector	25. 8-pin ATX_12V Power Connector
6. 24-pin ATX Power Connector	16. Power Button	
7. IDE Connector	17. RESET Button	
8. Serial-ATA (SATA) Connectors	18. USB Headers	
9. Front Panel Connector	19. PCI Slots	
10. Speaker Connector	20. PCI Express x16 Slot	

Figure 1. EVGA nForce 730i Motherboard Layout

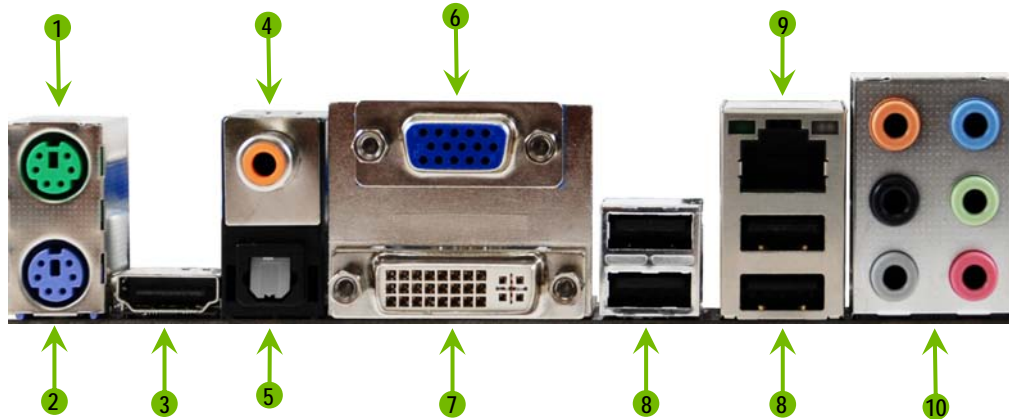

1. PS/2 Mouse Port
2. PS/2 Keyboard Port
3. HDMI Port
4. Coaxial SPDIF output
5. Optical SPDIF output
6. VGA Port
7. DVI-D Port
8. USB 2.0 Ports (Four)
9. LAN Port with LEDs to indicate status:

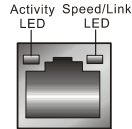

Activity LED Status	Description
Off	No data transmission
Blinking (Green)	Data transmission

Speed/Link LED Status	Description
Yellow	1000 Mbps data rate
Green	100 Mbps data rate
Off	10 Mbps data rate

10. Audio Port	2-Channel	6-Channel	8-Channel
Blue	Line-In	Line-In	Line-In
Green	Line-Out	Front Speaker Out	Front Speaker Out
Pink	Mic In	Mic In	Mic In
Orange		Center/Subwoofer	Center/Subwoofer
Black		Rear Speaker Out	Rear Speaker Out
Grey			Side Speaker Out

Figure 2. Chassis Back Panel Connectors

Hardware Installation

This section will guide you through the installation of the motherboard. The topics covered in this section are:

- ❑ Preparing the motherboard
 - Installing the CPU
 - Installing the CPU fan
 - Installing the memory
- ❑ Installing the motherboard
- ❑ Connecting cables and setting switches

Safety Instructions

To reduce the risk of fire, electric shock, and injury, always follow basic safety precautions.

Remember to remove power from your computer by disconnecting the AC main source before removing or installing any equipment from/to the computer chassis.

Preparing the Motherboard

Installing the CPU

Be very careful when handling the CPU. Make sure not to bend or break any pins in the socket. Hold the processor only by the edges and do not touch the bottom of the processor.

Use the following procedure to install the CPU onto the motherboard.

1. Unhook the socket lever by pushing *down* and *away* from the socket.
2. Lift the load plate. There is a protective socket cover on the load plate to protect the socket when there is no CPU installed.
3. Remove the protective socket cover from the load plate.
4. Remove the processor from its protective cover, making sure you hold it only by the edges. It is a good idea to save the cover so that whenever you remove the CPU, you have a safe place to store it.
5. Align the notches in the processor with the notches on the socket.
6. Lower the processor straight down into the socket with out tilting or sliding it into the socket.



Align notches with notches on the CPU

Note: Make sure the CPU is fully seated and level in the socket.

7. Close the load plate over the CPU and press down while you close and engage the socket lever.



Installing the CPU Fan

There are many different fan types that can be used with this motherboard. Follow the instruction that came with you fan assembly. Be sure that the fan orientation is correct for your chassis type and your fan assembly.

Installing System Memory (DIMMs)

Your new motherboard has four 240-pin slots for DDR2-800 memory. These slots support 256 MB, 512 MB, 1 GB, and 2Gb DDR2. There must be at least one memory bank populated to ensure normal operation. Use the following the recommendations for installing memory. (See Figure 1 on page 6 for the location of the memory slots.)

❑ **One DIMM:**


Install into slot 1. You can install the DIMM into any slot, however, slot 1 is preferred.

❑ **Two DIMMs:**

Install into either slots 1 and 3 or 2 and 4. The four DIMM sockets are divided into two colors to help you identify the channel pairs. To obtain best performance, simply mount DIMM sockets of the same color.

❑ **Four DIMMs:**

Install into slots 1, 2, 3, and 4.

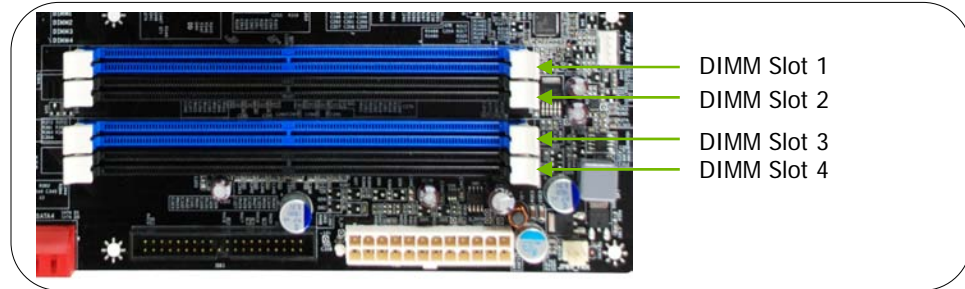

Use the following procedure to install memory DIMMs. Note that there is only one gap near the center of the DIMM slot. This slot matches the slot on the memory DIMM to ensure the component is installed properly.

1. Unlock a DIMM slot by pressing the module clips outward.
2. Align the memory module to the DIMM slot and insert the module vertically while applying light downward pressure to properly seat the DIMM. The plastic clips at both sides of the DIMM slot automatically lock the DIMM into the connector.

Installing the Motherboard

The sequence of installing the motherboard into the chassis depends on the chassis you are using and if you are replacing an existing motherboard or working with an empty chassis. Determine if it would be easier to make all the connections prior to this step or to secure the motherboard and then make all the connections. It is normally easier to secure the motherboard first.

Use the following procedure to install the I/O shield and secure the motherboard into the chassis.

Note: Be sure that the CPU fan assembly has enough clearance for the chassis covers to lock into place and for the expansion cards. Also make sure the CPU Fan assembly is aligned with the vents on the covers.

Installing the I/O Shield

The motherboard kit comes with an I/O shield that is used to block radio frequency transmissions, protects internal components from dust and foreign objects, and promotes correct airflow within the chassis.

Before installing the motherboard, install the I/O shield from the *inside* of the chassis. Press the I/O shield into place and make sure it fits securely. If the I/O shield does not fit into the chassis, you would need to obtain the proper size from the chassis supplier.

Securing the Motherboard into a System Case

Most computer cases have a base with mounting studs or spacers to allow the mother board to be secured to the chassis and help to prevent short circuits. If there are studs that do not align with a mounting hole on the motherboard, it is recommended that you remove that stud to prevent the possibility of a short circuit. In most cases, it is recommended to secure the motherboard using a minimum of nine (9) spacers.

1. Carefully place the motherboard onto the studs/spacers located inside the chassis.
2. Align the mounting holes with the studs/spacers.
3. Align the connectors to the I/O shield.
4. Ensure that the fan assembly is aligned with the chassis vents according to the fan assembly instruction.
5. Secure the motherboard with a minimum of eight-to-ten screws.

Connecting Cables and Setting Switches

This section takes you through all the connections and switch settings necessary on the motherboard. This will include:

- ❑ Power Connections
 - 24-pin ATX power (**PW1**)
 - 8-pin ATX 12V power (**PW12**)
- ❑ Internal Headers
 - Front panel
 - Speaker
 - USB Headers
 - Audio
 - COM
- ❑ FDD
- ❑ IDE
- ❑ Serial ATA II
- ❑ Chassis Fans
- ❑ Expansion slots
- ❑ CMOS Clear Button

See Figure 1 on page 6 to locate the connectors and Button referenced in the following procedure.

24-pin ATX Power (PW1)

PW1 is the main power supply connector located along the edge of the board next to the DIMM slots. Make sure that the power supply cable and pins are properly aligned with the connector on the motherboard. Firmly plug the power supply cable into the connector and make sure it is secure.



PW1 connector
Plug power cable from system power supply to PW1

Card edge


Figure 2. PW1 Motherboard Connector

Table 1. PW1 Pin Assignments

Connector	Pin	Signal	Pin	Signal
	1	+3.3V	13	+3.3V
	2	+3.3V	14	-12V
	3	GND	15	GND
	4	+5V	16	PS_ON
	5	GND	17	GND
	6	+5V	18	GND
	7	GND	19	GND
	8	PWROK	20	RSVD
	9	+5V_AUX	21	+5V
	10	+12V	22	+5V
	11	+12V	23	+5V
	12	+3.3V	24	GND

8-pin ATX 12V Power (PW12)

PW12, the 8-pin ATX 12V power connection, is used to provide power to the CPU. Align the pins to the connector and press firmly until seated.

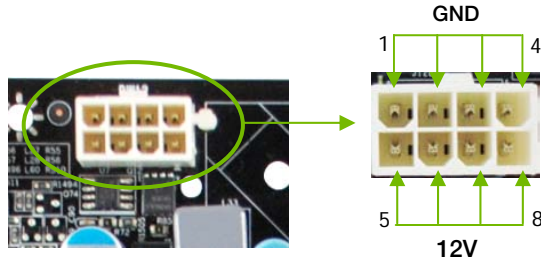


Connecting IDE Hard Disk Drives

The IDE connector supports Ultra ATA 133/100/66 IDE hard disk drives.

1. Connect the blue connector (the cable end with a single connector) to the motherboard.
2. Connect the black connector (the cable with the two closely spaced black and gray connectors) to the Ultra ATA master device.
3. Connect the gray connector to a slave device.

If you install two hard disk drives, you must configure the second drive as a slave device by setting its jumper accordingly. Refer to the hard disk documentation for the jumper settings.



Note: If an ATA-66/100 disk drive and a disk drive using any other IDE transfer protocol are attached to the same cable, the maximum transfer rate between the drives may be reduced to that of the slowest drive.

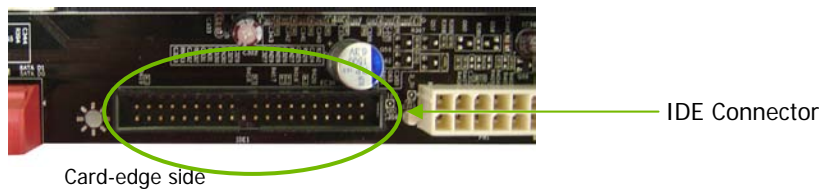

Connecting Serial ATA Cables

The Serial ATA II connector is used to connect the Serial ATA II device to the motherboard. These connectors support the thin Serial ATA II cables for primary storage devices. The current Serial ATA II interface allows up to 300MB/s data transfer rate.

There are eight (8) serial ATA II connectors on the motherboard. SATA ports 1 through 3 support RAID 0, RAID 1, RAID 5, RAID 0+1 and JBOD configurations. The SATA 4 port uses the JMicron JMB363 and only supports RAID 0, RAID 1.

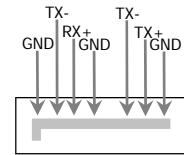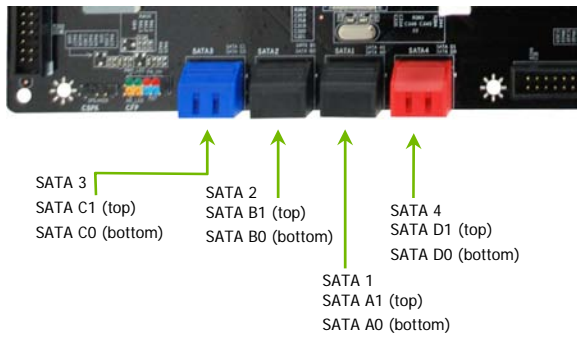

Connect the locking cable end to the motherboard connector.
Connect the end without the lock to the drive.

Note: The SATA3 port only supports AHCI and RAID mode. It does not support IDE mode.



Connecting Internal Headers


Front Panel Header

The front panel header on this motherboard is one connector used to connect the following four cables.

(see Table 2 for pin definitions):

PWRLED

Attach the front panel power LED cable to these two pins of the connector. The Power LED indicates the system's status. When the system is turn on status, the LED is on. When the system is turn off status, the LED is off. When the system is in S1, S1, S3, S4 status, the LED is blink.

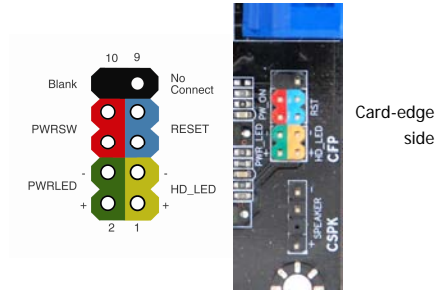

Some chassis do not have all four cables. Be sure to match the name on the connectors to the corresponding pins.

PWRSW

Attach the power button cable from the case to these two pins. Pressing the power button on the front panel turns the system on and off rather than using the power supply button.

HD_LED

Attach the hard disk drive indicator LED cable to these two pins. The HDD indicator LED indicates the activity status of the hard disks.

RESET

Attach the Reset switch cable from the front panel of the case to these two pins. The system restarts when the **RESET** switch is pressed.

Table 2. Front Panel Header Pins

	Pin	Signal
HD_LED	1	HD_PWR
	3	HD Active
PWRLED	2	PWR LED
	4	STBY LED
RESET	5	Ground
	7	RST BTN
PWRSW	6	PWR BTN
	8	Ground
No Connect	9	+5V
Empty	10	Empty


USB Headers


This motherboard contains four (4) USB 2.0 ports that are exposed on the rear panel of the chassis (Figure 2). The motherboard also contains four 10-pin internal header connectors onboard that can be used to connect an optional external bracket containing eight (8) more USB2.0 ports.

1. Secure the bracket to either the front or rear panel of your chassis (not all chassis are equipped with the front panel option).
2. Connect the two ends of the cables to the USB 2.0 headers on the motherboard.



Table 3. USB 2.0 Header Pins

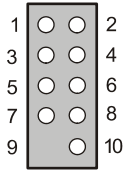
Connector	Pin	Signal
USB 2.0 Header 	1	5V_DUAL
	3	Data-
	5	Data+
	7	GND
	9	Empty
	Pin	Signal
	2	5V_DUAL
	4	Data-
	6	Data+
	8	GND
10	No Connect	

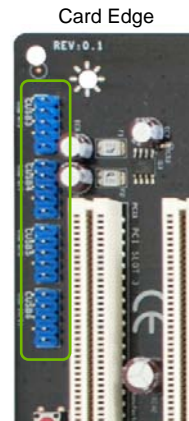


Audio

The audio connector supports HD audio standard and provides two kinds of audio output choices: the Front Audio, the Rear Audio. The front Audio supports re-tasking function.

Table 4. Front Audio Connector

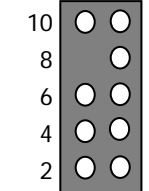
Connector	Pin	Signal
Front Audio Connector 	1	PORT1_L
	2	AUD_GND
	3	PORT1_R
	4	PRECENCE_J
	5	PORT2_R
	6	SENSE1_RETURN
	7	SENSE_SEND
	8	Empty
	9	PORT2_L
	10	SENSE2_RETURN

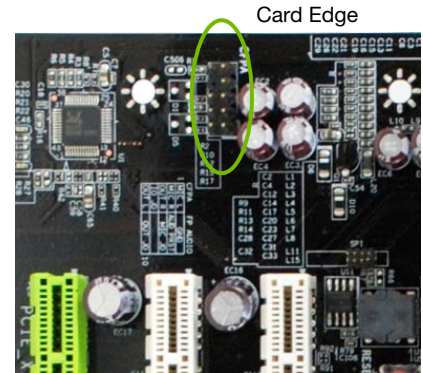


SPK Header

The speaker header is connects to the case's speaker for PC beeps.

Table 5. CSPK Header Pins

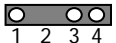
Connector	Pin	Signal
Speaker Header 	1	VCC
	2	Empty
	3	GND
	4	Speaker

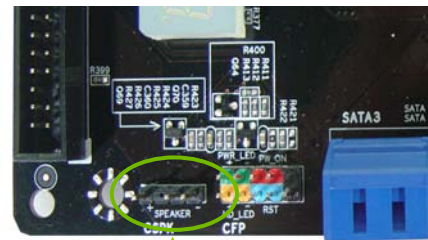

Speaker Header

Fan Connections

There are three fan connections on the motherboard. The fan speed can be detected and viewed in the **PC Health Status** section of the CMOS Setup. The fans are automatically turned off after the system enters S3, S4 and S5 mode.

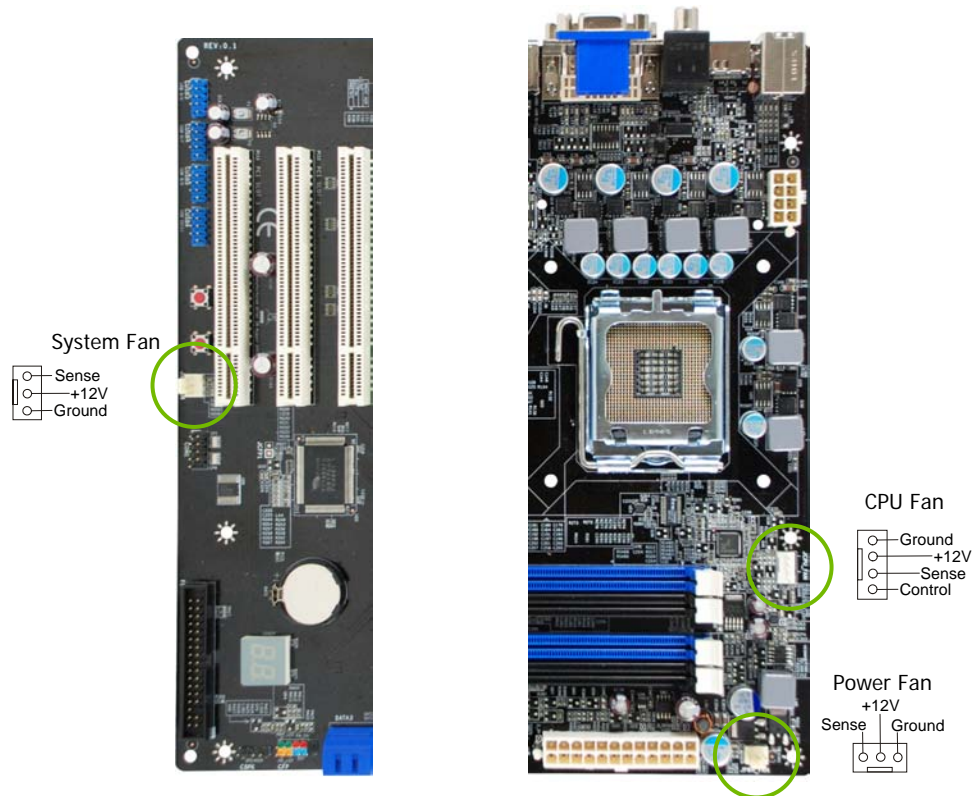

Note: The CPU fan cable can be either a 3-pin or a 4-pin connector. Connect a 3-pin connector to pins 1, 2, and 3 on the motherboard connector.

COM1


The motherboard kit provides an additional serial COM header for your machine. Connect one side of a switching cable to the header and then attach the serial COM device to the other side of the cable.

FDD Connector

The motherboard supports a standard 360K, 720K, 1.2M, 1.44m, and a 2.88M floppy disk drive (FDD).

Expansion Slots

This motherboard contains six expansion slots, three PCI Express slots and three PCI slots. For a full list of PCI Express x16 graphics card supported by this motherboard, go to www.nvidia.com/estore.

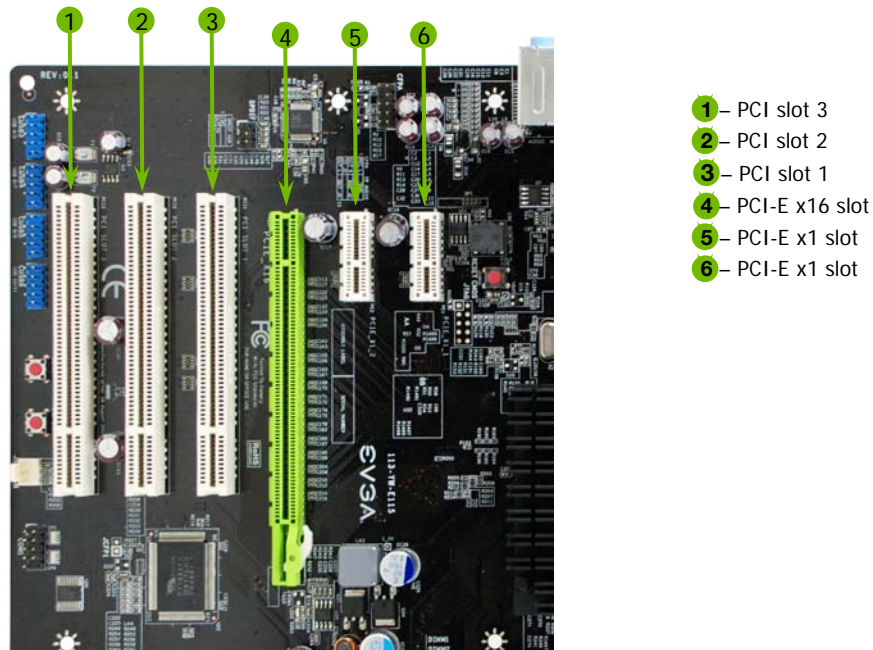

PCI Slots

The three PCI slots support many expansion cards such as a LAN card, USB card, SCSI card and other cards that comply with PCI specifications. When installing a card into the PCI slot, be sure that it is fully seated. Secure the card's metal bracket to the chassis back panel with the screw used to hold the blank cover.

PCI Express x1 Slots

There are two PCI Express x1 slots that are designed to accommodate less bandwidth-intensive cards, such as a modem or LAN card. The x1 slots provide 250 MB/sec bandwidth.

PCI Express x16 Slot

The PCI Express x16 slot is reserved for graphic or video cards. The bandwidth of the x16 slot is up to 4GB/sec (8GB/sec concurrent).


When installing a PCI Express x16 card, be sure the retention clip snaps and locks the card into place. If the card is not seated properly, it could cause a short across the pins. Secure the card's metal bracket to the chassis back panel with the screw used to hold the blank cover.

Onboard Buttons

The onboard buttons include RESET, POWER and CMOS. The functions allow you turn on/off and easily and conveniently clear the CMOS.


Clear CMOS Button

The motherboard uses the CMOS RAM to store all the set parameters within the system BIOS. The CMOS can be cleared by press the RESET CMOS button.

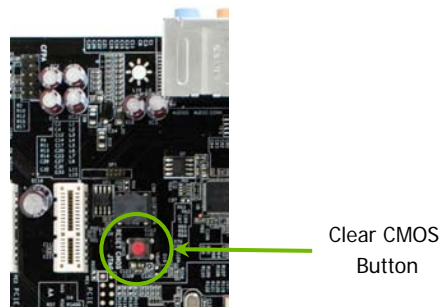

RESET and POWER Button


These onboard buttons allow you to easily turn the system ON or OFF. It is especially convenient for debugging or testing the system.

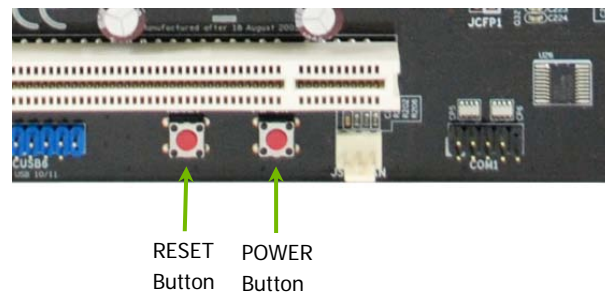

Post Port Debug LED and LED Status Indicators

Post Port Debug LED


Provides two-digit POST codes to show why the system may be failing to boot. The LED will also display the CPU temperature after entering the O/S.

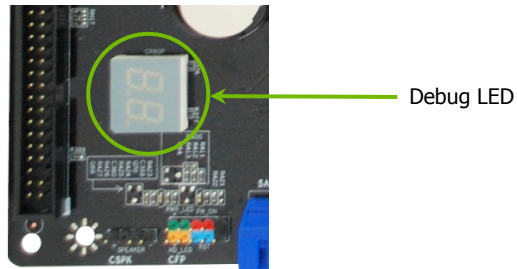

LED Status Indicators

These LEDs indicate the system's status.

- ❑ DIMM LED (LED1):
This LED to show the power status of Memory.
- ❑ CHIPSET LED (LED2):
This LED to show the power status of Chipset.
- ❑ CPU LED (LED3):
This LED to show the power status of CPU.

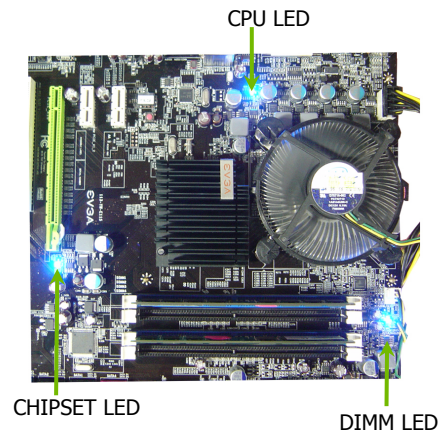

Configuring the BIOS

This section discusses how to change the system settings through the BIOS Setup menus. Detailed descriptions of the BIOS parameters are also provided.

This section includes the following information:

- Enter BIOS Setup
- Main Menu
- Standard CMOS Features
- Advanced BIOS Features
- Advanced Chipset Features
- Integrated Peripherals
- Power Management Setup
- PnP/PCI Configurations
- PC Health Status
- Frequency/Voltage Control

Enter BIOS Setup

The BIOS is the communication bridge between hardware and software. Correctly setting the BIOS parameters is critical to maintain optimal system performance.

Use the following procedure to verify/change BIOS settings.

1. Power on the computer.
2. Press the **Del** key when the following message briefly displays at the bottom of the screen during the Power On Self Test (POST).

Press F1 to continue, DEL to enter Setup.

Pressing **Del** takes you to the Phoenix-Award BIOS CMOS Setup Utility.

It is *strongly* recommended that you do not change the default BIOS settings. Changing some settings could damage your computer.

Main Menu

The main menu allows you to select from the list of setup functions and two exit choices. Use the **Page Up** and **Page Down** keys to scroll through the options or press **Enter** to display the associated submenu. Use the **↑↓** arrow keys to position the selector in the option you choose. To go back to the previous menu, press **Esc**.

Note that on the BIOS screens all data in **white** is for information only, data in **yellow** is changeable, data in **blue** is non-changeable, and data in a **red box** is highlighted for selection.

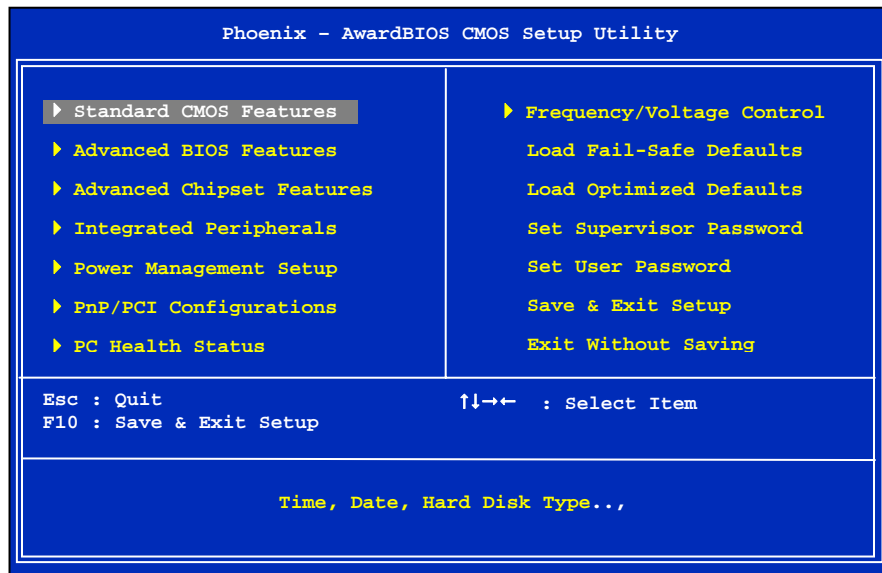


Figure 3. BIOS CMOS Setup Utility Main Menu

- Standard CMOS Features**
 Use this menu to set up the basic system configuration.
- Advanced BIOS Features**
 Use this menu to set up the advanced system features and boot sequence.
- Advanced Chipset Features**
 Use this menu to optimize system performance and configure clocks, voltages, memory timings, and more.
- Integrated Peripherals**
 Use this menu to set up onboard peripherals such as IDE, RAID, USB, LAN, and MAC control.
- Power Management Setup**
 Use this menu to configure power management, power on, and sleep features.
- PnP/PCI Configurations**
 Use this menu to modify the system's Plug-and-Play and PCI configurations.

PC Health Status

Use this menu to monitor the real-time system status of your PC, including temperature, voltages, and fan speed.

The following items on the CMOS Setup Utility main menu are commands rather than submenus:

Load Fail-Safe Defaults

Load Fail-Safe defaults system settings.

Load Optimized Defaults

Load Optimized defaults system settings.

Set Supervisor Password/Set User Password

Use this command to set, change, and disable the password used to access the BIOS menu.

Save & Exit Setup

Use this command to save settings to CMOS and exit setup.

Exit Without Saving

Use this command to abandon all setting changes and exit setup.

Standard CMOS Features Menu

The Standard CMOS Features menu is used to configure the standard CMOS information, such as the date, time, HDD model, and so on. Use the **Page Up** and **Page Down** keys to scroll through the options or press **Enter** to display the sub-menu. Use the **↑↓** arrow keys to position the selector in the option you choose. To go back to the previous menu, press **Esc**.

The information shown in **Item Help** corresponds to the option highlighted.

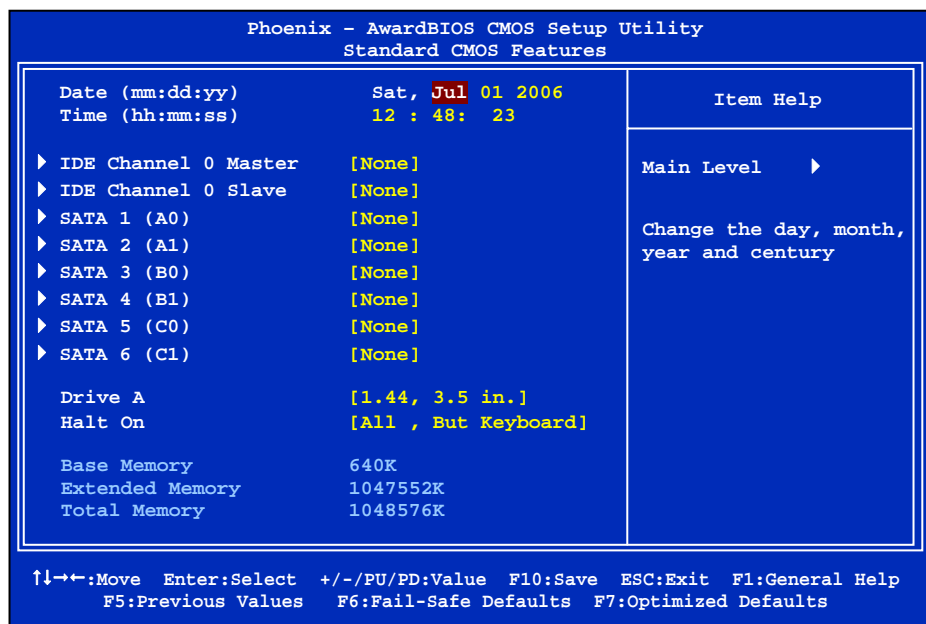


Figure 4. Standard CMOS Features Menu

Note that all data in **white** is for information only, data in **yellow** is changeable, data in **blue** is non-changeable, and data in a **red box** is highlighted for selection.


Date and Time

Using the arrow keys, position the cursor over the month, day, and year. Use the **Page Up** and **Page Down** keys to scroll through dates and times. Note that the weekday (Sun through Sat) cannot be changed. This field changes to correspond to the date you enter. Note that the hour value is shown in a 24-hour clock format. Time is represented as **hour : minute : second**.

```
Date (mm:dd:yy)      Sat, Jul 01 2006
Time (hh:mm:ss)     14 : 48 : 43
```

SATA Channel

Use these functions to detect and configure the SATA channels. Select a channel and press **Enter** to display the SATA sub-menu.

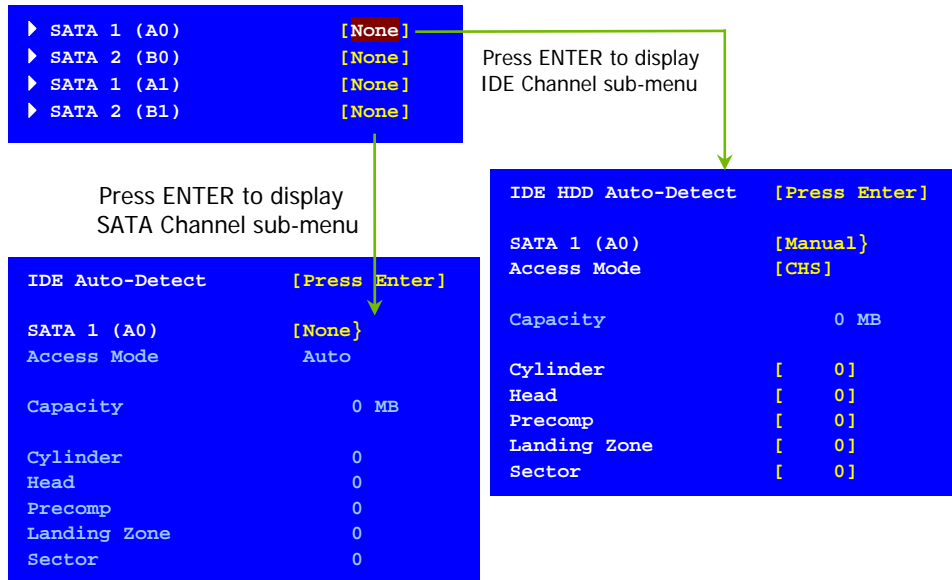

Press **Enter** to auto-detect SATA channels in the system. Once the channel is detected, the values for Capacity, Cylinder, Heads, Precomp, Landing Zone, and Sector are automatically filled in.

❑ **None**


There is no HDD installed or set.

❑ **Auto**

The system can auto-detect the hard disk when booting up.

❑ **Manual**

When you set the channel to **[Manual]** and change **Access Mode** to **[CHS]**, you can then enter the number of cylinders, heads, Precomp, landing zone, and sector. You can manually enter the values or you can press **Enter** to display a window that tells you the min and max values.

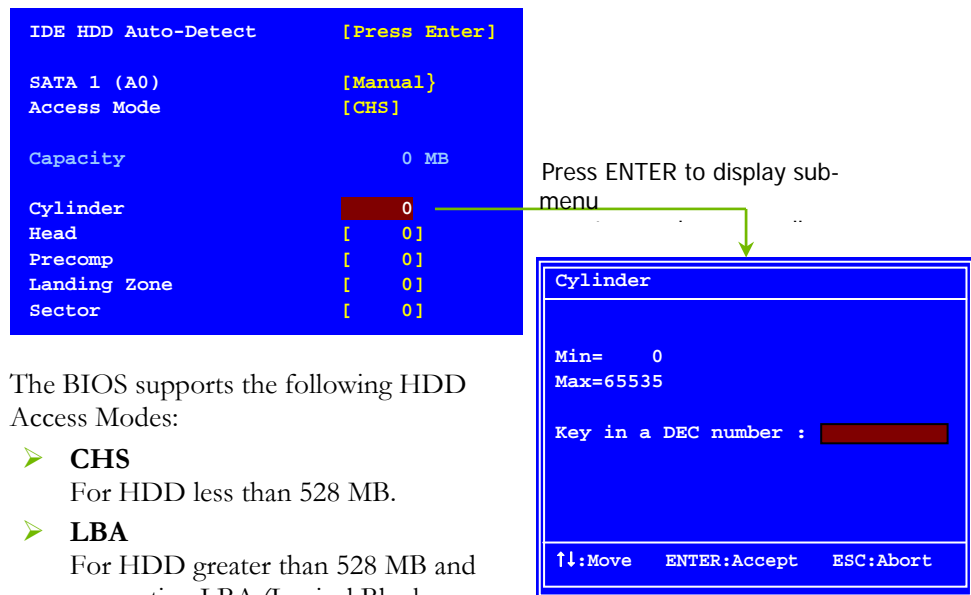

The BIOS supports the following HDD Access Modes:

- **CHS**
For HDD less than 528 MB.
- **LBA**
For HDD greater than 528 MB and supporting LBA (Logical Block Addressing).
- **Large**
For HDD greater than 528 MB but not supporting LBA.
- **Auto**
Recommended mode.

Drive A


The **Drive A** option allows you to select the kind of FDD to install.
Options are:

Drive A [1.44, 3.5 in.]
Halt On [All , But Keyboard]

Press ENTER to display sub-menu

- None
- 360K, 5.25 in.
- 1.2M, 5.25 in.
- 720K, 3.5 in.
- 1.44M, 3.5 in.
- 2.88M, 3.5 in.

Use the **Page Up** and **Page Down** keys to scroll through the options or press **Enter** to display the sub-menu. Use the **↑↓** arrow keys to position the selector in the option you choose. Press **Enter** to accept the changes and return to the Standard CMOS Features menu.

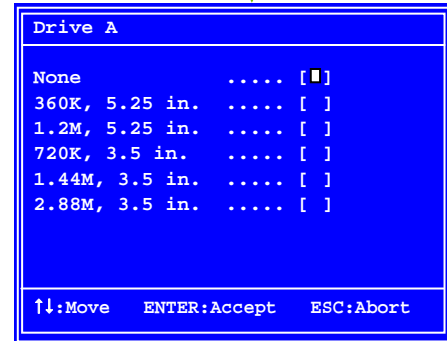


Halt On

Halt On determines whether or not the computer stops if an error is detected during power on. Use the **Page Up** and **Page Down** keys to scroll through the options or press **Enter** to display the **Halt On** sub-menu. Use the **↑↓** arrow keys to position the selector in the option you choose. Press **Enter** to accept the changes and return to the Standard CMOS Features menu.

Drive A [1.44, 3.5 in.]
Halt On [All , But Keyboard]

Press ENTER to display sub-menu

- All Errors**
Whenever the BIOS detects a nonfatal error, the system stops and prompts you.

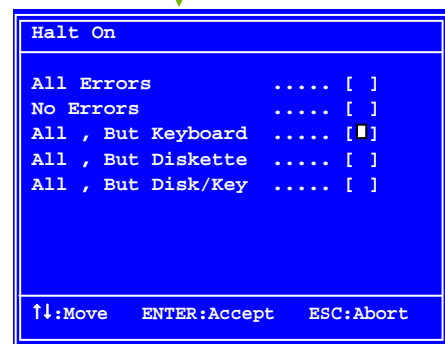

- ❑ **No Errors**
System boot does not stop for any detected errors.
- ❑ **All, But Keyboard**
System boot does not stop for keyboard errors, but does stop for all other errors.
- ❑ **All, But Diskette**
The system boot does not stop for a diskette error but will stop for all other errors.
- ❑ **All, But Disk/Key**
The system boot does not stop for a keyboard or disk error, but will stop for all other errors.

Memory

These settings are *display-only values* that are determined by the BIOS POST (Power-On Self Test).

Base Memory	640K
Extended Memory	1047552K
Total Memory	1048576K

- ❑ **Base Memory**
BIOS POST determines the amount of base (or conventional) memory installed in the system.
- ❑ **Extended Memory**
BIOS determines how much extended memory is present during the POST.
- ❑ **Total Memory**
This value represents the total memory of the system.

Advanced BIOS Features Menu

Access the Advanced BIOS Features menu from the CMOS Utility Setup screen. Use the **Page Up** and **Page Down** keys to scroll through the options or press **Enter** to display the sub-menu. Use the **↑↓** arrow keys to position the selector in the option you choose. To go back to the previous menu, press **Esc**.

The options that have associated sub-menus are designated by a **▶**, which precedes the option. Press **Enter** to display the sub-menus.

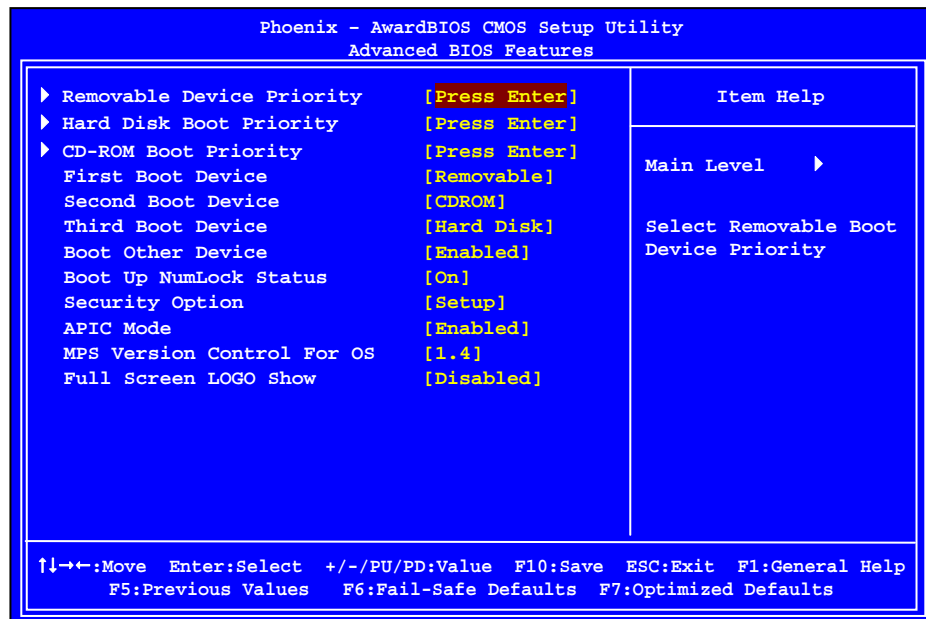


Figure 5. Advanced BIOS Features Menu

Note that all data in **white** is for information only, data in **yellow** is changeable, data in **blue** is non-changeable, and data in a **red box** is highlighted for selection.

Removable Device Priority

Use this option to select the priority for removable device startup. Press **Enter** to see the list of removable devices in your system. Use the **↑↓** arrow keys to go to the various devices. Then use the **+** or **-** keys to move the device priority up or down in the list. To go back to the previous menu, press **Esc**.

1. Floppy Disks

Hard Disk Boot Priority

Use this option to select the priority for HDD startup. Press **Enter** to see the list of bootable devices in your system. Use the **↑↓** arrow keys to go to the various devices. Then use the **+** or **-** keys to move the device priority up or down in the list. To go back to the previous menu, press **Esc**.

1. Ch0. : ST3802110A
2. Bootable Add-in Cards

Use the **+** and **-** keys to move the priority of the device within

CD-ROM Boot Priority


Use this option to select the priority for CD-ROM startup. Select **CD-ROM Boot Priority** and press **Enter** to view available networks. Use the **↑↓** arrow keys to go to the various devices. Then use the **+** or **-** keys to move the device priority up or down in the list. To go back to the previous menu, press **Esc**.

1. Ch0 M. : BENQ DVD DC DW1810

First/Second/Third Boot Device

Use this option to set the priority sequence of the devices booted at power on. Use the **Page Up** and **Page Down** keys to scroll through the options or press

Enter to display the sub-menu. Use the **↑↓** arrow keys to position the selector in the option you choose.

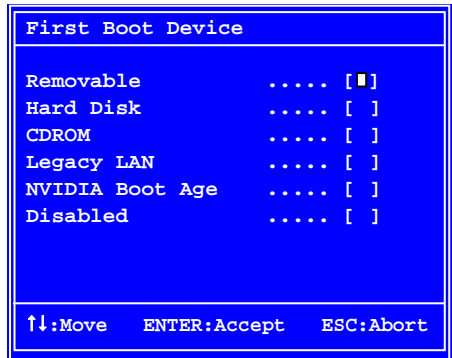

Boot Other Device

With the option set to **Enable**, the system boots from some other device if the first/second/third boot devices fail.

Boot Up NumLock Status

This option allows you to select the power-on state of **NumLock**. Select **On** to activate the keyboard **NumLock** when the system is started. Select **Off** to disable the **NumLock** key.

Security Option

The Security Options allows you to require a password every time the system boots or only when you enter setup. Select **Setup** to require a password to gain access to the CMOS Setup screen. Select **System** to require a password to access the CMOS Setup screen and when the system boots.

APIC Mode

Use this function to enable or disable the Advanced Programmable Interrupt Controller (APIC). If you disable this option, you also disable the MPS Version Control for OS option.

MPS Version Control For OS

Use this function to select the Multi-Processor Specification (MPS) version that BIOS passes to the operating system. Use the **Page Up** and **Page Down** keys to scroll through the options.

Full Screen LOGO Show

This option allows you to enable or disable the display of the full-screen logo when the system boots. Use the **Page Up** and **Page Down** keys to toggle between **Enable** and **Disable**

Advanced Chipset Features Menu

Select **Advanced Chipset Features** from the CMOS Setup Utility menu and press **Enter** to display the functions of the Advanced Chipset Functions menu.

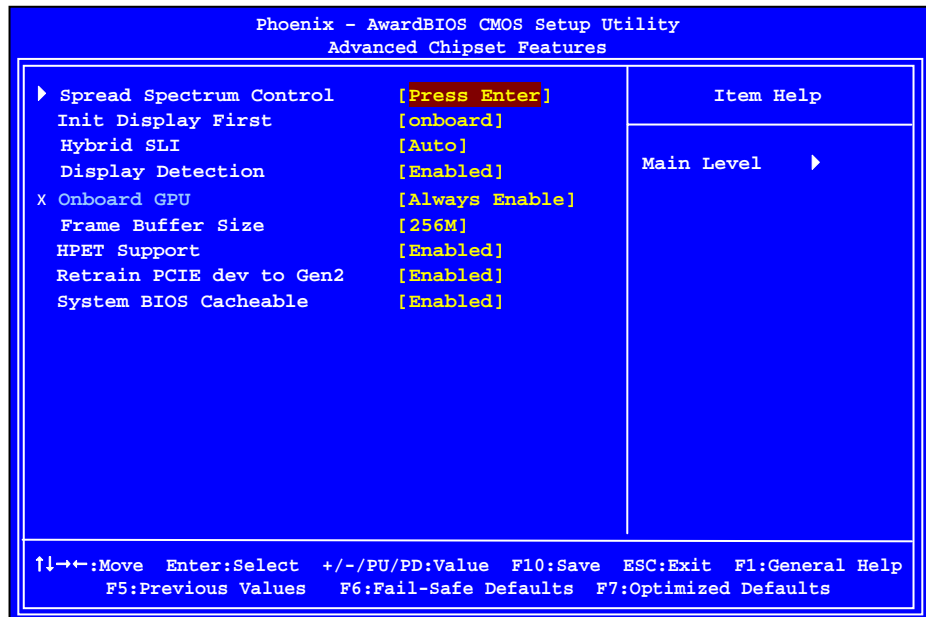


Figure 6. Advanced Chipset Features

Spread Spectrum Control

Press **Enter** to display the Spread Spectrum Control menu.

```
CPU Spread Spectrum      [Disabled]
SATA Spread Spectrum     [Disabled]
PCIE Spread Spectrum     [Disabled]
iGPU Spread Spectrum     [Disabled]
```

CPU Spread Spectrum

This option reduces the EMI generated by the CPU. Options are Disabled and Enabled.

SATA Spread Spectrum

This option reduces the EMI generated by the S-ATA. Options are Disabled and Triangular Down.

PCIE Spread Spectrum

This option reduces the EMI generated by the PCI-E. Options are Disabled and Triangular Down.

iGPU Spread Spectrum

This option reduces the EMI generated by the iGPU. Options are Disabled, 1.00% Tri-Center, 2.00% Tri-Center and [3.00% Tri-Center].

Init Display First

This item is used to select the display device priority. The options are onboard, PCI Slot and PCIEx. If you use Hybrid SLI card, the PCI Slot option not appear.

Hybrid SLI

This item allows you set the Hybrid SLI function if you install a Hybrid SLI card. The options are Auto and Disabled.

Display Detection

This item enabling will cause System BIOS to search for monitor connected if boot prefer (BGPU) does not have monitor connected. The options are Enabled and Disabled

Onboard GPU

This item allows you to set the onboard GPU. Select the **[Enable If No Ext GPU]** to enable the onboard GPU, if the system no detects any external graphics card. Select the **[Always Enable]** to always enable the onboard GPU.

Frame Buffer Size

When you set the iGPU Frame Buffer Control item to **[Manual]** then allows you to set frame buffer size for onboard GPU. The options are 16M, 32M, 64M, 128M, 256M, 512M and Disabled. If you install a Hybrid SLI card, the options are 256M and 512M.

HPET Support

This function allows you to enable or disable the High Precision Even Timer (HPET). When Enabled, HPET is used as the timing hardware for multimedia and other time-sensitive application. When HPET is Disabled, the APIC timer is used.

Retrain PCIE dev to Gen2

By default all capable devices populated in PCIE slots will be retrained to Gen2 speed. This can be disabled (to force Gen1 only). The options are Disabled and Enabled.

System BIOS Cacheable

This function allows you to enable or disable caching the system BIOS.

Integrated Peripherals Menu

Select **Integrated Peripherals** from the CMOS Setup Utility menu and press **Enter** to display the Integrated Peripherals menu.


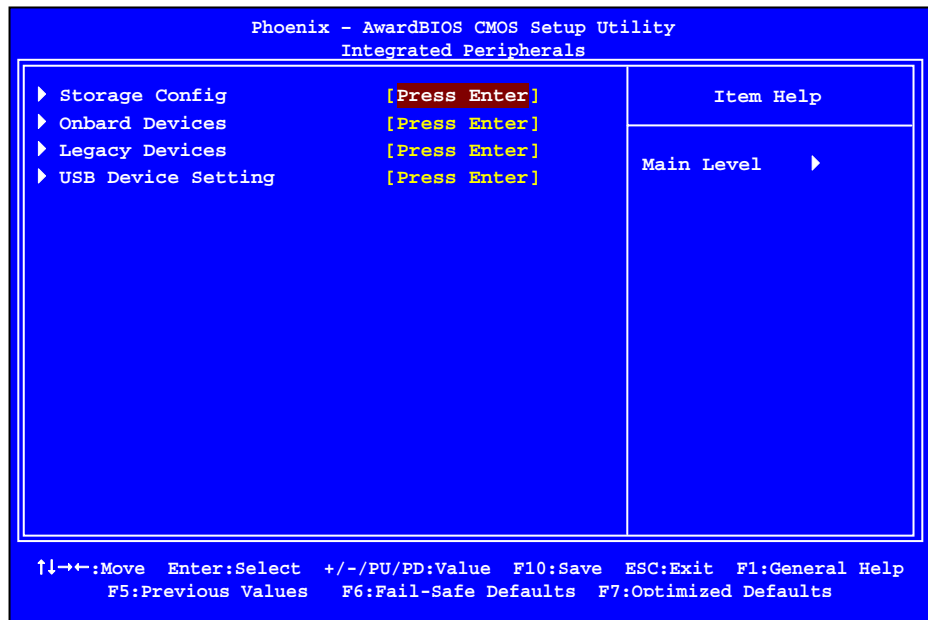


Figure 7. Integrated Peripherals Menu

Storage Config

Press **Enter** to display the Storage Config menu.

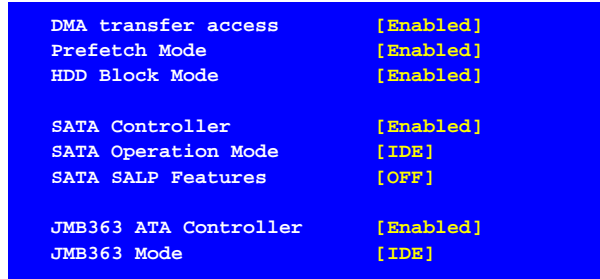

DMA transfer access	[Enabled]
Prefetch Mode	[Enabled]
HDD Block Mode	[Enabled]
SATA Controller	[Enabled]
SATA Operation Mode	[IDE]
SATA SALP Features	[OFF]
JMB363 ATA Controller	[Enabled]
JMB363 Mode	[IDE]

- DMA transfer access**
Use this function to enable or disable DMA transfer access.
- Prefetch Mode**
Use this function to enable or disable the **Prefetch mode**.
- HDD Block Mode**
Using this function on the Integrated Peripherals menu allows your hard drive needs to support block mode. Select **[Enabled]** to automatically detect the optimal number of block read/writes per sector the drive can support. Select **[Disabled]** if your drive does not support block mode.
- SATA Controller**
This function allows you to enable specific SATA controllers, enable all controllers, or disable all controllers.
- SATA Operation Mode**
This is allows you set the onboard Serial SATA mode.
 - **IDE:** Use the Serial ATA hard disk drivers as Parallel ATA storage devices.
 - **RAID:** Create a RAID 0, 1, 0+1, 5 and JBOD configuration.
 - **AHCI:** Use the AHCI (Advanced Host Controller Interface) to enables advanced SATA features for improved performance with NCQ and Hot-plug features
 - **Linux AHCI:** Use the function for Linux AHCI.

SATA SALP Features

This item allows you select the SATA SALP (Aggressive Link Power Management) status. The options are OFF, Partial, Slumber.

JMB363 ATA Controller

This function allows you to enable SATA controllers by JMicron JMB363 supported. The options are Enabled and Disabled.

JMB363 Mode

This is allows you set the Serial SATA mode by JMicron JMB363. The options are RAID, IDE and AHCI.

Onboard Devices

Press **Enter** to display the Onboard Devices menu.

```

HD Audio                [INT Codec + EXT Codec]
MAC Lan                 [Auto]
P80 Show CPU Temperature [Enabled]

```

HD Audio

This item allows you to enable or disable the hard disk audio function. Options are Disabled, Internal Codec, External Codec, INT Codec + EXT Codec

MAC Lan

Use this function to set the MAC LAN to **[Auto]** or disable this function.

P80 Show CPU Temperature

When this function is enabled the Post Port LED will display the CPU's current temperature. Options are Enabled and Disabled.

Legacy Devices

Press **Enter** to display the Legacy Devices menu.

```

Onboard FDC Controller  [Enabled]
Onboard Serial Port 1   [3F8/IRQ4]

```

Onboard FDC Controller


Select “Enabled” if you wish to use onboard floppy disk controller (FDC). If you install an external FDC or the system has no floppy drive, select “Disabled” in this field.

Onboard Serial Port 1

Select an address and corresponding interrupt for the first serial port. Options are [3F8/IRQ4], [2E8/IRQ3], [3E8/IRQ4], [Auto], and [Disabled].

USB Device Setting

Press **Enter** to display the USB Device Setting menu.

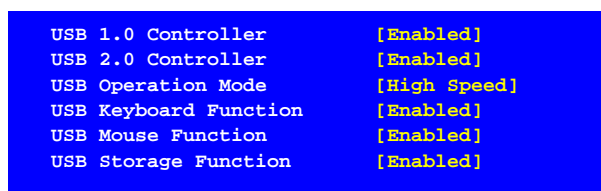

USB 1.0 Controller	[Enabled]
USB 2.0 Controller	[Enabled]
USB Operation Mode	[High Speed]
USB Keyboard Function	[Enabled]
USB Mouse Function	[Enabled]
USB Storage Function	[Enabled]

USB 1.0 Controller

Use this function to enable the USB 1.0 controller.

USB 2.0 Controller

Use this function to enable the USB 2.0 (EHCI) controller.

USB Operation Mode

Select the USB Operation Mode for USB device supports transfer rates. Options are Full/Low Speed and High Speed (480 Mbps).

USB Keyboard Function

Use this function to enable or disable support for USB keyboard under DOS.

USB Mouse Function

Use this function to enable or disable support for USB Mouse under DOS.

USB Storage Function

Use this function to enable or disable legacy support of USB Mass Storage.

Power Management Setup Menu

Select **Power Management Setup** from the CMOS Setup Utility menu and press **Enter** to display the Power Management Setup menu.

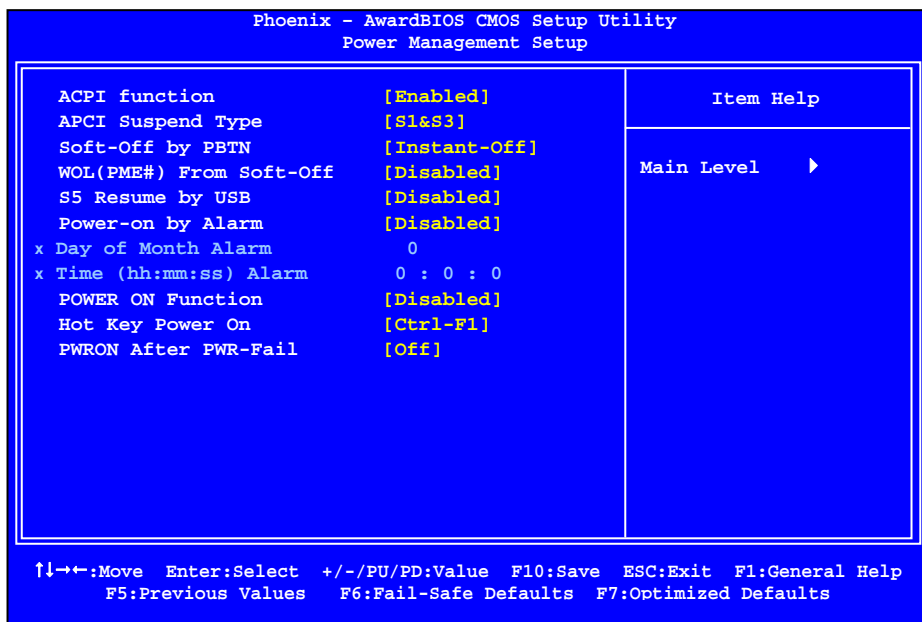


Figure 8. Power Management Setup Menu

ACPI Function

This function allows you to enable or disable the ACPI function.

ACPI Suspend Type

This function allows you to select an ACPI Suspend Type. Types to select from are [S1&S3], [S1(POS)], and [S3(STR)].

Soft-Off by PBNT

This function allows you to set Soft-Off by PBNT to [Instant-Off] or [Delay 4 Sec].

WOL(PME#) From Soft-Off

This function allows you to enable or disable WOL(PME#) from soft-off.

S5 Resume by USB

This function allows a USB device to wake-up the system from Soft-off state.

Power On by Alarm

This function allows you to enable or disable the Power-on by alarm function. Set to [Disable] to prevent power-on by alarm. When set to [Enable], you can manually put in the day of the month and the time of the alarm.

```
Power-on by Alarm      [Disabled]
Day of Month Alarm     [0]
Time (hh:mm:ss) Alarm [0 : 0 : 0]
```

To enter a day or time, use the **Page Up** and **Page Down** keys to scroll through numbers or enter the number using the keyboard number or the + and - keys.

POWER ON Function

This function allows you to define the power-on function by the key press activity. Options for this function are:

- Disabled
- Mouse
- Keyboard
- Both (Keyboard and Mouse)

Hot Key Power On

Use this function with the above “POWER ON Function” to set a combination of keys that can be used to power on the system. Options for this function are:

- Ctrl-Esc
- Ctrl-F1
- Ctrl-Space
- Anykey

PWRON After PWR-Fail

This function enables your computer to automatically restart or return to its last operating status after power returns from a power failure.

Off: The system stays off after a power failure.

On: The system stays on after a power failure

PnP/PCI Configuration Menu

Select **PnP/PCI Configuration** from the CMOS Setup Utility menu and press **Enter** to display the PnP/PCI Configuration menu.

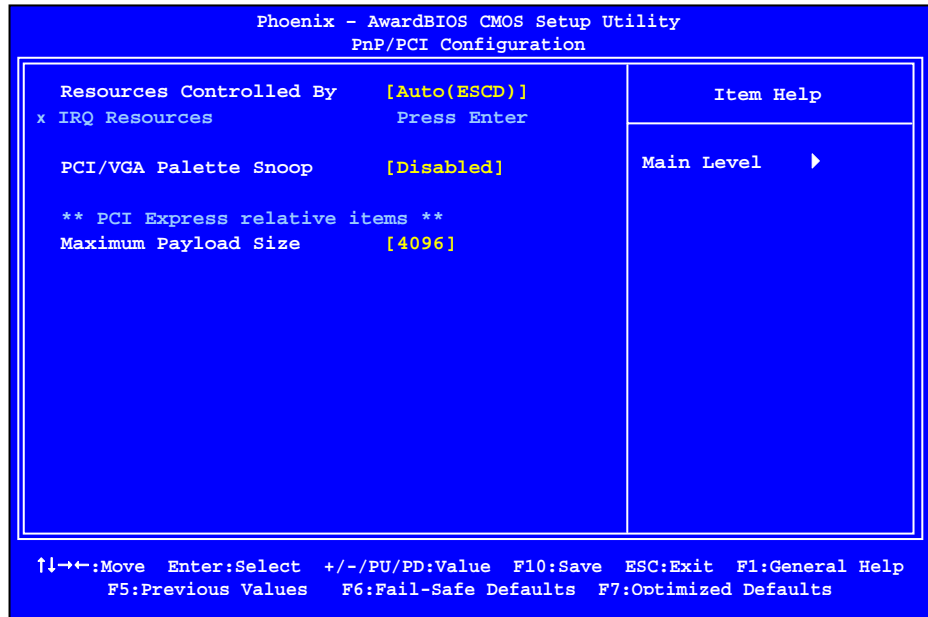


Figure 9. PnP/PCI Configuration Menu

Resources Controlled By

This function on the PnP/PCI Configuration menu allows you to define if the BIOS can automatically configure all the boot and plug-and-play compatible devices or if you can manually select IRQ, DMA, and memory base address fields. Select **[Auto(ESCD)]** if you want the BIOS to automatically populate these fields. If you select **[Manual]** so you can assign the resources, **IRQ Resources** is enabled for input.

```
Resources Controlled By [Auto(ESCD)]
x IRQ Resources          Press Enter
```

```
Resources Controlled By [Manual]
IRO Resources          [Press Enter]
```

IRQ Resources

To enable this field for input, set **Resources Controlled By** to **[Manual]**. With this field enabled, press **Enter** to see options.

```
IRQ-5 assigned to [PCI Device]
IRQ-7 assigned to [PCI Device]
IRQ-9 assigned to [PCI Device]
IRQ-10 assigned to [PCI Device]
IRQ-11 assigned to [PCI Device]
IRQ-14 assigned to [PCI Device]
```

Use Legacy ISA for devices compliant with the original PC AT Bus specification. Use PCI/ISA PnP for devices compliant with the plug-and-play standard, whether designed for PCI or ISA Bus architecture.

PCI/VGA Palette Snoop

This function on the PnP/PCI Configuration menu allows you to enable or disable the Palette Snoop function.

Maximum Payload Size

This function on the PnP/PCI Configuration menu allows you to set the maximum TLP payload size (in bytes) for the PCI Express devices. Use the **Page Up** and **Page Down** keys to scroll through sizes or enter the number using the keyboard numbers or use the **+** and **-** keys to go up and down the list of sizes.

PC Health Status Menu

Select **PC Health status** from the CMOS Setup Utility menu and press **Enter** to display the PC Health Status menu.


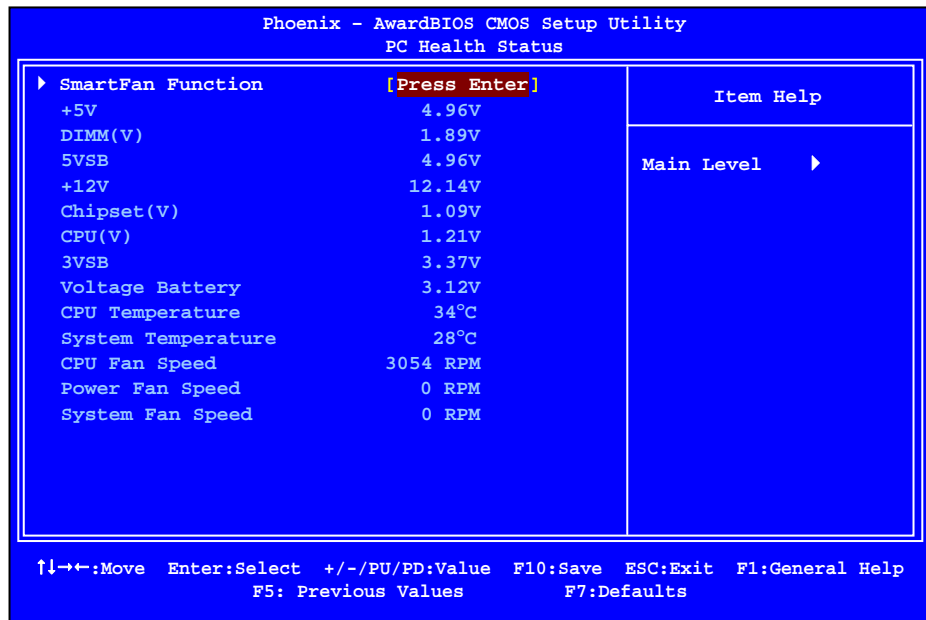


Figure 2. PC Health Status Menu

All of the values shown in **Blue** are dynamic and change as the speed and voltages of the various components change with system usage.

SmartFan Function

Press **Enter** to display the SmartFan Function menu.

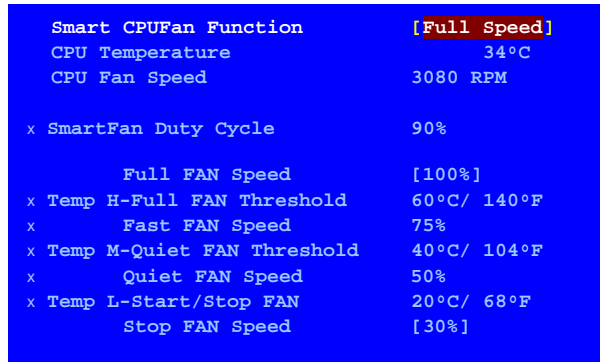

Smart CPUFan Function	[Full Speed]
CPU Temperature	34°C
CPU Fan Speed	3080 RPM
x SmartFan Duty Cycle	90%
Full FAN Speed	[100%]
x Temp H-Full FAN Threshold	60°C/ 140°F
x Fast FAN Speed	75%
x Temp M-Quiet FAN Threshold	40°C/ 104°F
x Quiet FAN Speed	50%
x Temp L-Start/Stop FAN	20°C/ 68°F
Stop FAN Speed	[30%]

Use this menu to control the speed of the various fans on the motherboard. Full speed fixes fan speed at 100% duty cycle. Control the Fan by Duty-Cycle directly. By Temperature calculates the fan speed according to different temperature range.

How effective Smart CPU Fan is will depend on fan design. Most fans have built-in thermistor and may self adjust its speed. Some fans have very limited duty cycle range open to fan control.

Frequency/Voltage Control Menu

Select **Frequency/Voltage Control** from the CMOS Setup Utility menu and press **Enter** to display the Frequency/Voltage Control menu.

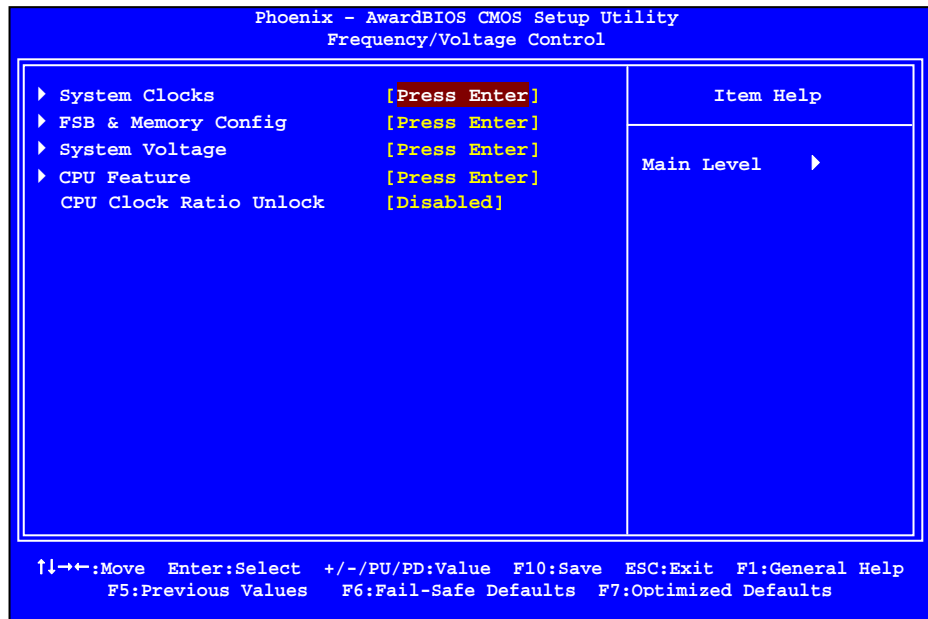


Figure 3. Frequency/Voltage Control Menu

System Clocks

Select **System Clocks** from the Frequency/Voltage Control menu and press **Enter** to display the System Clocks menu.

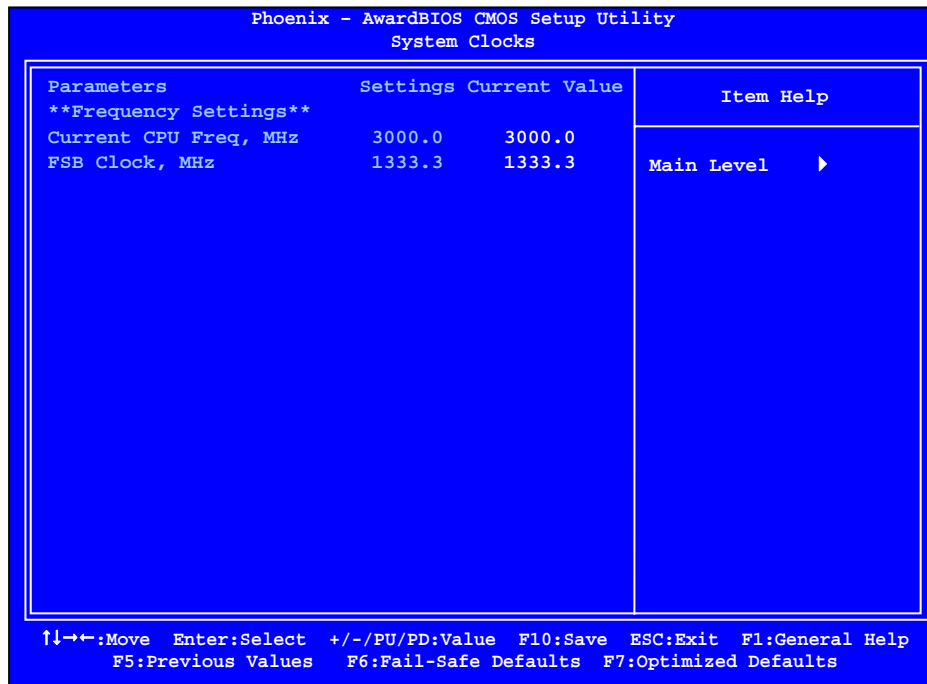


Figure 4. System Clocks Menu

Note that all data in **white** is for information only, data in **yellow** is changeable, data in **blue** is non-changeable, and data in a **red box** is highlighted for selection.

Frequency Settings

- Current CPU Freq, MHz**
This value is set by the CPU Multiplier (value cannot be changed by the user).
- FSB Clock, MHz**
This value is set by the system (value cannot be changed by the user). To

change the FSB memory, and memory timing, go to the FSB & Memory screen.

FSB & Memory Config

Select **FSB & Memory Config** from the Frequency/Voltage Control menu and press **Enter** to display the FSB & Memory Config menu. This menu provides the means to set FSB memory, and memory timing.

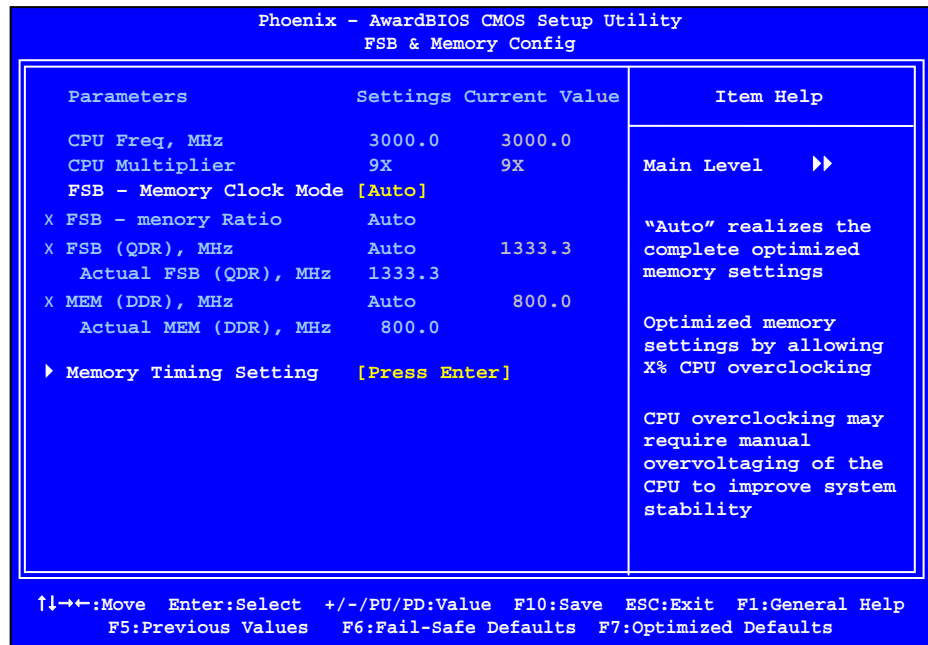


Figure 5. FSB & Memory Config Menu

FSB - Memory Clock Mode

- Use the **Page Up** and **Page Down** keys to scroll through the FSB and Memory Clock Mode options. The options are:

➤ **Auto**

This is the optimal setting since it sets the FSB and memory speeds automatically.

➤ **Linked**

When **Link** is selected, **FSB-Memory Ratio** and **FSB (QDR), MHz** are changed to editable and the FSB speed can be entered manually. As the FSB speed is changed, **CPU Freq, MHz** changes proportionally.

FSB - Memory Clock Mode	[Linked]	
FSB - Memory Ratio	[Auto]	
FSB (QDR), MHz	[1067]	1066.7
Actual FSB (QDR), MHz	1066.7	
X MEM (DDR), MHz	Auto	800.6
Actual MEM (DDR), MHz	800.0	

➤ **Unlinked**

When **Unlink** is selected, **FSB (QDR), MHz** and **MEM (DDR), MHz** are changed to editable and the FSB and memory speeds can be entered manually. As the FSB speed is changed, **CPU Freq, MHz** changes proportionally.

FSB - Memory Clock Mode	[Unlinked]	
FSB - Memory Ratio	[Auto]	
FSB (QDR), MHz	[1067]	1066.7
Actual FSB (QDR), MHz	1066.7	
MEM (DDR), MHz	[1067]	800.6
Actual MEM (DDR), MHz	800.0	

❑ **FSB (QDR), MHz**


Use the + or - keys to scroll through new values for the CPU FSB frequency or type in a new value. Note that the **Actual FSB (QDR)** reflects the actual frequency that takes effect on a reboot.

❑ **MEM (DDR), MHz**

Use the + or - keys to scroll through new values for the memory frequency or type in a new value. Note that the **Actual MEM (DDR)** reflects the actual frequency that takes effect when the system reboots.

Memory Timing Setting

- Press **Enter** to display the Memory Timing Setting menu. Use this menu to set optimal timings or to manually enter timings.

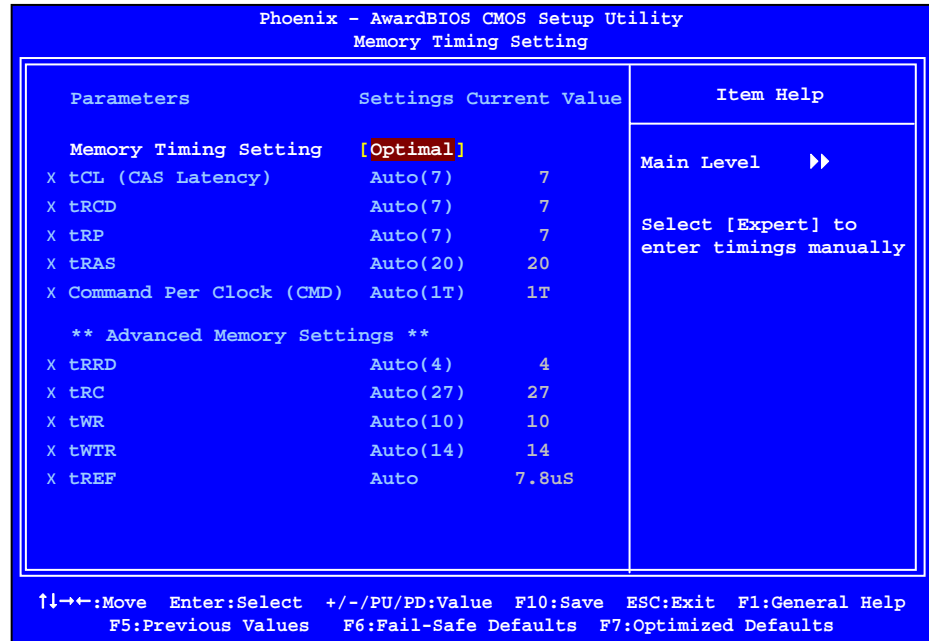

➤ Optimal

Use the **Page Up** and **Page Down** keys to select **Optimal**. Optimal prohibits you from manually setting any timing. All timing is set for optimal performance.

➤ **Expert**

Use the **Page Up** and **Page Down** keys to select **Expert**. When Expert is selected, all timing categories are enabled for manual input. Note that you should set the value to Optimal to use the manufacturers' recommended values.

Parameters	Settings	Current Value
Memory Timing Setting	[Expert]	
tCL (CAS Latency)	[Auto(7)]	7
tRCD	[Auto(7)]	7
tRP	[Auto(7)]	7
tRAS	[Auto(20)]	20
Command Per Clock (CMD)	[Auto(1T)]	1T
** Advanced Memory Settings **		
tRRD	[Auto(4)]	4
tRC	[Auto(27)]	27
tWR	[Auto(10)]	10
tWTR	[Auto(14)]	14
tREF	[Auto]	7.8uS

- **tCL**: CAS# latency (options are Auto and 1 through 7).
- **tRCD**: RAS#-to-CAS# Delay for Read/Write commands to the same bank (options are Auto and 1 through 7).
- **tRP**: Row Precharge time. This is the Precharge-to-Active or Auto-to-Refresh of the same bank (options are Auto and 1 through 7).
- **tRAS**: This is the minimum RAS# active time (options are Auto and 1 through 31).
- **Command Per Clock**: This is the command timing setting on a per clock unit basis (options are Auto, 1 Clock and 2 Clock).
- **tRRD**: RAS#-to-RAS# delay of different banks (options are Auto and 1 through 15).
- **tRC**: RAS#-to-RAS# or auto refresh time of the same bank (options are Auto and 1 through 31).
- **tWR**: The Write recovery time (options are Auto and 2 through 6).
- **tWTR**: This is the minimum write-to-read delay with the same chip selected (options are Auto and 1 through 15).
- **tREF**: This is the DRAM refresh rate (options are **Auto**, **7.8uS**, and **3.9uS**).

System Voltages

Select **System Voltages** from the Frequency/Voltage Control menu and press **Enter** to display the System Voltages menu.

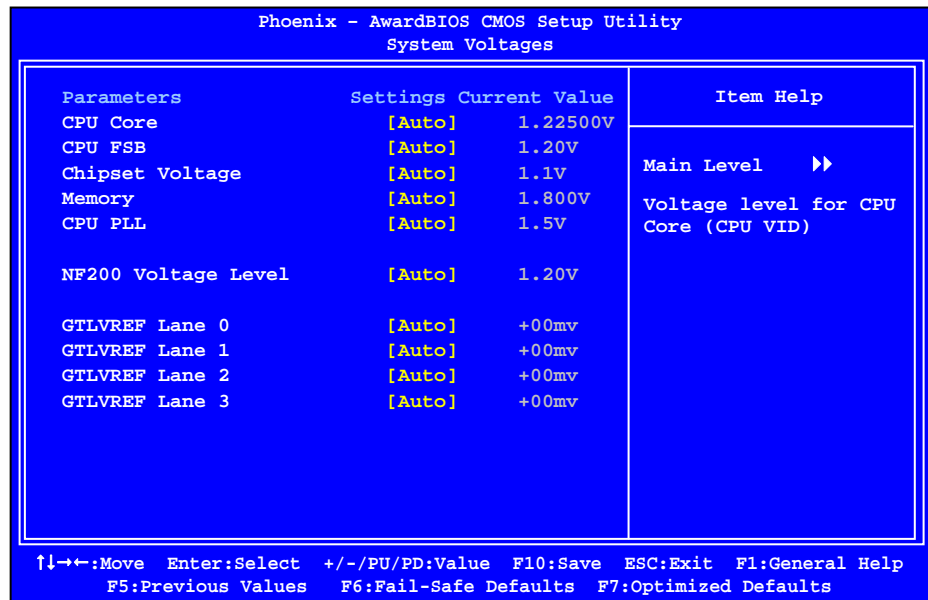


Figure 6. System Voltages Menu


■ CPU Core

Use the **Page Up** and **Page Down** keys to scroll through the voltages or select **[Auto]** to automatically set the voltage level for the CPU Core.

- ❑ **CPU FSB**
Use the **Page Up** and **Page Down** keys to scroll through the voltages or select **[Auto]** to automatically set the voltage level for the CPU FSB.
- ❑ **Chipset Voltage**
This function defines the core voltage level for the NVIDIA nForce SPP chip. Use the **Page Up** and **Page Down** keys to select a voltage (1.1, 1.2V, 1.3V, 1.4V) or select **[Auto]** to automatically set the voltage.
- ❑ **Memory**
This function defines the voltage level for the DRAM. Use the **Page Up** and **Page Down** keys to select a voltage or select **[Auto]** to automatically set the voltage.
- ❑ **CPU PLL**
This function defines the voltage level for the CPU PLL. Use the **Page Up** and **Page Down** keys to select a voltage or select **[Auto]** to automatically set the voltage.
- ❑ **GTLVREF Lane 0**
This function defines the voltage level for GTLVREF Lane 0. Use the **Page Up** and **Page Down** keys to select a voltage or select **[Auto]** to automatically set the voltage.
- ❑ **GTLVREF Lane 1**
This function defines the voltage level for GTLVREF Lane 1. Use the **Page Up** and **Page Down** keys to select a voltage or select **[Auto]** to automatically set the voltage.
- ❑ **GTLVREF Lane 2**
This function defines the voltage level for GTLVREF Lane 2. Use the **Page Up** and **Page Down** keys to select a voltage or select **[Auto]** to automatically set the voltage.
- ❑ **GTLVREF Lane 3**
This function defines the voltage level for GTLVREF Lane 3. Use the **Page Up** and **Page Down** keys to select a voltage or select **[Auto]** to automatically set the voltage.

CPU Feature

Press **Enter** to display the CPU Feature menu.

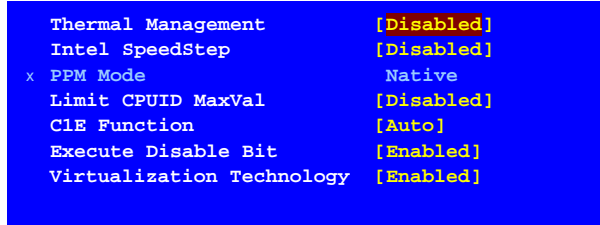

Thermal Management	[Disabled]
Intel SpeedStep	[Disabled]
x PPM Mode	Native
Limit CUID MaxVal	[Disabled]
CIE Function	[Auto]
Execute Disable Bit	[Enabled]
Virtualization Technology	[Enabled]

Thermal Management

Use this function to enable or disable TM1 and TM2 support. Options are:

- **Disable**
Disable support for TM1 and TM2.
- **TM1 Only**
The CPU is thermally throttled by cutting active processor clock cycles.
- **TM2 Only**
Thermal throttling is achieved by reducing the CPU multiplier and CPU core voltage.
- **TM1 & TM2**
Enables support for both TM1 and TM2.

Intel SpeedStep

This item select enabled, CPU clock speed and CPU core voltage are adjusted dynamically based on the CPU load.

PPM Mode

There are two mode options that can be selected. The Native mode is for fully support ACPI OS (ex. WINXP, VISTA...), SMM mode is for legacy OS (ex. WIN2K...).

Limit CUID MaxVal

Use this function to enable the set limit of the CUID MaxVal to 3. Set to Disable for Win XP.

C1E Function

Enabled, this function reduces the CPU power consumption when the CPU is idle. Idle occurs when the operating system issues a halt instruction.

Execute Disable Bit

When this function is disabled, it forces the XD feature flag to always return to zero (0).

Virtualization Technology

When this function is enabled, it allows a VMM to utilize the additional hardware capabilities provided by Intel Virtualization Technology.

CPU Clock Ratio Unlock

- Select Enabled, if you install a CPU that supports this feature. The following item become available to select a multiplier to set the CPU frequency. If your CPU multiplier is locked this option will be unavailable.

Installing Drivers and Software

It is important to remember that *before* installing the driver CD that is shipped in the kit, you need to load your operating system. The motherboard supports Windows XP 32bit and 64bit and is Vista-capable.

The kit comes with a CD that contains utility drivers and additional NVIDIA software.

The CD that has been shipped with your EVGA motherboard contains the following software and drivers:

- NVIDIA nForce motherboard drivers
- Audio drivers
- RAID Drivers
- JMicron Drivers
- Adobe Acrobat Reader
- User's Manual

Drivers Installation

1. Insert the EVGA nForce 730i installation CD for the motherboard included in the kit.
2. The CD will autorun, install the drivers and utilities listed on the install screen.

If it does not run, go to My Computer and click on the CD to open.

ACPI - Advanced Configuration and Power Interface
AFR – Alternate Frame Rendering
APIC - Advanced Programmable Interrupt Controller
BIOS - Basic Input Output System
CD-ROM - Compact Disc Read-Only Memory
CMOS - Complementary Metal-Oxide Semiconductor
CPU – Central Processing Unit
D-ICE – Dry Ice Cooling
DDR2 - Double Data Rate 2
DDR3 - Double Data Rate 3
DIMM - Dual In-line Memory Module
DRAM - Dynamic random access memory
DVD - Digital Versatile Disc
DVI – Digital Video Interface
FDC - Floppy Disk Controller
FSB – Front Side Bus
FTW – For The Win!
GHz – Gigahertz
GPU – Graphics Processing Unit
HDD - Hard Disk Drive
HDMI - High-Definition Multimedia Interface
HDR – High Dynamic Range Lighting
HPET - High Precision Event Timer
HSF - Heat Sink Fan
I/O - Input/Output
IDE - Integrated Drive Electronics
IEEE - Institute of Electrical and Electronics Engineers
IGP - Integrated Graphics Processors
IRQ - Interrupt Request
JBOD - Just a Bunch of Disks
JEDEC - Joint Electron Device Engineering Council
LAN - Local Area Network
LCD - Liquid Crystal Display
LGA – Land Grid Array
LN2 – Liquid Nitrogen Cooling

MAC - Media Access Control
MCP - Media and Communications Processor
MHz - Megahertz
NB - Northbridge
NCQ - Native Command Queuing
NIC - Network Interface Card
NTFS - New Technology File System
OEM - Original Equipment Manufacturer
PATA - Parallel Advanced Technology Attachment
PCB - Printed Circuit Board
PCI - Peripheral Component Interconnect
PCIe - Peripheral Component Interconnect Express
PCI-x - Peripheral Component Interconnect Extended
POST – Power on Self Test
PWM – Pulse Width Modulation
QDR - Quad Data Rate
RAID - Redundant Array of Inexpensive Disks
RGB - Red Green Blue
SATA - Serial Advanced Technology Attachment
SB - Southbridge
SCSI - Small Computer System Interface
SFR – Split Frame Rendering
SLI - Scalable Link Interface
SPD - Serial Presence Detect
SPDIF - Sony/Philips Digital Interconnect Format
SPP - System Platform Processors
TCP/IP - Transmission Control Protocol/Internet Protocol
USB - Universal Serial Bus
VDroop - V-core Voltage Drop
VGA - Video Graphics Array

Appendix A

POST Codes for the EVGA nForce 730i Motherboard

This section provides the Award POST Codes (Table 6) for the EVGA nForce 730i Motherboard during system boot up.

The POST Codes are displayed on the LED POST Codereadout located directly onboard the motherboard.

The LED POST Code readout will also display current CPU temperatures.



Debug LED

Table 3. Award POST Code

Award POST Codes		
Code	Name	Description
01	Reserved	
02	Jumps to E000 segment	Execution of POST routines in E000
03	Early SuperIO	Init Early Initialized the super IO
04	Reserved	
05	Blank video	Reset Video controller
06	Reserved	
07	Init KBC	Keyboard controller init
08	KB test	Test the Keyboard
09	Reserved	
0A	Mouse Init	Initialized the mouse
0B	Reserved	

Award POST Codes		
Code	Name	Description
0C	Reserved	
0D	Reserved	
0E	CheckSum Check	Check the integrity of the ROM, BIOS and message
0F	Reserved	
10	Autodetect EEPROM	Check Flash type and copy flash write/erase routines
11	Reserved	
12	Test CMOS	Test and Reset CMOS
13	Reserved	
14	Load Chipset	Load Chipset Defaults
15	Reserved	
16	Init Clock	Initialize onboard clock generator
17	Reserved	
18	Init CPU	CPU ID and initialize L1/L2 cache
19	Reserved	
1A	Reserved	
1B	Setup Interrupt Vector Table	Initialize first 120 interrupt vectors with SPURIOUS_INT_HDLR and initialize INT 00h-1Fh according to INT_TBL
1C	CMOS Battery Check	Test CMOS and check Battery Fail
1D	Early PM	Early PM initialization
1E	Reserved	
1F	Re-initial KB	Load keyboard matrix
20	Reserved	
21	HPM init	Init Heuristic Power Management (HPM)
22	Reserved	
23	Program chipset	Early Programming of chipset registers
24	Init PNP	Init PNP
25	Shadow VBIOS	Shadow system/video BIOS
26	Clock Gen	Init onboard clock generator and sensor
27	Setup BDA	Setup BIOS DATA AREA (BDA)
28	Reserved	

Award POST Codes		
Code	Name	Description
29	CPU Speed detect	Chipset programming and CPU Speed detect
2A	Reserved	
2B	Init video	Initialize Video
2C	Reserved	
2D	Video memory test	Test Video Memory and display Logos
2E	Reserved	
2F	Reserved	
30	Reserved	
31	Reserved	
32	Reserved	
33	Early keyboard reset	Early Keyboard Reset
34	Reserved	
35	Test DMA Controller 0	Test DMA channel 0
36	Reserved	
37	Test DMA Controller 1	Test DMA channel 1
38	Reserved	
39	Test DMA Page Registers	Test DMA Page Registers
3A	Reserved	
3B	Reserved	
3C	Test Timer	Test 8254 Timer 0 Counter 2.
3D	Reserved	
3E	Test 8259-1 Mask	Verify 8259 Channel 1 masked interrupts by alternately turning off and on the interrupt lines.
3F	Reserved	
40	Test 8259-2 Mask	Verify 8259 Channel 2 masked interrupts by alternately turning off and on the interrupt lines.
41	Reserved	
42	Reserved	
43	Test Stuck Interrupt	Turn off interrupts then verify no 8259's interrupt mask register is on. Test 8259 Force an interrupt and verify the interrupt occurred.
44	Reserved	

Award POST Codes		
Code	Name	Description
45	Reinit serial port	Reinitialize Preboot agent serial port
46	Reserved	
47	EISA Test	If EISA non-volatile memory checksum is good, execute EISA initialization. If not, execute ISA tests and clear EISA mode flag.
48	Reserved	
49	Size Memory	Size base memory from 256K to 640K and extended memory above 1MB.
4A	Reserved	
4B	Reserved	
4C	Reserved	
4D	Reserved	
4E	Init APIC	Initialize APIC and set MTRR
4F	Reserved	
50	USB init	Initialize USB controller
51	Reserved	
52	Memory Test	Test all memory of memory above 1MB using Virtual 8086 mode, page mode and clear the memory
53	Reserved	
54	Reserved	
55	CPU display	Detect CPU speed and display CPU vendor specific version string and turn on all necessary CPU features
56	Reserved	
57	PnP Init Display	PnP logo and PnP early init
58	Reserved	
59	Setup Virus	Setup virus protect according to Protect Setup
5A	Reserved	
5B	Awdflash Load	If required, will auto load Awdflash.exe in POST
5C	Reserved	
5D	Onboard I/O	Init Initializing onboard superIO
5E	Reserved	
5F	Reserved	

Award POST Codes		
Code	Name	Description
60	Setup enable	Display setup message and enable setup functions
61	Reserved	
62	Reserved	
63	Initialize Mouse	Detect if mouse is present, initialize mouse, install interrupt vectors.
64	Reserved	
65	PS2 Mouse special	Special treatment to PS2 Mouse port
66	Reserved	
67	ACPI init	ACPI sub-system initializing
68	Reserved	
69	Init Cache	Initialize cache controller
6A	Reserved	
6B	Setup	Enter setup check and autoconfiguration check up
6C	Reserved	
6D	Initialize Floppy	Initialize floppy disk drive
6E	Reserved	
6F	FDD install	Install FDD and setup BIOS data area parameters
70	Reserved	
71	Reserved	
72	Reserved	
73	Initialize Hard Drive	Initialize hard drive controller
74	Reserved	
75	Detect HDD	IDE device detection
76	Reserved	
77	Detect serial ports	Initialize serial ports.
78	Reserved	
79	Reserved	
7A	Detect parallel ports	Initialize parallel ports.
7B	Reserved	
7C	HDD Write Protect	HDD check for write protection
7D	Reserved	
7E	Reserved	
7F	POST error check	Check POST error and display them and ask for user

Award POST Codes		
Code	Name	Description
		intervention
80	Reserved	
81	Reserved	
82	Security Check	Ask password security.
83	Write CMOS	Write all CMOS values back to RAM and clear screen.
84	Display PNP	Display PNP devices
85	USB Final Init	Final USB initialization
86	Reserved	
87	Reserved	
88	Reserved	
89	Setup ACPI tables	Setup ACPI tables
8A	Reserved	
8B	Option ROM Detect	Scan for Option ROMs
8C	Reserved	
8D	Enable Parity Check	Enable Parity Check
8E	Reserved	
8F	IRQ12 Enable	Enable IRQ12 if mouse present
90	Reserved	
91	Reserved	
92	Reserved	
93	Boot Medium Read	Detect and store boot partition head and cylinders values in RAM
94	Final Init	Final init for last micro details before boot
95	NumLock	Set NumLock status according to Setup
96	Boot Attempt	Set low stack Boot via INT 19h.
C0	Base CPU test	Read/Write CPU registers
C1	Memory Presence	Base memory detect
C2	Early Memory	Board Initialization
C3	Extend Memory	Turn on extended memory, cache initialization
C4	Special Display	First display initialization
C5	Early Shadow	Early shadow enable for fast boot

Award POST Codes		
Code	Name	Description
C6	Cache presence	External cache size detection
CF	CMOS Check	CMOS checkup
B0	Spurious	If interrupt occurs in protected mode.
B1	Unclaimed NMI	If unmasked NMI occurs, display Press F1 to disable NMI, F2 reboot.
BF	Program MCP	To program chipset from defaults values
E1- EF	Setup Pages	E1- Page 1, E2 - Page 2, etc.
FF	Boot	



EVGA Corp • 2900 Saturn Street, Suite B • Brea, CA 92821 • www.evga.com

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>