

EXCALIBUR

ELECTRONICS, INC.

*User's
Guide*

BurpMaster Keychain



www.ExcaliburElectronics.com

Model No. 112-SG

Download from Www.Somanuals.com. All Manuals Search And Download.

Congratulations on your purchase of BurpMaster keychain! Thanks to Excalibur Electronics, you can now carry six of the funniest burps right on your keychain, for hours of on-the-go entertainment. The BurpMaster is easy to use, but be sure to use it safely. Before starting, please read this manual thoroughly, especially noting safety, care and battery information. Keep this manual for reference.



The legendary King Arthur brandished a magic sword, Excalibur, from which we take our company name. With this unique weapon in his hands, he could not be vanquished.

Although Excalibur Electronics can't claim the magical secrets of Merlin, King Arthur's court wizard, sometimes our patented technology may make it seem as if we could. We make you think.

Installing Batteries

Your BurpMaster keychain requires three AG13 batteries, included. To install the batteries, carefully turn the unit over so that it is face-down on a soft surface. Find the battery compartment on the back of the unit.

Use a small Phillips screw-driver to remove the screw. Lift off the battery compartment lid. Install the batteries, making sure to match polarity (+ and -)

with the diagram inside the battery compartment. Place the tab of the battery compartment lid in its slot and close the compartment door. Replace the screw and tighten it carefully.


The BurpMaster may lock up due to static discharge. If this should happen, use a slim, pointed object to press the button marked **RESET** on the front of the unit.

Special Care & Handling

- Avoid rough handling such as bumping or dropping.
- Clean using only a slightly damp cloth. Do not use cleaners with chemical agents.

Layout of the BurpMaster Keychain

RESET IS ON THE
BACK OF THE UNIT

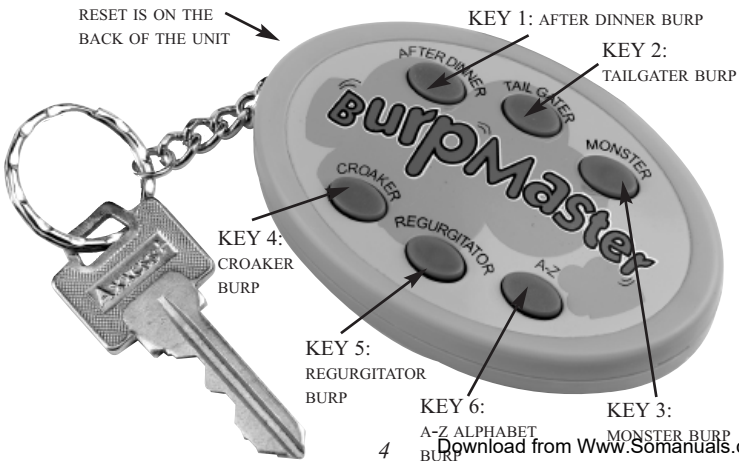

Battery Information

- Your BurpMaster keychain uses three AG13 batteries, included.
- Do not mix old and new batteries.
- Do not use rechargeable batteries.
- Remove exhausted batteries from the unit.
- Do not short circuit battery terminals.
- Remove batteries and store them in a cool, dry place when not in use.
- To avoid explosion or leakage, do not dispose of batteries in a fire or attempt to recharge alkaline or other non-rechargeable batteries.
- Install batteries so that the polarity (+ and -) matches the diagrams in the battery compartment.
- Use only batteries of the same type and equivalence.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- *Reorient or relocate the receiving antenna.*
- *Increase the separation between the equipment and receiver.*
- *Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.*
- *Consult the dealer or an experienced radio/TV technician for help.*

Excalibur Electronics reserves the right to make technical changes without notice in the interest of progress.

Limited 90-Day Warranty

EXCALIBUR ELECTRONICS, INC., warrants to the original consumer that its products are free from any electrical or mechanical defects for a period of 90 DAYS from the date of purchase. If any such defect is discovered within the warranty period, EXCALIBUR ELECTRONICS, INC., will repair or replace the unit free of charge upon receipt of the unit, shipped postage prepaid and insured to the factory address shown at right.

The warranty covers normal consumer use and does not cover damage that occurs in shipment or failure that results from alterations, accident, misuse, abuse, neglect, wear and tear, inadequate maintenance, commercial use, or unreasonable use of the unit. Removal of the top panel voids all warranties. This warranty does not cover cost of repairs made or attempted outside of the factory.

Any applicable implied warranties, including warranties of merchantability and fitness, are hereby limited to 90 DAYS from the date of purchase. Consequential or incidental damages resulting from a breach of any applicable express or implied warranties are hereby excluded. Some states do not allow limita-

tions on the duration of implied warranties and do not allow exclusion of incidental or consequential damages, so the above limitations and exclusions in these instances may not apply.

The only authorized service center in the United States is:

Excalibur Electronics, Inc.
13755 SW 119th Ave, Miami, Florida 33186 U.S.A.
Phone: 305.477.8080
Fax: 305.477.9516
www.ExcaliburElectronics.com

Ship the unit carefully packed, preferably in the original carton, and send it prepaid, and adequately insured. Include a letter, detailing the complaint and including your daytime telephone number, inside the shipping carton.

If your warranty has expired and you want an estimated fee for service, write to the above address, specifying the model and the problem.

PLEASE DO NOT SEND YOUR UNIT WITHOUT RECEIVING AN ESTIMATE FOR SERVICING. WE CANNOT STORE YOUR UNIT!

EXCALIBUR

ELECTRONICS, INC.

**13755 SW 119TH AVENUE,
MIAMI, FLORIDA 33186 U.S.A.
PHONE: 305.477.8080,
FAX: 305.477.9516**

112-SG (MA) BurpMaster Keychain 072406 v4

Play games live at:

Download from www.Somanuals.com. All Manuals Search And Download.

www.ExcaliburElectronics.com

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>