

Download from Www.Somanuals.com. All Manuals Search And Download.

Congratulations on your purchase of the Nascar[®] Carl Edwards Racing Handheld from Excalibur Electronics, Inc. Carl Edwards Racing Handheld is easy to carry and easy to play. Bring it everywhere you go and enjoy hours of fun. You're going to love playing with your Speedway Racing handheld.

Carl Edwards Racing Handheld is easy to use, but be sure to use it safely. Before starting, please read this manual thoroughly, especially noting safety, care and battery information. Keep this manual for reference.

This package contains Carl Edwards Racing Handheld and its manual.

NASCAR® is a registered trademark of The National Association for Stock Car Auto Racing, Inc. Carl Edwards® name and likeness are used with permission from ROUSCH RACING®. ROUSCH RACING® and Carl Edwards® are registered trademarks of Rousch Racing, Inc. of Livonia, MI.

The legendary King Arthur brandished a magic sword, Excalibur, from which we take our company name.

With this unique weapon in his hand, he could not be vanquished.

Although Excalibur Electronics can't claim the magical secrets of Merlin, King Arthur's court wizard, sometimes our patented technology may make it seem as if we could.

We make you think.

CARL EDWARDS RACING HANDHELD TABLE OF CONTENTS

Installing Batteries	3
Functions of Buttons	5
How to Play	6
Tips	6
Special Care & Handling	7
Battery Information	8
FCC Warning	9
90-Day Limited Warranty	10

Installing Batteries

Your Carl Edwards Racing Handheld requires 2 AAA batteries. Be sure to review "Battery Information" on page 8. To install batteries, carefully turn Nascar's® Carl Edwards Racing Handheld over so that the top-side is face-down on a soft surface, such as a towel or magazine. You'll find the battery compartment on the unit's back.

Use a small Phillips screwdriver to remove the screw. Lift off the battery compartment lid. Install 2 AAA batteries, making sure to match the polarity (+ and -) with the diagram inside the battery compartment. Place the battery compartment lid's tabs in their slots and snap the compartment door back on. Replace the screw and gently tighten it.

2

Layout of Carl Edwards Racing Handheld



Functions of Buttons

on/off: Press to turn on and off the game.

PAUSE: Press to pause and to resume the game if in play.

MUTE: Press to turn sound **MUTE**.

START: Press to start a game.

PAD: Press **UP** to shift up one gear in manual gear mode or to select a different track during

selection mode. Press **DOWN** to shift one gear in manual gear mode. Press **RIGHT** to turn right. Press **LEFT** to turn left.

A: Press to accelerate the car during play or to select **AUTO-GEAR/MANUAL GEAR** during selection mode.

B: Press to brake or to select the number of laps during selection mode.

4

How to Play

Begin by pressing the **ON/OFF** button to turn the game on. Press **UP**, **A**, and **B** to select your game. After you set up your game with your preferences, press **START** to begin. Press **A** to accelerate or **B** to decelerate.

Press **LEFT** or **RIGHT** to change the direction of your car. If you are playing in manual mode, press the **UP** and **DOWN** keys to shift gears.

Tips

You have 199 seconds to complete the course. The goal is to complete the course within the allotted time. Bonus time would be awarded after every kilometer from the

finish line. For example, 0.9 km. left, 1.9 km. left. Points are awarded based on your ranking in the race at that point. If you are playing in three-lap mode, bonus time would also be given when lap 1 or lap 2 is completed.

Try not to hit other cars or drive off-road.

You will lose speed if you do. Once you run out of time, the game is over.

You should also decelerate before turning sharp curves so you don't drive off-road or lose control of your car.

Press the left or right button repeatedly to navigate through turns. The more you press the button, the sharper your turn will be. At the end of the game, Carl Edwards

Racing Handheld will display your score and final ranking.

DO NOT PRESS MORE THAN 2 KEYS AT A TIME.

SPECIAL CARE & HANDLING

- Avoid rough handling such as bumping or dropping.
- Avoid moisture and extreme temperatures.
 For best results, use between the temperatures of 39°F and 100°F (4° C and 38° C).
- Clean using only a slightly damp cloth.
 Do not use cleaners with chemical agents.

6

BATTERY INFORMATION

- Your Carl Edwards Racing Handheld uses 2 AAA batteries, not included.
- · Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Do not use rechargeable batteries.
- Remove exhausted batteries from the unit.
- Do not short circuit battery terminals.
- To avoid explosion or leakage, do not dispose of batteries in a fire or attempt to recharge standard or alkaline batteries.
- Be sure to insert batteries with the correct polarities and always follow the toy and battery manufacturers' instructions.
- Remove batteries and store them in a cool, dry place when not in use.
- Always remove old and dead batteries from the product.
- The supply terminals are not to be short-circuited.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

LIMITED 90-DAY WARRANTY

EXCALIBUR ELECTRONICS, INC., warrants to the original consumer that its products are free from any electrical or mechanical defects for a period of 90 DAYS from the date of purchase. If any such defect is discovered within the warranty period, EXCALIBUR ELECTRONICS, INC., will repair or replace the unit free of charge upon receipt of the unit, shipped postage prepaid and insured to the factory address shown at right.

The warranty covers normal consumer use and does not cover damage that occurs in shipment or failure that results from alterations, accident, misuse, abuse, neglect, wear and tear, inadequate maintenance, commercial use, or unreasonable use of the unit. Removal of the top panel voids all warranties. This warranty does not cover cost of repairs made or attempted outside of the factory.

Any applicable implied warranties, including warranties of merchantability and fitness, are hereby limited to 90 DAYS from the date of purchase. Consequential or incidental damages resulting from a breach of any applicable express or implied warranties are hereby excluded. Some states do not allow limitations on the duration of implied warranties and do not allow exclusion of incidental or consequential dam-

ages, so the above limitations and exclusions in these instances may not apply. The only authorized service center in the United States is:

Excalibur Electronics, Inc. 13755 SW 119th Ave Miami, Florida 33186 U.S.A. Phone: 305.477.8080

Fax: 305.477.9516

www.ExcaliburElectronics.com

Ship the unit carefully packed, preferably in the original carton, and send it prepaid, and adequately insured. Include a letter, detailing the complaint and including your daytime telephone number, inside the shipping carton. If your warranty has expired and you want an estimated fee for service, write to the above address, specifying the model and the problem.



PLEASE DO NOT SEND
YOUR UNIT WITHOUT
RECEIVING
AN ESTIMATE
FOR
SERVICING.
WE CANNOT
STORE YOUR
UNIT!



EXCALIBUR ELECTRONICS, INC. 13755 SW 119TH AVENUE MIAMI, FLORIDA 33186 U.S.A.

PHONE: 305.477.8080

Fax: 305.477.9516



live at

www.ExcaliburElectronics.com

488N (MA) CarlEdwardsRacingHandheld 080606 V2

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com