

## TROUBLE SHOOTING

Problem	Causes	Correction
Vehicle doesn't move	<ul style="list-style-type: none"> <li>Power switch is turned OFF.</li> <li>Vehicle is too far away from the controller.</li> <li>The metal tab in the battery cartridge is flattened and not touching the installed batteries.</li> </ul>	<ul style="list-style-type: none"> <li>Turn the power switch ON.</li> <li>Bring the vehicle closer to the transmitter.</li> <li>Lift up the metal tab so that it makes a secure contact with the battery tip.</li> </ul>
Loss of Control	<ul style="list-style-type: none"> <li>Another radio control vehicle using the same frequency is operated near your vehicle</li> </ul>	<ul style="list-style-type: none"> <li>Race against other vehicles using a different frequency or channel.</li> </ul>
Vehicle drives slowly	<ul style="list-style-type: none"> <li>Weak batteries in the vehicle.</li> </ul>	<ul style="list-style-type: none"> <li>Replace with new batteries, following the + / - marking.</li> </ul>
Poor range control	<ul style="list-style-type: none"> <li>Weak battery in the transmitter.</li> <li>Strong interference in the surrounded area.</li> </ul>	<ul style="list-style-type: none"> <li>Replace with new battery.</li> <li>Move to a better location to Drive your vehicle.</li> </ul>

**WARNING: Modifications not approved by Excalibur Electronics voids warranty.**

## FCC Compliance

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**THIS PRODUCT IS FOR THE USE IN U.K., SPAIN, GERMANY, FRANCE, BELGIUM, ITALY, SWITZERLAND, THE NETHERLANDS, DENMARK, U.S., CANADA AND PORTUGAL.**



Made In China

## Limited 90-Day Warranty

EXCALIBUR ELECTRONICS, INC., warrants to the original consumer that its products are free from any electrical or mechanical defects for a period of 90 DAYS from the date of purchase. If any such defect is discovered within the warranty period, EXCALIBUR ELECTRONICS, INC., will repair or replace the unit free of charge upon receipt of the unit, shipped postage prepaid and insured to the factory address below. The warranty covers normal consumer use and does not cover damage that occurs in shipment or failure that results from alterations, accident, misuse, abuse, neglect, wear and tear, inadequate maintenance, commercial use, or unreasonable use of the unit. Removal of the top panel voids all warranties. This warranty does not cover cost of repairs made or attempted outside of the factory. Any applicable implied warranties, including warranties of merchantability and fitness, are hereby limited to 90 DAYS from the date of purchase. Consequential or incidental damages resulting from a breach of any applicable express or implied warranties are hereby excluded. Some states do not allow limitations on the duration of implied warranties and do not allow exclusion of incidental or consequential damages, so the above limitations and exclusions in these instances may not apply. The only authorized service center in the United States is:

Excalibur Electronics, Inc.  
13755 SW 119th Ave.  
Miami, FL 33186 U.S.A.

Ship the unit carefully packed, preferably in the original carton, and send it prepaid, and adequately insured. Include a letter detailing the complaint, along with your daytime telephone number, inside the shipping carton. If your warranty has expired and you want an estimated fee for service, write to the above address, specifying the model and the problem.

**PLEASE DO NOT SEND YOUR UNIT WITHOUT RECEIVING AN ESTIMATE FOR SERVICING. WE CANNOT STORE YOUR UNIT!**

**EXCALIBUR**  
ELECTRONICS, INC.

Excalibur Electronics, Inc.  
13755 SW 119th Avenue • Miami, FL 33186  
Tel: 305.477.8080 • Fax: 305.477.9516 • www.ExcaliburElectronics.com

RADIO REPLICAS is a trademark of Excalibur Electronics, Inc.  
HUMMER, HZ, and all related emblems, and the distinctive vehicle model body and grille designs are General Motors Trademarks used under license to Zaptoys International Ltd. / Lucky Plastic and distributed by Excalibur Electronics, Inc. Actual product may differ slightly from photograph.



## INSTRUCTION MANUAL

Please read through this instruction manual carefully before starting to operate. Please ensure to remove all accessories and components from packaging.



## Instruction Manual

Please read through this instruction manual carefully before starting to operate. Please ensure to remove all accessories and components from packaging.

## What Is Required To Play



## Battery Requirements

Recommended to use alkaline batteries for best performance.  
Vehicle : 3 x 1.5V (AA) size batteries  
Transmitter : 1 x 9V (006P, 6F22) size batteries

 
 
## Battery Installation

### Transmitter

- Remove battery cover located at the back.
- Insert 1 x 9V battery following the + / - marking.
- Replace battery cover.

### Vehicle

- Open battery cover located at the underside.
- Insert 3 x 1.5V (AA) batteries following the + / - marking.
- Close battery cover.

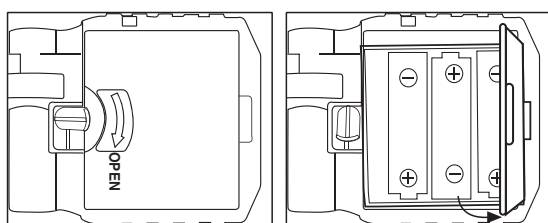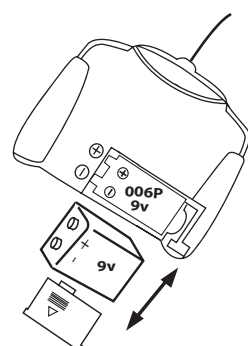


## How to Play

- Turn Hummer's switch to "ON" position for power.
- Turn Transmitter's switch to "ON" position for power. You are set to run!

## Moving Your Vehicle

 See diagram below.

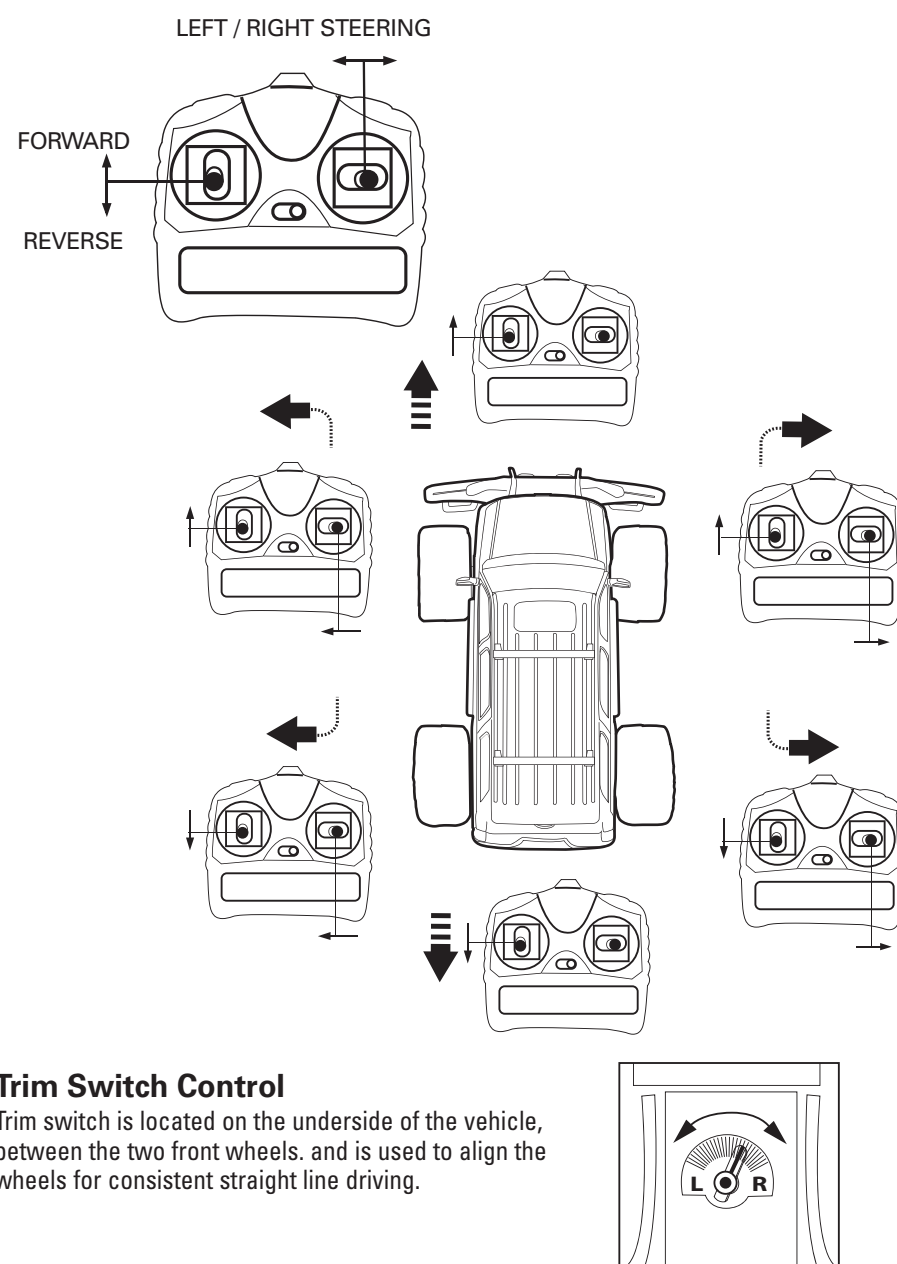

## Trim Switch Control

Trim switch is located on the underside of the vehicle, between the two front wheels, and is used to align the wheels for consistent straight line driving.

## MAINTENANCE AND CARE

 
- To avoid damage to vehicle, never drive it on a wet floor, on sand, or in mud, rain or snow.
- Do not expose the vehicle to extreme temperatures.
- Be sure to remove the batteries from the vehicle and transmitter when storing the product away.
- To protect the vehicle's wheel mechanism from lint, thread, hair, and dust particles, use a small brush, tweezers or the tip of a toothpick, and wipe off any dust or debris.
- Always keep vehicle clean, use a dampened cloth to wipe off, and then wipe all moisture off with a dry cloth. Never use chemicals to clean the product.
- Keep this instruction manual for future use.
- Avoid holding the wheels when rotating, this will cause the electronic components to short-circuit, overheat and cause malfunction.
- Long periods of play time can generate high heat level which causes wear and tear. To extend product life, allow 10 minutes to cool down before installing new batteries.

## HELPFUL HINTS

- If vehicle does not respond to the transmitter, move closer to the vehicle and try again.
- If vehicle loses power or you experience a loss of performance, replace the batteries and try again.
- If the vehicle moves slowly, try changing the batteries and check the wheel mechanisms for lint, thread, hair or dust.
- When the transmitter range decreases, replace the battery in the controller.
- If someone uses a CB nearby, it might interfere with control of the car. If this occurs, move the car and transmitter away from the CB.

## CAUTION

- Do not apply a big shock to vehicle and transmitter.
- Do not play in thunderstorms.
- Do not touch the wheels when the switch is turned ON because it is extremely dangerous.
- Do not leave the vehicle or transmitter near sources of heat or under direct sunlight for long periods of time, which may damage sensitive electronic instruments.
- Do not operate the vehicle near small children.
- Do not mix old and new batteries together. Do not mix battery type or brands.
- Always select a safe place to play. Never drive your vehicle in the street.
- Non-rechargeable batteries are not to be recharged
- Rechargeable batteries are to be removed from the toy being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- Do not touch the motor after play, as it may become hot during long period of playtime.

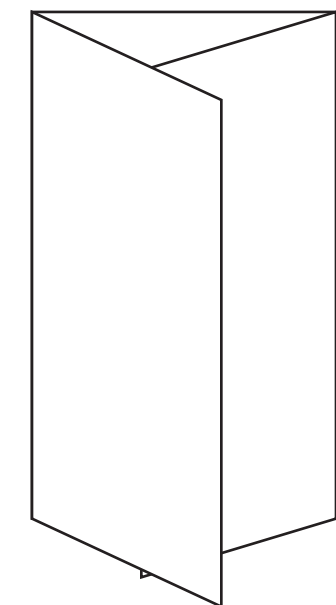

Instructions fold inward

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>