

User's Guide for
Paper Shredder

EXCALIBUR

ELECTRONICS, INC.



Model No. PS116

www.ExcaliburElectronics.com

Download from www.Somanuals.com. All Manuals Search And Download.

Troubleshooting

To prevent paper jams, do not overload the shredder. Do not use your shredder for increments more than two minutes. Your Paper Shredder may shut off automatically for one of the following reasons:

1. The Paper Shredder has been operated continuously for a prolonged period of time.

2. Excess paper has been inserted all at once in the feeding area.

If this happens, unplug the power cord and wait at least four minutes for the unit to rest. Plug it back in and set it to **REV**. Remove any jammed paper. Switch back to **AUTO** and you are ready to use your Paper Shredder.

Special Care and Handling

- Keep loose articles of clothing, ties, jewelry, hair or other small items away from the feeding opening.
- Turn the Paper Shredder off when not in use for a long period of time.
- Remove all staples and paper clips from paper before shredding.
- Do not place hands or fingers into the shredder.
- Do not use the shredder for longer than two minutes straight. If you need to use it for longer than that, wait four minutes between each use.
- Turn off and unplug the shredder before moving, cleaning or emptying the wastebasket.
- Empty the wastebasket frequently.
- Avoid rough handling such as bumping or dropping.

LIMITED 90-DAY WARRANTY

EXCALIBUR ELECTRONICS, INC., warrants to the original consumer that its products are free from any electrical or mechanical defects for a period of 90 DAYS from the date of purchase. If any such defect is discovered within the warranty period, EXCALIBUR ELECTRONICS, INC., will repair or replace the unit free of charge upon receipt of the unit, shipped postage prepaid and insured to the factory address shown at right.

The warranty covers normal consumer use and does not cover damage that occurs in shipment or failure that results from alterations, accident, misuse, abuse, neglect, wear and tear, inadequate maintenance, commercial use, or unreasonable use of the unit. Removal of the top panel voids all warranties. This warranty does not cover cost of repairs made or attempted outside of the factory.

Any applicable implied warranties, including warranties of merchantability and fitness, are hereby limited to 90 DAYS from the date of purchase. Consequential or incidental damages resulting from a breach of any applicable express or implied warranties are hereby excluded. Some states do not allow limitations on the duration of implied warranties and do not allow exclusion of


incidental or consequential damages, so the above limitations and exclusions in these instances may not apply. The only authorized service center in the United States is:

Excalibur Electronics, Inc.
13755 SW 119th Ave
Miami, Florida 33186 U.S.A.
Phone: 305.477.8080
Fax: 305.477.9516

www.ExcaliburElectronics.com

Ship the unit carefully packed, preferably in the original carton, and send it prepaid, and adequately insured. Include a letter, detailing the complaint and including your daytime telephone number, inside the shipping carton. If your warranty has expired and you want an estimated fee for service, write to the above address, specifying the model and the problem.

PLEASE DO NOT SEND
YOUR UNIT WITHOUT
RECEIVING
AN ESTIMATE
FROM SERVICING.
WE CANNOT
STORE YOUR UNIT!

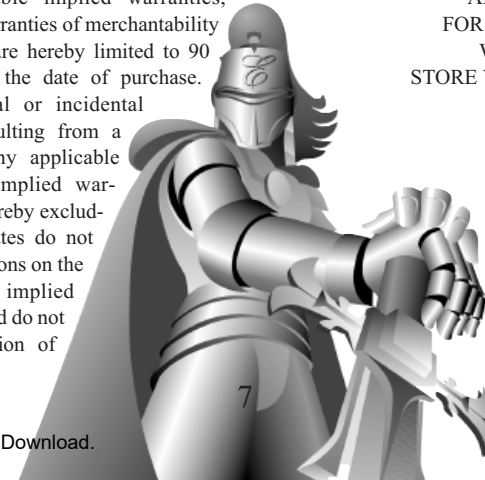

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>