



IMPORTANT:
Refer to www.extron.com for the complete user guide and installation instructions.

VSC 500/700/700D • Setup Guide


CAUTION: Installation and service must be performed by authorized personnel only. These units must be installed in accordance with national and local electrical codes.

To install the VSC 500/700/700D, follow these steps. For detailed instructions see the *VSC 500/700/700D User Guide*.

Step 1

Disconnect all power from the VSC and any input or output devices.

If the scan converter is to be set on top of a table top or other furniture, install the self-adhesive feet on the bottom corners of the VSC. If the VSC is to be rack mounted, mount the scan converter in a rack (see "Mounting the VSC" in the *VSC 500/700/700D User Guide*).

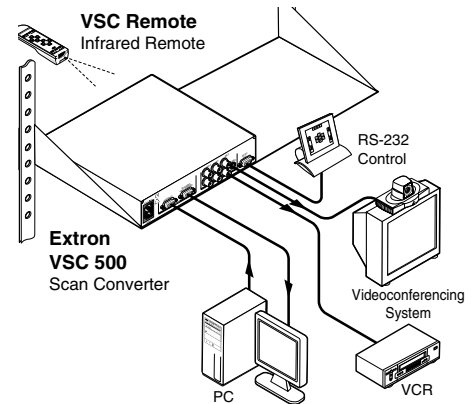


Step 2

Attach an input device and a loop-through device to the rear panel of the VSC 500.

RGB input (VGA) connector

 
Buffered loop-through (VGA) connector



VSC 500

Attach an input device and a loop-through device to the rear panel of the VSC 700/700D.

RGB input connectors and buffered loop-through connectors

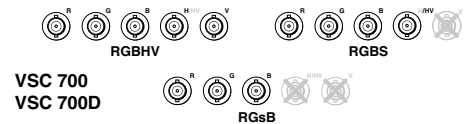

VSC 700
VSC 700D

Step 3

Attach an RGB or component video output device to the rear panel BNC connectors.


Step 4

Attach an S-video device to the S-video mini DIN connector and an SDI device (700D only) to the SDI BNC connector.



Step 5

Plug the VSC, and input and output devices into a grounded AC source, and turn on the input and output devices.

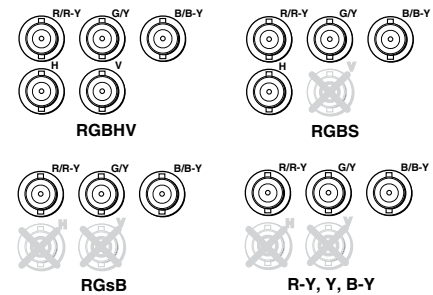

Step 6

Use the LCD menu screens or RS-232 programming to configure the VSC (in the *VSC 500/700/700D User Guide*, see the "Installation and Operation" and the "RS-232 Programmer's Guide" sections).

Step 7

Use the front panel Adjust horizontal (◀▶) and Adjust vertical (⬆⬇) adjustment knobs to center the image, then press the Size button and rotate the knobs to fill the display screen (see "Front Panel Features" in the *VSC 500/700/700D User Guide*).

Step 8

Use the front panel Menu and Next buttons to navigate to the Filters menu. Using the front panel Adjust horizontal (◀▶) or Adjust vertical (⬆⬇) adjustment knobs, adjust the flicker level from the Flicker filter submenu and adjust the detail level from the Horizontal filter submenu (see "Filters menu (Filters)" in the *VSC 500/700/700D User Guide*).

Extron USA - West Headquarters +800.633.9876 Inside USA/Canada Only +1.714.491.1500 +1.714.491.1517 FAX	Extron USA - East +800.633.9876 Inside USA/Canada Only +1.919.863.1794 +1.919.863.1797 FAX	Extron Europe +800.3987.6673 Inside Europe Only +31.33.453.4040 +31.33.453.4050 FAX	Extron Asia +800.7339.8766 Inside Asia Only +65.6383.4400 +65.6383.4664 FAX	Extron Japan +81.3.3511.7655 +81.3.3511.7656 FAX	Extron China +400.883.1568 Inside China Only +86.21.3760.1568 +86.21.3760.1566 FAX	Extron Middle East +971.4.2991800 +971.4.2991880 FAX
--	--	---	---	---	--	---

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>