# Extron<sub>®</sub> Electronics

INTERFACING, SWITCHING AND DISTRIBUTION




# Installation Notes for PMK 450 (70-618-03)

The Extron PMK 450 Projector Mounting Kit can accommodate multiple Extron products of one eighth, quarter, or half rack sizes with power supplies.

The components of the PMK 450 kit are shown in Figure 1. Also included are:

- Set-screw hex wrench (1)
- Security screw hex wrench (1)
- Velcro<sup>TM</sup> Pads for securing power supply (2)
- 4-40 Screws for mounting devices (6)

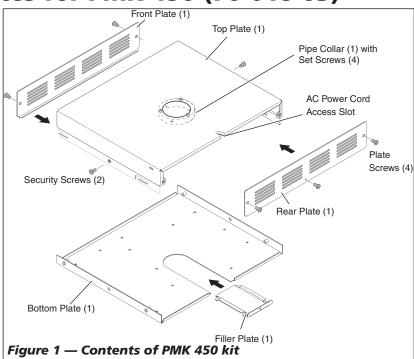

#### **Installation**

**CAUTION** *Maximum load for the PMK 450 is 15 lb (6.8 kg).* 

- 1. Unscrew the front and rear plates and the security screws from the sides. Slide the top and bottom plates apart. The filler plate is attached to the rear plate and should not be removed.
- **2.** Ensure that the mounting pipe is installed with the cable access hole facing the rear, away from the projector screen.
- **3. Loosen the four pipe collar set screws** to allow the top plate to move freely along the pole.
- 4. Slide the top plate up the pipe until the pipe collar is positioned just above the cable access hole (Figure 2). Ensure the rear of the top plate is facing to the rear, in the same direction as the cable access hole in the pipe.
- 5. Level the top plate and secure it by fully tightening the set screws. At least three screws must come in contact with the pipe.
- **6. Route the cables** so that they exit the pipe via the cable access hole (Figure 3).
- 7. Using the supplied 4-40 screws, **secure the devices to the bottom plate**. Figure 3 shows the PVS 204 screwed to the plate with a power supply attached by the supplied Velcro pads.
- **8.** Attach cables to the device(s) and pull excess cable back into the ceiling. Feed the output cables to the projector via the cable access hole and the bottom of the pipe.


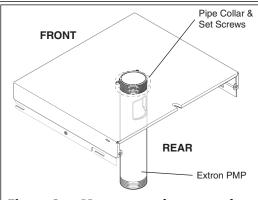



Figure 2 — Mount top plate on pole

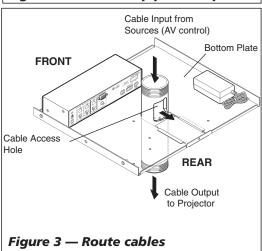


68-1397-01, Rev **B** 11 07

## PMK 450 Installation Notes, cont'd

9. Insert the lugs on the bottom plate into the slots on the top plate and slide the bottom plate into position (Figure 4).

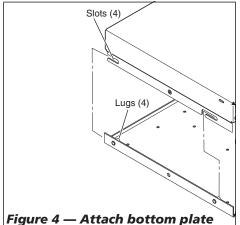

- 10. Lock the top and bottom plates together with the security screws, pass the AC power cord through the slot at the rear of the top plate.
- 11. Reattach the front and rear plates (Figure 5).

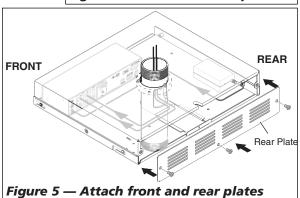

### **Specifications**

2	pecifications	
	Dimensions	2.25" (5.72 cm) H x 12.25" (31.12 cm) W x 11.63" (29.53 cm) D
	Mount application	Mounts to standard 1.5" (3.8 cm) NPT pipes or pipes with external diameters of 1.85" (4.7 cm) to 1.95" (5 cm)
	Material	White powder-coated aluminum
	Maximum load`	15 lb (6.8 kg)
	Product weight	2.35 lbs (1.07 kg)
	Shipping weight	3 lb (1.36 kg)
	Listings	UL, CUL as an accessory, for use with UL listed mount and projector
	Compliances	CE
	Vibration	
	Warranty	3 years parts and labor

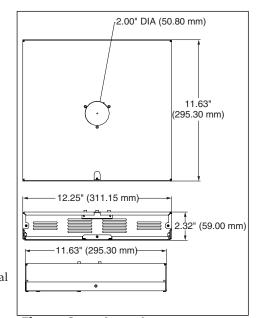


Figure 6 — Dimensions



Extron Electronics, USA 1230 South Lewis Street Anaheim, CA 92805 800.633.9876 714.491.1500 FAX 714.491.1517 Extron Electronics, Europe Beeldschermweg 6C 3821 AH Amersfoort, The Netherlands +800.3987.6673 +31.33.453.4040 FAX +31.33.453.4050 Extron Electronics, Asia 135 Joo Seng Rd. #04-01 PM Industrial Bldg., Singapore 368363 +800.7339.8766 +65.6383.4400 FAX +65.6383.4664

Extron Electronics, Japan Kyodo Building, 16 Ichibancho Chiyoda-ku, Tokyo 102-0082 Japan +81.3.3511.7655 FAX +81.3.3511.7656

© 2007 Extron Electronics. All rights reserved.

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com