

Setup Guide — TPX 88 Series

This sheet provides quick start instructions for an experienced installer to set up and operate the TPX 88 Series matrix switcher.

IMPORTANT:
Refer to www.extron.com for the user manual and installation instructions before connecting the product to the power supply.

About Audio

The TPX 88 A has local audio outputs on 5-pole, 3.5 mm captive screw connectors. These outputs always follow the RJ-45 outputs, regardless of whether the audio follows the video or is broken away from the video in the TP ties.

NOTE The TP transmitters and receivers distribute audio in a proprietary digital channel of the TP link.

- The TPX 88 **cannot** switch this audio.
- The TPX 88 **can** switch this audio and extract it for the local audio connectors.

NOTE The audio distributed by MTP transmitter and receivers is incompatible with the audio extraction and processing capabilities of the TPX 88 A.

- The TPX 88 and the TPX 88 A **cannot** switch the mono audio that is distributed by most MTP transmitters and receivers.
- The TPX 88 and the TPX 88 A **can** switch the stereo audio that is distributed by stereo audio versions of the MTP S-video and composite video transmitters and receivers, but the TPX 88 A cannot extract it for the local connectors.

 
Installation

Step 1 — Mounting

Turn off or disconnect all equipment power sources and mount the MTP switcher as required.

Step 2 — TP inputs and outputs

Terminate up to eight TP input cable and up to eight TP output cables as shown at right. Connect them between the TPX 88 and the TP input and output devices.



NOTE The TPX 88 does not support the remote power capability of some TP transmitters and receivers.

Step 3 — Connect a local audio device (TPX 88 A)


Connect up to eight audio devices to the Audio Outputs connectors. Wire the connectors as shown below.



Pin	T568A Wire color	T568B Wire color
1	White-green	White-orange
2	Green	Orange
3	White-orange	White-green
4	Blue	Blue
5	White-blue	White-blue
6	Orange	Green
7	White-brown	White-brown
8	Brown	Brown

NOTE If you are using Enhanced Skew-Free™ A/V cable, use the TIA/EIA T568A standard only.

 CAUTION Connect the sleeves to ground (Gnd). Connecting the sleeve to a negative (-) terminal will damage the audio output circuits.



Do not tin the wires!



Unbalanced Stereo Output

Balanced Stereo Output


Setup Guide — TPX 88 series (cont'd)

Step 4 — Remote connector

- Connect a serial port controller. Wire the connector as shown in the table at right.
- Use the RS-232/RS-422 DIP switches to configure the port for the desired protocol.

RS-232
All switches up (Default)

RS-422
Switches 1 & 2 down, 3 up

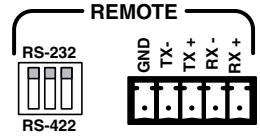


Step 5 — Power

Plug a standard IEC power cord between the power connector and a 100 VAC to 240 VAC, 50 or 60 Hz power source.

Pin	RS-232	Function	RS-422	Function
Gnd	Gnd	Signal ground	Gnd	Signal ground
TX-	—	Not used	TX-	Transmit data (-)
TX+	TX+	Transmit data	TX+	Transmit data (+)
RX-	—	Not used	RX-	Receive data (-)
RX+	RX+	Receive data	RX+	Receive data (+)


Operation — Creating ties

A Tie is an input-to-output connection. An input can be tied to more than one outputs. An output can never be tied to more than one input. Create ties as follows:

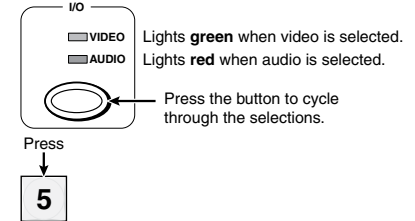

1. TPX 88 A only — Press and release the I/O button to select video and audio, video only, or audio only.
2. Press and release the desired input button.
3. Press and release the desired output button(s).
4. Press and release the Enter button.

Amber indicates video and audio tie.
Green indicates video tie.
Red indicates audio tie.

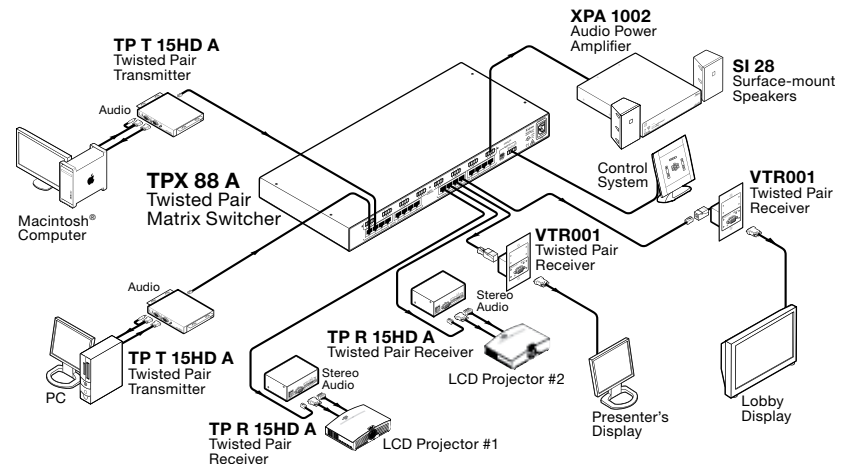

Typical TPX 88 application

Extron USA - West Headquarters +800.633.9876 Inside USA / Canada Only +1.714.491.1500 +1.714.491.1517 FAX	Extron USA - East +800.3987.6673 Inside USA Only +1.919.863.1794 +1.919.863.1797 FAX	Extron Europe +800.7339.8766 Inside Europe Only +31.33.453.4040 +31.33.453.4050 FAX	Extron Asia +800.7339.8766 Inside Asia Only +65.6383.4400 +65.6383.4664 FAX	Extron Japan +81.3.3511.7655 +81.3.3511.7656 FAX	Extron China +400.883.1568 Inside China Only +86.21.3760.1568 +86.21.3760.1566 FAX	Extron Middle East +971.4.2991800 +971.4.2991880 FAX
--	--	---	---	--	--	--

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>