

VTT001 and VTR001 • Setup Guide

This guide provides basic instructions for an experienced installer to set up and operate the VTT001 and VTR001.

Step 1 — Powering down

Power off and disconnect all devices from the power source.

Step 2 — Connecting the TP cable

Connect the RJ-45 connectors of the transmitter and receiver to either end of the TP cable. Terminate the cables using the same standard as shown to the right.

Step 3 — Connecting input/output devices


Using the 15-pin front panel HD connectors, attach RGBHV or RGBS input to the transmitter and a display output to the receiver (see the example application diagram below).

Step 4 — Connecting the power supply


Connect the external power supply to the power input of the transmitter, or the receiver, or to both, then plug the power supply into the AC power source and power on the transmitter/receiver modules and the input/output devices.

NOTES:

- Both transmitter and receiver have remote power capability.
- For transmission distances up to 300 feet, the power is required at either the transmitter or the receiver. Greater distances require power to be applied locally to both the transmitter and the receiver.

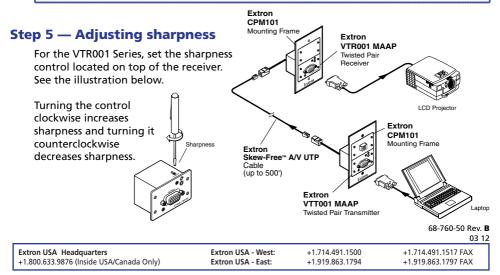

IMPORTANT: Refer to www.extron.com for the Complete user guide and installation uniplete user yurue and instantion instructions before connecting the product to the power source.

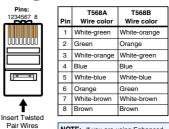

NOTE: If you are using Enhanced Skew-Free™ A/V cable, use theTIA/EIA T568A standard only





Free Manuals Download Website <u>http://myh66.com</u> <u>http://usermanuals.us</u> <u>http://www.somanuals.com</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.com</u> <u>http://www.404manual.com</u> <u>http://www.luxmanual.com</u> <u>http://aubethermostatmanual.com</u> Golf course search by state

http://golfingnear.com Email search by domain

http://emailbydomain.com Auto manuals search

http://auto.somanuals.com TV manuals search

http://tv.somanuals.com