

IR 801 Remote Control Instruction Guide

 
Install two AAA batteries as shown at right.

Operation

The buttons on the IR 801 duplicate the USP 405's front panel controls for normal operation. The USP responds to commands from the IR 801 as if that button or knob were pressed or rotated on the USP. From a distance of no more than 50 feet, the IR 801 sends infrared (IR) signals to the USP 405 via the front panel IR sensor.

NOTE The USP 405 must be powered on and active **before** operating the IR 801.

Refer to the *USP 405 User's Manual* for details.

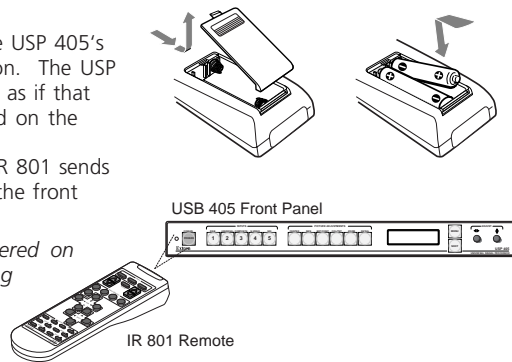

Aspect Ratio Presets

These buttons will recall up to three saved memory presets (sizing and centering information).

Horizontal and Vertical Filters

Use the horizontal filter button to adjust image detail and the vertical filter button to reduce image flicker while maintaining image sharpness.

NOTE For all input formats (except RGB), the **Detail** image adjustments (+ and -) are used instead of the horizontal and vertical filters.

IR 801 Remote Control Instruction Guide

 
Install two AAA batteries as shown at right.

Operation

The buttons on the IR 801 duplicate the USP 405's front panel controls for normal operation. The USP responds to commands from the IR 801 as if that button or knob were pressed or rotated on the USP. From a distance of no more than 50 feet, the IR 801 sends infrared (IR) signals to the USP 405 via the front panel IR sensor.

NOTE The USP 405 must be powered on and active **before** operating the IR 801.

Refer to the *USP 405 User's Manual* for details.

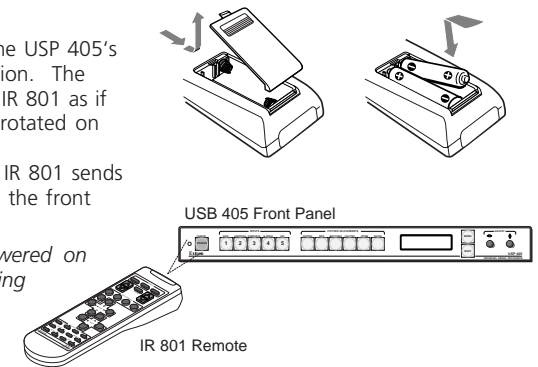

Aspect Ratio Presets

These buttons will recall up to three saved memory presets (sizing and centering information).

Horizontal and Vertical Filters

Use the horizontal filter button to adjust image detail and the vertical filter button to reduce image flicker while maintaining image sharpness.

NOTE For all input formats (except RGB), the **Detail** image adjustments (+ and -) are used instead of the horizontal and vertical filters.

IR 801 Remote Control Instruction Guide

 
Install two AAA batteries as shown at right.

Operation

The buttons on the IR 801 duplicate the USP 405's front panel controls for normal operation. The USP responds to commands from the IR 801 as if that button or knob were pressed or rotated on the USP. From a distance of no more than 50 feet, the IR 801 sends infrared (IR) signals to the USP 405 via the front panel IR sensor.

NOTE The USP 405 must be powered on and active **before** operating the IR 801.

Refer to the *USP 405 User's Manual* for details.

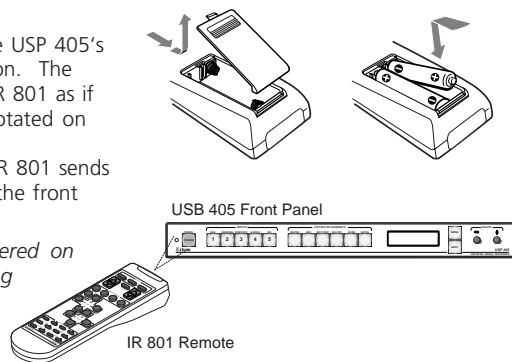

Aspect Ratio Presets

These buttons will recall up to three saved memory presets (sizing and centering information).

Horizontal and Vertical Filters

Use the horizontal filter button to adjust image detail and the vertical filter button to reduce image flicker while maintaining image sharpness.

NOTE For all input formats (except RGB), the **Detail** image adjustments (+ and -) are used instead of the horizontal and vertical filters.

IR 801 Remote Control Instruction Guide

 
Install two AAA batteries as shown at right.

Operation

The buttons on the IR 801 duplicate the USP 405's front panel controls for normal operation. The USP responds to commands from the IR 801 as if that button or knob were pressed or rotated on the USP. From a distance of no more than 50 feet, the IR 801 sends infrared (IR) signals to the USP 405 via the front panel IR sensor.

NOTE The USP 405 must be powered on and active **before** operating the IR 801.

Refer to the *USP 405 User's Manual* for details.

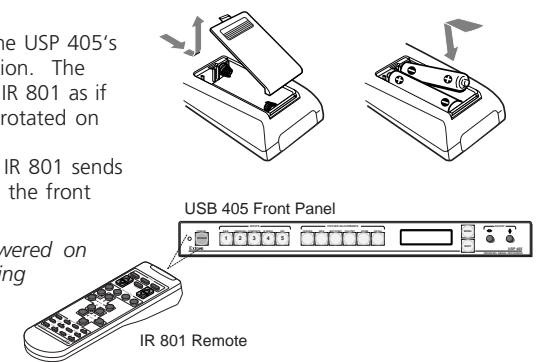

Aspect Ratio Presets

These buttons will recall up to three saved memory presets (sizing and centering information).

Horizontal and Vertical Filters

Use the horizontal filter button to adjust image detail and the vertical filter button to reduce image flicker while maintaining image sharpness.

NOTE For all input formats (except RGB), the **Detail** image adjustments (+ and -) are used instead of the horizontal and vertical filters.

IR 801 Remote Control Instruction Guide, continued

Freeze On/Off

Pressing this button will toggle the Freeze mode On or Off. The Freeze mode freezes the output display.

Input Selection

Press an **Input Selection** button to select one of the five inputs. The corresponding input button will light on the USP 405's front panel.

Size

To adjust image size, press the \blacktriangleup button to increase vertical size, the \blacktriangledown button to decrease the vertical size, the \blacktriangleleft button to increase horizontal size, or the \blacktriangleright button to decrease horizontal size.


Shift

Press the \blacktriangleleft button to shift the image to the left, the \blacktriangleright button to shift the image to the right, the \blacktriangleup button to shift the image up, or the \blacktriangledown button to shift the image down.

Image Adjustments

The + and - picture adjustment controls (**Color, Tint, Brightness, Contrast, Detail, and Zoom**) increment or decrement the picture adjustment settings.

 NOTE While Executive Mode is active, adjustments cannot be made; the adjustment controls are locked in Executive Mode.

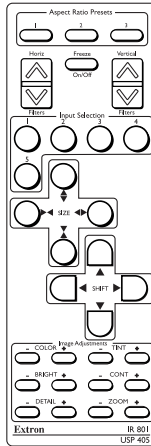

Extron Electronics, USA
1230 South Lewis Street
Anaheim, CA 92805
USA
714.491.1500
Fax 714.491.1517

Extron Electronics, Europe
Beeldschermweg 6C
3821 AH Amersfoort
The Netherlands
+31.33.453.4040
Fax +31.33.453.4050

Extron Electronics, Asia
135 Joo Seng Road, #04-01
PM Industrial Building
Singapore 368363
+65.6383.4400
Fax +65.6383.4664

Extron Electronics, Japan
Daisan DMJ Building 6F
3-9-1 Kudan Minami
Chiyoda-ku, Tokyo 102-0074 Japan
+81.3.3511.7655
Fax +81.3.3511.7656

68-543-05
Rev. A
03 02

IR 801 Remote Control Instruction Guide, continued

Freeze On/Off

Pressing this button will toggle the Freeze mode On or Off. The Freeze mode freezes the output display.

Input Selection

Press an **Input Selection** button to select one of the five inputs. The corresponding input button will light on the USP 405's front panel.

Size

To adjust image size, press the \blacktriangleup button to increase vertical size, the \blacktriangledown button to decrease the vertical size, the \blacktriangleleft button to increase horizontal size, or the \blacktriangleright button to decrease horizontal size.


Shift

Press the \blacktriangleleft button to shift the image to the left, the \blacktriangleright button to shift the image to the right, the \blacktriangleup button to shift the image up, or the \blacktriangledown button to shift the image down.

Image Adjustments

The + and - picture adjustment controls (**Color, Tint, Brightness, Contrast, Detail, and Zoom**) increment or decrement the picture adjustment settings.

 NOTE While Executive Mode is active, adjustments cannot be made; the adjustment controls are locked in Executive Mode.

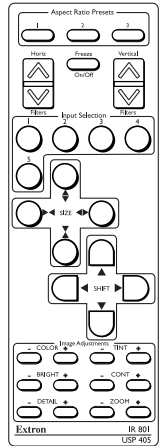

Extron Electronics, USA
1230 South Lewis Street
Anaheim, CA 92805
USA
714.491.1500
Fax 714.491.1517

Extron Electronics, Europe
Beeldschermweg 6C
3821 AH Amersfoort
The Netherlands
+31.33.453.4040
Fax +31.33.453.4050

Extron Electronics, Asia
135 Joo Seng Road, #04-01
PM Industrial Building
Singapore 368363
+65.6383.4400
Fax +65.6383.4664

Extron Electronics, Japan
Daisan DMJ Building 6F
3-9-1 Kudan Minami
Chiyoda-ku, Tokyo 102-0074 Japan
+81.3.3511.7655
Fax +81.3.3511.7656

68-543-05
Rev. A
03 02

IR 801 Remote Control Instruction Guide, continued

Freeze On/Off

Pressing this button will toggle the Freeze mode On or Off. The Freeze mode freezes the output display.

Input Selection

Press an **Input Selection** button to select one of the five inputs. The corresponding input button will light on the USP 405's front panel.

Size

To adjust image size, press the \blacktriangleup button to increase vertical size, the \blacktriangledown button to decrease the vertical size, the \blacktriangleleft button to increase horizontal size, or the \blacktriangleright button to decrease horizontal size.


Shift

Press the \blacktriangleleft button to shift the image to the left, the \blacktriangleright button to shift the image to the right, the \blacktriangleup button to shift the image up, or the \blacktriangledown button to shift the image down.

Image Adjustments

The + and - picture adjustment controls (**Color, Tint, Brightness, Contrast, Detail, and Zoom**) increment or decrement the picture adjustment settings.

 NOTE While Executive Mode is active, adjustments cannot be made; the adjustment controls are locked in Executive Mode.

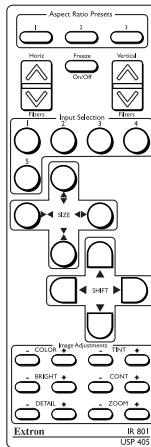

Extron Electronics, USA
1230 South Lewis Street
Anaheim, CA 92805
USA
714.491.1500
Fax 714.491.1517

Extron Electronics, Europe
Beeldschermweg 6C
3821 AH Amersfoort
The Netherlands
+31.33.453.4040
Fax +31.33.453.4050

Extron Electronics, Asia
135 Joo Seng Road, #04-01
PM Industrial Building
Singapore 368363
+65.6383.4400
Fax +65.6383.4664

Extron Electronics, Japan
Daisan DMJ Building 6F
3-9-1 Kudan Minami
Chiyoda-ku, Tokyo 102-0074 Japan
+81.3.3511.7655
Fax +81.3.3511.7656

68-543-05
Rev. A
03 02

IR 801 Remote Control Instruction Guide, continued

Freeze On/Off

Pressing this button will toggle the Freeze mode On or Off. The Freeze mode freezes the output display.

Input Selection

Press an **Input Selection** button to select one of the five inputs. The corresponding input button will light on the USP 405's front panel.

Size

To adjust image size, press the \blacktriangleup button to increase vertical size, the \blacktriangledown button to decrease the vertical size, the \blacktriangleleft button to increase horizontal size, or the \blacktriangleright button to decrease horizontal size.


Shift

Press the \blacktriangleleft button to shift the image to the left, the \blacktriangleright button to shift the image to the right, the \blacktriangleup button to shift the image up, or the \blacktriangledown button to shift the image down.

Image Adjustments

The + and - picture adjustment controls (**Color, Tint, Brightness, Contrast, Detail, and Zoom**) increment or decrement the picture adjustment settings.

 NOTE While Executive Mode is active, adjustments cannot be made; the adjustment controls are locked in Executive Mode.

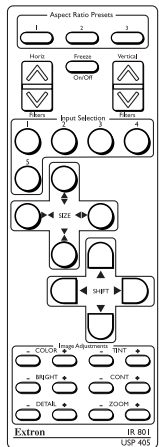

Extron Electronics, USA
1230 South Lewis Street
Anaheim, CA 92805
USA
714.491.1500
Fax 714.491.1517

Extron Electronics, Europe
Beeldschermweg 6C
3821 AH Amersfoort
The Netherlands
+31.33.453.4040
Fax +31.33.453.4050

Extron Electronics, Asia
135 Joo Seng Road, #04-01
PM Industrial Building
Singapore 368363
+65.6383.4400
Fax +65.6383.4664

Extron Electronics, Japan
Daisan DMJ Building 6F
3-9-1 Kudan Minami
Chiyoda-ku, Tokyo 102-0074 Japan
+81.3.3511.7655
Fax +81.3.3511.7656

68-543-05
Rev. A
03 02

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>