

POWERSHRED® 63Cb THE WORLD'S TOUGHEST SHREDDERS[™]



Please read these instructions before use. Do not discard: keep for future reference.



Quality Office Products Since 1917



KEY

A.	SafeSense® Technology	E.
B.	Paper entry	
ſ	Pull-out Rin	

- D. Window
- . Disconnect power switch O 1. OFF 2. ON
 - F. See safety instructions
- G. Control Switch and Indicator lights
 - I. Reverse
 - O 2.0FF
 - 3. Auto On (blue) \triangleright
 - 🕮 4. SafeSense® indicator (vellow)
 - l 5. Overheat (red)
 - 6. Door open (red)
 - 7. Remove Paper (red)

CAPABILITIES

Will shred: Paper, credit cards, staples and small paper clips

Will not shred: Adhesive labels, CD/DVDs, continuous form paper, transparencies, newspaper, cardboard, large paper clips, laminates, file folders, X-rays or plastic other than noted above

Paper shred size:

Maximum:	
Sheets per pass	
Cards per pass	
Paper entry width	

*A4 (70g), paper at 220-240V/50/60 Hz, 1.4Amps; heavier paper, humidity or other than rated voltage may reduce capacity. Maximum recommended daily usage rates: 200 sheets; 10 credit cards. (10 sheets per pass.

Fellowes SafeSense® shredders are designed to be operated in home and office environments ranging between 50 - 80 degrees Fahrenheit (10 - 26 degrees Celsius) and 40 - 80% relative humidity.

🛦 WARNING: IMPORTANT SAFETY INSTRUCTIONS — Read Before Using!

- i Operation, maintenance, and service requirements are covered in the ٠ instruction manual. Read the entire instruction manual before operating shredders.
- Keep away from children and pets. Keep hands away from paper entry. Always set to off or unplug when not in use.
- Keep foreign objects gloves, jewelry, clothing, hair, etc. away from shredder openings. If object enters top opening, switch to Reverse (to back out object.
- Never use aerosol products, petroleum based lubricants or other flammable products on or near shredder. Do not use canned air on shredder.
 - Do not use if damaged or defective. Do not disassemble shredder. Do not place near or over heat source or water.

- This shredder has a Disconnect Power Switch (E) that must be in the ON (I) position to operate shredder. In case of emergency, move switch to OFF (0) position. This action will stop shredder immediately.
- Avoid touching exposed cutting blades under shredder head.
- Shredder must be plugged into a properly grounded wall outlet or socket of • the voltage and amperage designated on the label. The grounded outlet or socket must be installed near the equipment and easily accessible. Energy converters, transformers, or extension cords should not be used with this product.
- FIRE HAZARD Do NOT shred greeting cards with sound chips or batteries.
- For indoor use only.
- Unplug shredder before cleaning or servicing.

BASIC SHREDDING OPERATION



Continuous operation: Up to 8 minutes maximum NOTE: Shredder runs briefly after each pass to clear entry. Continuous operation beyond 8 minutes will trigger 20-minute cool down period.

PAPER/CARD



Plug in and put disconnect power switch in ON (1) position





Л

Feed paper/card straight into paper entry and release

1	4		
	KM	0	\triangleright

When finished shredding set to OFF (O)

KКI \cap

Set to Auto On (\triangleright)

ADVANCED PRODUCT FEATURES



Jam Blocker™ Blocks jams before they start



JAM BLOCKERTM

SafeSense® Technology Stops shredding immediately when hands touch the paper opening

ERGY savings system 🚽

Energy Savings System Optimal energy efficiency 100% of the time - in use and out of use





 
SAFE

SET-UP AND TESTING

Set to Auto On (\triangleright)

KК

If Remove Paper icon () is illuminated, there is too much paper for the shredder to power through



Reduce paper quantity to an acceptable amount and refeed into paper entry

Stops shredding immediately when hands touch the paper opening.

SafeSense® is active and

working properly

SAFESENSE® TECHNOLOGY



Shredder pauses for 3 seconds

If hand is held on SafeSense®

area more than 3 seconds

shredder will shut off

Set to Reverse (ICIC)



and remove paper

If Remove Paper icon illuminates during the shredding process

Set to Auto On (\triangleright) and refeed into paper entry

ENERGY

savings system 🚽

ENERGY SAVINGS SYSTEM

Optimal energy efficiency 100% of the time in use and out of use.

- Saves energy in four ways: energy-efficient electronics, jam prevention, • standby mode and sleep mode.
- Sleep Mode shuts down shredder after 2 minutes of inactivity.

 
2

KК

WHEN IN SLEEP MODE



CLEANING AUTO-START INFRARED SENSORS





OFF (O), then Auto On (\triangleright)

Paper detection sensors are designed for maintenance free operation. However, on rare occasions, the

sensors may become blocked by paper dust causing the motor to run even if there is no paper present.



PRODUCT MAINTENANCE

OILING SHREDDER 🛃

 
All cross-cut shredders require oil for peak performance. If not oiled, a machine may experience diminished sheet capacity, intrusive noise when shredding and could ultimately stop running. To avoid these problems, we recommend you oil your shredder each time you empty your waste bin.

Touch test area and

look for the SafeSense®

indicator to illuminate

FOLLOW OILING PROCEDURE BELOW AND REPEAT TWICE



*Apply oil across entry

Press and hold Reverse (K ⊂) 2-3 seconds

CAUTION *Only use a non-aerosol vegetable oil in long nozzle container such as Fellowes 35250

TO CLEAN THE SENSORS



(Note: two paper detection sensors are located in the center of the paper entry).

Locate Auto-start infrared sensor



rubbing alcohol

Using cotton swab, wipe away any contamination from the paper sensors

Go to Support Section at <u>www.fellowes.com</u> or see back page of manual for useful telephone numbers.

TROUBLESHOOTING

Overheat Indicator: When the Overheat Indicator is illuminated, the shredder has exceeded its maximum operating temperature and needs to cool down. This indicator will remain illuminated and the shredder will not operate for the duration of the recovery time. See Basic Shredding Operation for more information about the continuous operation and recovery time for this shredder.

KKI 0

Turn off (O) and

unplug shredder

Bin Open: The shredder will not run if the bin is open. When illuminated, close the bin to resume shredding.



Remove Paper: When illuminated, press reverse (🖂) and remove paper. Reduce paper quantity to an acceptable amount and refeed into paper entry.

SafeSense® Indicator: If hands are too close to the paper entry, the SafeSense® indicator will illuminate and the shredder will stop shredding. If SafeSense® is active for 3 seconds, the shredder will automatically turn off and the user must set the switch to OFF (O), then Auto On (\triangleright) to resume shredding.



POWERSHRED[®] 63Cb THE WORLD'S **TOUGHEST** SHREDDERS[™]

Declaration of Conformity

Fellowes Manufacturing Company

Yorkshire Way, West Moor Park, Doncaster, South Yorkshire, DN3 3FB, England declares that the product Model 63Cb conforms with the requirements of the Restriction of Hazardous Substances Directive (2011/65/EU), the Low Voltage Directive (2006/95/EC), the Electromagnetic Compatibility Directive (2004/108/EC), the WEEE directive (2002/96/EC), and below harmonized European EN Standards.

Safety: EN 60950-1

EMC Standard: EN55014-1 EN55014-2 EN61000-3-2 EN61000-3-3

Year Affixed: 12

Itasca, Illinois, USA January 1, 2013



W.E.E.E.

This product is classified as Electrical and Electronic Equipment. Should the time come for you to dispose of this product please ensure that you do so in accordance with the European Waste of Electrical and Electronic Equipment (WEEE) Directive and in compliance with local laws relating to this directive.

For more information on the WEEE Directive please visit www.fellowesinternational.com/WEEE

LIMITED PRODUCT WARRANTY

exclusive remedy will be repair or replacement, at Fellowes' option and expense, of the defective part. This warranty does not apply in cases of abuse, mishandling, failure to comply with product usage standards, shredder operation using an improper power supply (other than listed on label), or unauthorized repair. Fellowes reserves the right to charge the consumers for any

Limited Warranty: Fellowes, Inc. ("Fellowes") warrants the parts of the machine to be free of defects in material and workmanship and provides service and support for 2 years from the date of purchase by the original consumer. Fellowes warrants the cutting blades of the machine to be free from defects in material and workmanship for 5 years from the date of purchase by the original consumer. If any part is found to be defective during the warranty period, your sole and TO THE APPROPRIATE WARRANTY PERIOD SET FORTH ABOVE. In no event shall Fellowes be liable for any consequential or incidental damages attributable to this product. This warranty gives you specific legal rights. The duration, terms, and conditions of this warranty are valid worldwide, except where different limitations, restrictions, or conditions may be required by local law. For more details or to obtain service under this warranty, please contact us or your dealer.

Australia Residents Only:

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. The benefits under Fellowes' Warranty are in addition to other rights and remedies under a law in relation to the shredder.

www.fellowes.com	Customer Service & Support
Troubleshooting	Troubleshooting
Registration	Replacement parts
Manuals	General questions
Australia	+61-1-800-33-11-77
Europe	00-800-1810-1810
United Kingdom	+44-(0)-1302-836800
United States	+1-800-955-0959

Questions or Concerns?

ellowes 1789 Norwood Avenue, Itasca, Illinois 60143-1095 • USA • 630-893-1600

www.fellowes.com

Free Manuals Download Website <u>http://myh66.com</u> <u>http://usermanuals.us</u> <u>http://www.somanuals.com</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.com</u> <u>http://www.404manual.com</u> <u>http://www.luxmanual.com</u> <u>http://aubethermostatmanual.com</u> Golf course search by state

http://golfingnear.com Email search by domain

http://emailbydomain.com Auto manuals search

http://auto.somanuals.com TV manuals search

http://tv.somanuals.com