

POWERSHRED_®

OPERATING INSTRUCTIONS
NOTICE D'UTILISATION
MANUAL DEL PROPIETARIO
BETRIEBSANLEITUNG

 


480 C-480 480C C-480C 480-2HS C-480HS



ENGLISH	Paper shredder Fellowes 480 / 480C / 480-2HS 3 - 8
FRANÇAIS	Déchiqueteuse Fellowes 480 / 480C / 480-2HS 9 - 14
ESPANÕL	Destructora de documentos Fellowes 480 / 480C / 480-2HS 15 - 20
DEUTSCH	Aktenvernichter Fellowes 480 / 480C / 480-2HS 21 - 26

2 Edition 01/03






Coı	Page	
1.	Important Safety Instructions	4
2.	Parts Identification	4
3.	Technical Specifications	5
4.	Supplies	6
5.	Installation	6
6.	Caution	6
7.	Operation	6
8.	Checklist for Inoperative Machine	7
9.	Malfunctions	7
10.	Maintenance	7
11.	Warranty	8
12.	Contact for Service	8



1. Important Safety Instructions

- 1. Read all instructions before use.
- 2. Save these instructions for later use.
- 3. Follow all warnings and instructions marked on the product.
- 4. Unplug this product from the wall outlet before cleaning. Clean with a damp cloth using a mild soap and water solution. (Do not use abrasives or petroleum based cleaners.)
- 5. Place this product as close as possible to power source for quick and easy unplugging.
- 6. Do not use this product near water.
- 7. This product should never be placed near or over a radiator or heat source.
- 8. Operate from the type power source indicated on the marking label. If you are not sure of the type of power available, consult your dealer or local electricity board.
- Do not allow anything to rest on the power cord.Do not place this product where people may walk on the cord.
- If an extension cord is used with this product, make sure that the total of the ampere ratings on the products plugged into the extension cord do not exceed the extension cord ampere rating.
- 11. Do not attempt to service this product yourself, as opening or removing covers may expose you to dangerous live parts or other risks.
- Unplug this product and refer servicing to qualified personnel under the following conditions:
- A) When the power cord or plug is damaged or fraved.
- B) If liquid has been spilled on the product.
- C) If the product has been exposed to rain.
- D) If the product does not operate normally when the operating instructions are followed.
- E) If the product has been dropped or the casing has been damaged.
- 13. Keep out of the reach of children.
- 14. This shredder should be operated only with an operator in attendance.
- 15. Do not use flammable synthetic oil, petroleumbased products, or aerosols of any kind on or near shredder at any time.

2. Parts Identification

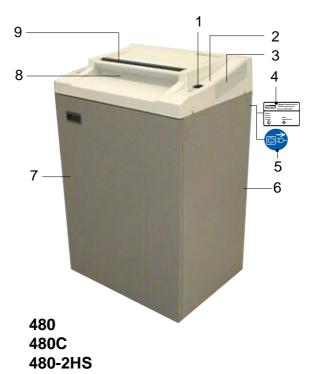

- 1. Rocker switch
- 2. LED display
- 3. Cover
- 4. Serial label
- 5. Caution label
- 6. Cabinet
- 7. Cabinet access door
- 8. Paper feed opening
- 9. Paper guide roller

4 Edition 01/03



3. Technical Specifications

	Model 480			del 0C	Model 480-2HS	
Cutting Style	Strip Cut		Cross	s Cut	High Security Cross Cut	
Shred Size	5/32" (3.9 mm)	7/32" (5.8 mm)	5/32" x 1 1/2" (3.9 x 40 mm)		1/25" x 1/5" (1 x 5 mm)	
*Sheet capacity U.S. (75 g/m²):	N/A	36 - 38	22 - 24	N/A	7	
Europe (70 g/m²):	28 - 30	38 - 40	24 - 26	15 - 17	7 - 8	
Speed	32 FPM (160 mm/sec)		30 F (150 m	FPM nm/sec)	43 FPM (220 mm/sec)	
Entry width				16" (400 mm)		
Motor power 120 Volt 60 Hz units: 1.93 H.P. 230 Volt 50 Hz units: 1.4 kW						
Voltage (Depending on country)						
Dimensions (H x W x E	D)			36 1/4" x 23 1/2" x 18 1/2" (921 x 597 x 470 mm)		
Weight	114 lbs (5	52 kg)	128 lbs	(58 kg)	131 lbs (59 kg)	
Waste container volume			39.1 gallons	- 39.1 gallons (148 liters)		
Noise level			In Idle	56 dB ———		

In Idle 56 dB
Under load 62 dB strip cuts and 70 dB cross cuts

* Paper DIN 19307 SM 4a - 70



4. Supplies

- Bags for cut material (Packed in dispenser carton, 50 or 100 bags to a roll depending on size. Contact Fellowes or your local Fellowes dealer for the stock number of the bag that fits your machine.)
- Cutting block oil for cross-cut units Stock # 35250

5. Installation

- Refer to separate set—up instructions for proper assembly
- Operate this product only from the type of power source indicated on the marking label
- Install the paper shredder so that the plug is easily accessible
- Shredder must be operated only in upright position
- Set up paper shredder so that the ventilation slots are unobstructed. To ensure sufficient ventilation of the shredder a minimum distance of 4" (10 cm) to the wall or to the furniture must be maintained.

6. Caution



Never insert hand, fingers or any foreign objects into the feed opening.

Serious injury may result.



Keep all loose articles of clothing, ties, jewelery, long hair or other loose objects away from feed opening.

Injury may result.



Always turn off and unplug the machine before moving, servicing, cleaning or any other conduct other than normal operation.

Serious injury may result.

Before start-up

 Undo the wing screws securing the unit during transportation



7. Operation



Read operating instructions **before** putting shredder into operation



Insert plug in power outlet

Install waste bag for shredded material

- Open front door and completely remove bag frame from cabinet
- Fold new bag around frame.
 Allow bag to overhang frame by approximately 7" (20 cm).
- Slide frame with bag back into cabinet
- Close cabinet door.

Switching equipment ON



- Press rocker switch to pos. 1
- Switch locks in "on" position
- Equipment is ready for operation (stand by)
- Green LED lights

- Feed paper

- The shredding process is started by photo-cells in the paper feed opening. Insert paper and shredding begins automatically.
- When the shredding is complete, the cutting system automatically stops after approx. 3 sec.


Switching equipment OFF



- Press rocker switch to pos. 2
 - Switch resets to center position and the machine is turned off.

Feeding continuous forms

 Pass the leading edge of the form under the paper guide roller (1) and into the paper feed opening (2).

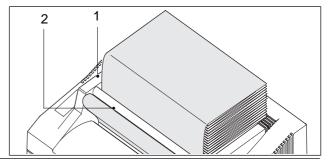

6 Edition 01/03



8. Checklist for Inoperative Machine

If the equipment does not work properly, please check the following points first:

- Is the plug inserted?
- Is the switch turned on?
- Is the cabinet door closed?
- Is waste receptacle full?
 Empty waste bag.
- Is there a paper jam in the shredder?
- Is the motor overheated?
 Switch machine off and allow motor to cool down for approximately 15–20 min.

If none of the above applies and the equipment stil does not run, please contact our customer service department.

9. Malfunctions

Paper jam



Red LED lights



 Press and hold down rocker switch in pos. 2 to reverse the cutting system and back out jammed material (paper is pushed out)



Caution!



Do not attempt to force the jammed material through the machine by alternating the cutting system between forward and reverse

· Remove excess paper



 Return switch to pos. 1 and continue shredding in smaller quantities so as not to jam the machine further

Note:

The 480-2HS *will not run* forward again unless the jammed material has been completely removed from the throat

Motor Overheating



Red LED lights
Paper shredder switches off automati-



- Tap rocker switch pos. 2
 - Rocker switch resets to zero position
- Allow shredder to cool down for approximately 15-20 minutes.



 Return switch to "on" position (1) and continue shredding.

Cabinet door ajar / bag full



Red LED lights
Paper shredder switches off automatically.



- Tap rocker switch pos. 2
 - Rocker switch resets to zero position
- Make sure cabinet door is properly closed and/or empty waste bag.



• Return switch to "on" position (1) and continue shredding.

10. Maintenance

(Cross cut unit only)

- When shredding capacity drops or the noise increases
 - Apply oil over full width of cutting cylinders through the paper entry (Fellowes Powershred Lubricant # 35250).

CAUTION: Do not use flammable synthetic oil, petroleum-based products, or aerosol lubricants of any kind.



- Run cutting system forward and backward several times without feeding paper
- Continue shredding

Edition 01/03 7



11. Warranty

Limited Warranty

Fellowes, Inc. warrants the cutting cylinders of the machine to be free from defects in material and workmanship for 20 years from the date of purchase by the original consumer in the case of models 320. 320C, 380, 380C, 420, 420C, 520 and 520C or 5 years from the date of purchase by the original purchaser in the case of models 320-2HS, 420-2HS and 480-2HS. Fellowes warrants all other parts of the machine to be free of defects in material and workmanship for 2 years from the date of purchase by the original consumer (applies to all models covered in this manual). If any part is found to be defective during the warranty period, your sole and exclusive remedy will be repair or replacement, at Fellowes' option and expense, of the defective part. This warranty does not apply in cases of abuse, mishandling or unauthorized repair. ANY IMPLIED WARRANTY, INCLUDING THAT OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, IS HEREBY LIMITED IN DURATION TO THE APPROPRIATE WARRANTY PERIOD SET FORTH ABOVE. IN NO EVENT SHALL FELLOWES BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES ATTRIBUTABLE TO THIS PRODUCT. This warranty gives you specific legal rights. You may have other legal rights that vary from this warranty. The duration, terms and conditions of this warranty are valid worldwide, except where different limitations, restrictions or conditions may be required by local law. For more details or to obtain service under this warranty, please see below.

Fellowes offers toll free consumer service in the following regions: United States, Canada, Mexico, Australia, and Europe. Residents in these regions should contact the appropriate Consumer Helpline located on the back of this manual.

If you are unable to access the Consumer Helpline from your calling area, call the nearest Fellowes location, also listed on the back of this manual. You may also contact your local dealer, contact us online at www.fellowes.com or write to us at:

Fellowes, Inc.

ATTN: Customer Service 1789 Norwood Avenue Itasca, IL 60143 USA

12. Contact for Service

Consumer Helpline

 Australia
 1-800-33-11-77

 Canada
 1-800-665-4339

 Mexico
 001-800-234-1185

 United States
 1-800-955-0959

 Europe
 00 800 1810 1810

Fellowes Locations

Australia	011-613 93303211			
Benelux	011-31-3473-77988			
Canada	905-475-6320			
France	+ 33 (0) 2-99-22-71-22			
Germany	+ 39 (0) 5131-4977-0			
Italy	+ 39 (0) 071-730041			
Japan	011-81-3-5496-2401			
Korea	82-2-3464-2884			
Poland	+ 48-22-837-7356			
Singapore	65-6221-3811			
United Kingdom	+ 44 (0) 1302-836836			



Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com