

PAPER SHREDDER Personal Series

DESTRUCTEUR DE DOCUMENTS Série usage personnel

DESTRUCTORA DE DOCUMENTOS Serie de uso personal

MODELS / MODÈLES / MODELOS S70-2, P700-2, S50-2, P500-2, P500-2W

USE AND CARE MANUAL

MANUEL D'EMPLOI ET D'ENTRETIEN

MODO DE EMPLEO Y DE CUIDADO

PLEASE READ AND SAVE THIS MANUAL WITH YOUR ORIGINAL RECEIPT Customer Service: 1-800-955-0959

VEUILLEZ LIRE CE MANUEL ET LE CONSERVER AVEC LE TALON D'ACHAT Service clientèle (Canada) : 1-800-665-4339

POR FAVOR, LEA Y GUARDE ESTE MANUAL CON EL RECIBO ORIGINAL Dpto. de Atención al Cliente: 1-800-955-0959

	S70-2, P700-2	S50-2, P500-2, P500-2W		
Sheet capacity*:	11	8		
Shred type:	Strip	Strip		
Shred size:	1/4 ["]	1/4 ["]		
Entry width:	9"	9"		
Recommended use:	10-20 shredd	10-20 shredding passes per day		
Maximum running time:	5-7 min. on / 15 minutes off			
*Sheet capacity measured with 20 lb., 8-1/2"	x 11" paper with the shredder operating a	ıt rated voltage.		
Different paper weights, humidity, and elect		U		

	S70-2, P700-2	S50-2, P500-2, P500-2W	
Capacité de destruction (feuilles)* :	11	8	
Type des déchets :	Bandes	Bandes	
Dimension des déchets :	6,3 mm	6,3 mm	
Largeur d'entrée :	230 mm	230 mm	
Emploi recommandé :	10 à 20 passages de feuilles par jour		
Cycles d'utilisation conseillés :	5 à 7 minutes marche / 15 minutes arrêt		
*Capacité de destruction mesurée pour du papier 20 tension nominale. Les différents grammages du pa	• • •		

	S70-2, P700-2	S50-2, P500-2, P500-2W	
Capacidad de destrucción (hojas)*:	11	8	
Tipo de corte:	Tiras	Tiras	
Dimensión de corte:	1/4" (6,3 mm)	1/4" (6,3 mm)	
Ancho de entrada:	9" (230 mm)	9" (230 mm)	
Uso recomendado:	de 10 a 20 pasadas diarias por la destructora		
Tiempo máx. de funcionamiento:	5-7 min. encendido / 15 min. apagado		
*La capacidad de destrucción se calculó con hojas a nominal. Cambiando el peso del papel, la humed		•	

IMPORTANT SAFEGUARDS

PARTS OF THE SHREDDER

WARNING


- NEVER insert hands or fingers into paper entry as serious personal injury may result.
- THIS MACHINE IS NOT A TOY. Keep children and pets away from shredder AT ALL TIMES as serious injury may result. Always unplug shredder when not in use.
- Keep loose objects (jewelry, ties, long hair) away from shredder. These items and others like them may cause serious injury if they accidentally fall into the paper entry.

ACAUTION

- Do not exceed recommended sheet capacity.
- Do not shred plastic (except credit cards), continuous forms, adhesive labels, transparencies, newsprint, or cardboard.
- This personal shredder is intended for paper only. Do not attempt to shred paper clips or other hard materials (except staples).
- Do not place shredder near or over a heat source or water.
- Always turn off and unplug unit before moving or cleaning and when not in use.
- Do not insert aerosol cleaners or lubricants into or around the shredder. Some agents may combust, causing serious injury.
- Do not use this product if it or the cord has been damaged in any way.
- Do not open the cover for any reason. Doing so can expose you to dangerous voltages and will void your warranty.

Power Cord Care

- Place power cord in an easily accessible position, because it is the main disconnect switch.
- Do not place machine where adults, children or animals may walk on the cord.
- Do not rest anything on the power cord.
- If an extension cord is used, be sure that all products plugged into the extension cord do not exceed the extension cord ampere rating.

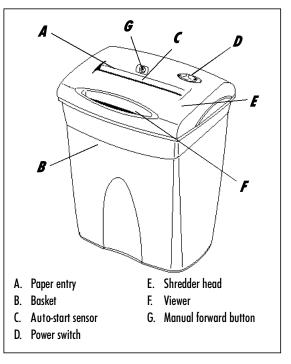

ASSEMBLY

To assemble shredder head onto basket

- 1. Position shredder head over basket as shown in Figure 1.
- 2. Lower shredder head onto basket aligning the rim on the underside of the shredder head with the edge of the basket.

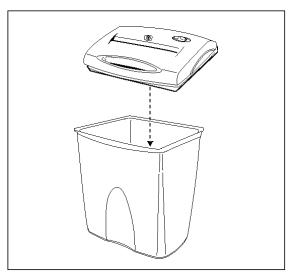


Figure 1

OPERATION

AWARNING this product features an auto-start sensor. This sensor will turn on the cutting blades whenever

anything is inserted into the paper entry (while the power switch is in the **AUTO** (I) position). For the safety of pets and children, we recommend always moving the power switch to **OFF** (0) and unplugging whenever the shredder is unattended or not in use.

- 1. Assemble shredder head to basket (see "ASSEMBLY").
- Remove any paper clips or other foreign objects (except staples) from paper. If folding paper to fit paper entry, adjust sheet capacity appropriately.

ACAUTION

Do not attempt to shred paper clips or other hard materials (except staples) with this

machine. Extensive use of paper clips or other hard materials will result in damage to the cutting system and will void the manufacturer's warranty.

- 3. Be sure power switch is in the **OFF** (0) position. Plug shredder into the proper power supply outlet.
- Move power switch to AUTO (I) position. As soon as the unit is turned on, it is in autostart mode, ready to be fed paper through

AWARNING the paper entry. NEVER insert ha

NEVER insert hands or fingers into paper entry as Serious personal injury may result. Do not exceed recommended sheet capacity (see

"Product Usage Guide" on page 1).

5. Slide paper **straight** into paper entry until the shredder automatically begins shredding.

The shredder automatically stops when shredding is complete.

Continue shredding as desired to a **MAXIMUM shredding time** of 5-7 minutes. At this time, the machine MUST be allowed to "cool down" for a **MINIMUM of 15 minutes**. (See "Cool-Down Cycle" section for more information.)

If the shredder jams or shuts off before the maximum shredding time, see "Clearing a Jam" section for further instructions.

- Move power switch to OFF (0) position when shredding is complete.
- 7. Unplug power cord from outlet when shredder is not in use.
- Look through viewer to see if basket is full. If full, lift off shredder head and empty basket contents. Replace shredder head into position on basket.

Cool-Down Cycle

This shredder is protected with a special safety feature which prevents the motor from overheating with extensive use. When shredding is attempted beyond the machine's maximum run ning time, the shredder will automatically shut off its motor until it has cooled to an acceptable oper ating level. This is normal and the shredder will return to operation after the "cool-down" period. See "Product Usage Guide" (page 1) for maximum running time and related cooling or "off" time.

Clearing a Jam

If the shredder sheet capacity is exceeded or paper is not put in straight, a jam may result. See "Product Usage Guide" (page 1) for maximum sheet capacity for your shredder. In the case of a jam, the machine will "bog down" and fail to shred the paper. *To clear a jam:*

- Move the power switch to the **REVERSE** (R) position. (If waste basket is full, empty it before clearing jam.) The shredder will reverse the paper to clear the jam.
- If the shredder jams in reverse, move the power switch to AUTO

 (1), depress the manual forward button (1), depress the manual forward button (1), and allow to run for about five seconds. If jam does not clear, move power switch to REVERSE (R) again and allow to run for about five seconds. Repeat this procedure until the jam is cleared. If necessary, use care to grasp the paper and pull out to clear the jam.
- 3. Once the jam is cleared, move the power switch to AUTO (I) for continued shredding or OFF (0) if shredding is complete.

TROUBLESHOOTING

Shredder will not operate.	 a. Shredder is not plugged in. b. Power switch is in the OFF (0) position. Move switch to AUTO (1) position. c. Shredder is jammed. See "Clearing a Jam" section. d. Shredder has exceeded the maximum run time and requires a "cooldown" time. See "Product Usage Guide" (page 1). 		
Shredder suddenly stops while shredding.	 a. Shredder has exceeded the maximum run time and requires a "cool-down" time. See "Product Usage Guide" (page 1). b. Shredder is jammed. See "Clearing a Jam" in the OPERATION section. 		
Shredder operates only in REVERSE.	A small piece of paper may be blocking the auto-start sensor of this shredder. Move the power switch to AUTO (I) and depress the manual forward button (I) for 5 seconds to clear paper blockage.		
Shredder runs continuously when in AUTO.	 a. Look through viewer to see if basket is full. If full, lift shredder head and empty basket contents. Replace shredder head into position on basket. b. A small piece of paper may be blocking the auto-start sensor of shredder. Move power switch to AUTO (1) and depress the manual forward button (1) for 5 seconds to clear paper blockage. 		

LIMITED WARRANTY

Fellowes Manufacturing Company (the "Company") warrants the cutting cylinders of the machine to be free from defects in material and workmanship for 3 years from the date of purchase by the original consumer. Fellowes warrants all other parts of the machine to be free of defects in material and workmanship for 1 year from the date of purchase by the original consumer. If any part is found to be defective during the warrant period, your sole and exclusive remedy will be repair or replacement, at Fellowes' option and expense, of the defective part.

This warranty does not apply in cases of abuse, mishandling or unauthorized repair. ANY IMPLIED WARRANTY, INCLUDING THAT OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, IS HEREBY LIMITED IN DURATION TO THE APPROPRIATE WARRANTY PERIOD SET FORTH ABOVE. In no event shall Fellowes be liable for any consequential or incidental damages attributable to this product. This warranty gives you specific legal rights. You may have other legal rights that vary from state to state.

For more detail or to obtain service under this warranty, please contact Fellowes Customer Service at 1-800-955-0959, Monday through Friday, 8 AM - 5 PM (Central Standard Time).

For specific instructions on obtaining service under this warranty on machines purchased outside the USA, contact the appropriate location listed in the **Contact for Service** section of this instruction manual. Warrantor: Fellowes, Inc.

Fellowes conducts extensive testing to ensure that these shredders are capable of meeting all of the specifications listed in the Usage Guide. However, the actual sheet capacity is dependent on a number of factors including the type and weight of paper, the humidity, the voltage level of the power source, the temperature of the motor, and the care with which the operator feeds the paper. Safety agency testing is conducted to ensure that the shredder will operate to specifications even if the available voltage is 10% below or 6% above the rated voltage.

<u>Model</u>	<u>Voltage</u>	<u>Hertz</u>	Cut Size	Number of Sheets	Paper Size & Weight
P500-2	220-240VAC	50HZ	6.3mm	7	8.5x11 20 Lb.
P500-2	120V	60Hz	6.3mm	7	8.5x11 20 Lb.
P700-2	220-240VAC	50HZ	6.3mm	10	8.5x11 20 Lb.
P700-2	120V	60Hz	6.3mm	10	8.5x11 20 Lb.

Contact For Service Vos Contacts Fellowes Sus Contactos Fellowes

Australia Canada Mexico United States 1-800-33-11-77 1-800-665-4339 001-800-234-1185 1-800-955-0959

www.fellowes.com

Followord, The Reveal	i Avenue – Russa, Islania 40143-1045	638-893-1688 Case	aan Santa 1 402-1 45454545	http://www.followe.com
Antonio Bonton Comin Informio, Vo Varo, IL Martin	n, Cristian Carnery H a n, Cristi Faulto – Gadiren, Bass. Ca Basras, HT	iy Japan mran, Al Tahya I	Earn Primt Sa Icod Nation Shi	popero United Ringtom poper Dasaster, S. Yarka.

@ 2002 Fellowes. Printed in China. Form No. 30105B

Free Manuals Download Website <u>http://myh66.com</u> <u>http://usermanuals.us</u> <u>http://www.somanuals.com</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.com</u> <u>http://www.404manual.com</u> <u>http://www.luxmanual.com</u> <u>http://aubethermostatmanual.com</u> Golf course search by state

http://golfingnear.com Email search by domain

http://emailbydomain.com Auto manuals search

http://auto.somanuals.com TV manuals search

http://tv.somanuals.com