Help Line

 Australia
 + 1-800-33-11-77

 Canada
 + 1-800-665-4339

 México
 + 1-800-234-1185

 United States
 + 1-800-955-0959

Fellowes

Australia + 61-3-8336-9700 Benelux + 31-(0)-76-523-2090 Canada + 1-905-475-6320 + 49-(0)-5131-49770 Deutschland + 33-(0)-1-30-06-86-80 France Italia + 39-071-730041 + 81-(0)-3-5496-2401 Japan Korea + 82-2-3462-2884 Malaysia + 60-(0)-35122-1231 Polska + 48-22-481-96-12 España + 34-91-748-05-01 Singapore + 65-6221-3811 United Kingdom + 44-(0)-1302-836836 **United States** + 1-630-893-1600

www.fellowes.com

Australia Canada Deutschland France Japan Polska United Kingdom Benelux China España Italia Korea Singapore United States

© 2008 Fellowes, Inc. Part No. 403771



Model PS-10Cs Shredder head Disconnect power switch SafeSense® Technolog Card entry Indicator lights (red) O 🚴 Paper Jam SafeSense® override switch 🖵 💭 O Door Open Overheated Not active SafeSense® (vellow) 00 Sheet capacity gauge Standby (green) Sheet capacity icon See safety instructions below Control switch Pull-out bin Auto-On (I) Paper entry Off (0) R Reverse (R)

Breakthrough Safety Technology! SafeSense® stops shredding when hands are too close to the opening.

SET UP

Disconnect Power Switch must be in ON position to operate shredder.

Insert waste bag (Fellowes #36052) for easy disposal







CAPABILITIES

Will shred: Paper, credit cards, staples and small paper clips

Will not shred: Continuous forms, adhesive labels, transparencies, newspaper, cardboard, large paper clips, laminates or plastic other than noted above

Paper shred size:

Cross-Cut. .5/32 inches x 1-1/2 inches (3.9mm x 38mm)

Maximum:

Sheets per pass (Cross-Cut)	10*
Cards per pass	
Paper width	
Continuous operation	•
CUIIIIIUUUS UPELUIIUII	0-10

* 20lb., 8.5 inches x11 inches (75g) paper at 120v, 60 Hz, 4.0Amps; heavier paper, humidity or other than rated voltage may reduce capacity. Recommended daily usage rates: 25-50 paper passes; 25 cards.

IMPORTANT SAFETY INSTRUCTIONS — Read Before Using!

WARNING



• Keep away from children and pets. Keep hands away from paper entry. Always set to off or unplug when not



• Keep foreign objects — gloves, jewelry, clothing, hair, etc. — away from shredder openings. If object enters top opening, switch to Reverse (R) to back out object.



- Never use aerosol, petroleum based or other flammable products on or near shredder. Do not use canned air on shredder.
- Do not use if damaged or defective. Do not open shredder head. Do not place near or over heat or water source.
- 10 sheets per pass to avoid jams.

ACAUTION

- Avoid touching exposed blades under Cross-Cut shredder head.
- Use only designated entry for cards.

• The grounded socket-outlet shall be installed near the equipment and shall be easily accessible.

OPERATION


ENGLISH



Continuous operation:


8-10 minutes maximum

NOTE: Shredder runs briefly after each pass to clear entry Continuous operation beyond 8-10 minutes will trigger 20-minute cool down period.

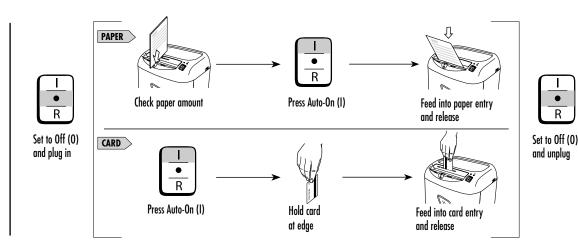

TROUBLESHOOTING

 * Paper jam: Set to Off (0) and empty bin. Replace bin, close door and follow any or all of the below procedures.



Press and hold Reverse (R)

Alternate slowly back and forth

Set to Off (0) from paper entry. Plug in.

Reverse (R)

Indicator liahts:

- Yellow SafeSense® active
- Yellow flashing SafeSense® not active
- Make sure bin is pushed in
- 🔆 📱 Wait 20 minutes for motor to cool down

ATTENTION: If the SafeSense® light remains on, you must engage the SofeSense® feature. (See SafeSense® instructions below)

-& SafeSense® paper jam: If the SafeSense® feature activates (SafeSense® light remains on) to cause the user to think the

shredder has jammed when it has not, use the Q Override Switch to deactivate the SafeSense® feature and clear the paper. Warning — when switch is in override position, the SafeSense® light will flash and the SafeSense® feature will NOT function. Once the paper is cleared, reset the SafeSense® feature.






MAINTENANCE

Run regularly in reverse for one minute Oil when bin is full, or

- immediately, if: • Capacity decreases
- Motor sounds different, or Shredder stops running

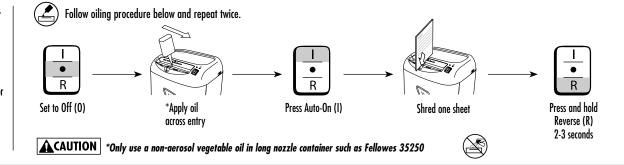

WARRANTY

LIMITED WARRANTY Fellowes, Inc. ("Fellowes") warrants the cutting blades of the machine to HEREBY LIMITED IN DURATION TO THE APPROPRIATE WARRANTY PERIOD SET FORTH ABOVE. In original consumer. Fellowes warrants all other parts of the machine to be free of defects in material product. and workmanship for 1 year from the date of purchase by the original consumer. If any part is found to be defective during the warranty period, your sole and exclusive remedy will be repair or are valid worldwide, except where different limitations, restrictions, or conditions may be required replacement, at Fellowes' option and expense, of the defective part.

This warranty does not apply in cases of abuse, mishandling, or unauthorized repair. ANY IMPLIED For more details or to obtain service under this warranty, please contact us or your dealer. WARRANTY, INCLUDING THAT OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, IS Download from Www.Somanuals.com. All Manuals Search and Download

be free from defects in material and workmanship for 5 years from the date of purchase by the no event shall Fellowes be liable for any consequential or incidental damages attributable to this

by local law.

2

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com