 


FI3002

ROCK-IT GUITAR INSTRUCTION MANUAL

Congratulations on your new electronic guitar!
Please read this guide carefully before you begin playing.

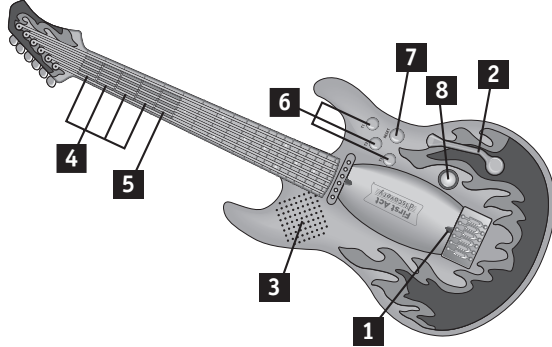

- | | | |
|----------------------------|---|----------------------------|
| 1) Infra-Red Strum Control | 4) Rhythm Keys (Rock 1, Jazz 1, Rock 2, Jazz 2) | 6) Tempo Keys (T1, T2, T3) |
| 2) Whammy Bar | 5) Demo Key | 7) Reset (Stop) |
| 3) Built-in Speaker | | 8) Volume Control |

BEFORE YOU PLAY

INSTALL BATTERIES

Batteries required: 3 x "AA" size (not included)

TO REPLACE BATTERIES

1. Open the battery compartment cover, position the batteries in the compartment and make sure that (+) & (-) are in the correct position.
2. To ensure proper safety and operation, batteries must always be replaced by an adult. Never let a child use this product unless the battery door is secured.
3. Keep batteries away from small children. Immediately and safely dispose of all used batteries.

ATTENTION

1. Do not mix old and new batteries.
2. Do not mix alkaline, standard (carbon zinc) or rechargeable (Nickel - Cadmium) batteries.
3. Only the same or equivalent types of batteries are recommended.
4. Non rechargeable batteries are not to be recharged.
5. Rechargeable batteries are to be removed from the product before being charged.
6. Rechargeable batteries are only to be charged under adult supervision.
7. Exhausted batteries are to be removed from the product.

HOW TO PLAY

ACTIVATE THE GUITAR

To activate guitar, press any of the rhythm keys or the demo key.

DEMO KEY

Press the demo key to hear one of the 4 rhythms (rock 1, jazz 1, rock 2, jazz 2). Press the demo key again to switch to the next rhythm. Do not cover the infrared control, or the rhythm will be interrupted.

RHYTHM KEYS

Press any of the rhythm keys to play one of 4 rhythms (Rock 1, Jazz 1, Rock 2, Jazz 2).

TEMPO KEYS

Press and hold down the T1, T2, or T3 keys to change to a different tempo while you're playing a rhythm.

RESET KEY

The reset key stops the rhythm or demo.

INFRARED STRUM CONTROL

To play the rhythm by infrared control, activate the guitar, then wave your hand like you are strumming in the center of the guitar between the two red lights. Each time you strum, some notes will play. Keep strumming to play the whole rhythm!

VOLUME CONTROL

Turn the volume dial to control the music volume.

WHAMMY BAR

Press the whammy bar downward to play a whammy lick.

IMPORTANT SAFETY INSTRUCTIONS

Please read this section carefully.

1. Read and follow these instructions.
2. Do not use this device near water.
3. Clean only with a dry cloth.
4. Do not use near any heat sources such as radiators, heaters, or stoves.
5. Only use the attachments/accessories specified by the manufacturer.
6. Refer all servicing to qualified service personnel. Servicing is required when the drum pad has been damaged in any way, liquid has been spilled onto the drum pad, the drum pad has been exposed to rain or moisture, does not operate normally, or has been dropped.

WARNINGS

1. Do not change the parts without professional instructions. Any change may cause malfunctions.
2. When the guitar is not in use for a long period of time, remove the batteries to avoid battery corrosion.
3. Keep the wrapping bag out of the reach of children to avoid a choking hazard.
4. Always move the guitar carefully to avoid damage to outer covering and inner components.
5. The guitar should not come in contact with acid or alkali. It should not be operated where there is corrosive or excessively moist air around to avoid corrosion of the electrical contacts.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet or a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Customer Assistance

Phone: 888.551.1115

Email: info@firstact.com

First Act, First Act Discovery, and the First Act Discovery logo are trademarks of First Act Inc.

©2008 First Act Inc.

All rights reserved.

FI3002.M.01

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>