

# QUICK START GUIDE

DishDrawer™ dishwasher (Classic)

 
NZ AU US CA

Fisher & Paykel


Keep this document handy for easy reference.

- For detailed information on the features of your dishwasher, see your 'User guide'.
- Before using your dishwasher, make sure you read the full 'User guide', with special attention to the 'Safety and warnings' section.
- For contact information or if you require service, assistance or replacement parts, see the end of this document or your 'Service & warranty' booklet.

## Your model

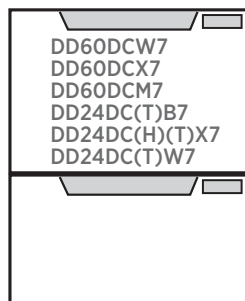

 Note: each drawer in double models has its own controls and can run independently of the other drawer.

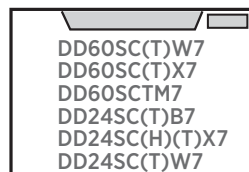

## Operating instructions - Starting a wash

**1** **Discard scraps**

Scrape large food particles off (e.g. bones, fruit stones) and remove any foreign objects (e.g. toothpicks, strings, paper).

**2** **Load dishes carefully**

To help with wash performance, arrange dishes so they are evenly spaced and not nesting.

**3** **Check spray arm(s)**

Ensure there are no items blocking the spray arm(s) from rotating.

**4** **Add detergent and check rinse aid**

Fill the detergent dispenser (a) with powdered detergent and close the dispenser door.

**Important!**  
Do not place liquid detergent or tablets in the detergent dispenser.

If the indicator on its plug (c) glows bright red, refill the rinse aid dispenser (b) with liquid rinse aid. Make sure you then refit the rinse aid plug back into its original position.

If using a tablet, place it in the cutlery basket (d) or at the bottom of the drawer.

**5** **Select wash**

Power the dishwasher on then select wash program .

**6** **Start wash or set Delay start**

Close the drawer and press .

## Wash program controls

**Wash program selector**

Press to scroll through the wash programs.

**Wash program indicators**  
These show which program is selected.

HEAVY	NORMAL	FAST	DELICATE	RINSE	ECO
STANDARD PROGRAMS - designed to clean and dry your dishes					
HEAVY Heavily soiled pots, pans and dishes.	NORMAL Dishes with normal soils for optimum performance.	FAST Lightly soiled dishes.	DELICATE Lightly soiled and heat sensitive crockery.	RINSE Prevents odors and soils drying on dishes.	ECO selector and indicator Press if you'd like the program to use less energy. The indicator will glow red when an Eco program has been selected. If you require enhanced drying, we do not recommend selecting an Eco program.
ECO PROGRAMS - designed to clean your dishes energy-efficiently					
HEAVY ECO Heavily soiled everyday dishes.	NORMAL ECO Normal soiled dishes for optimum water and energy use.	FAST ECO Lightly soiled, non-greasy dishes.	DELICATE ECO Lightly soiled, non-greasy and heat sensitive crockery.		

## Main controls and display

Time remaining

Stage of wash program (see 'During and after the wash')

Fault symbols (if these appear, see section 'If there is a fault' in your 'User guide')

Keylock or Childlock is activated

Delay start mode

**Power on/off**  
Press to turn the dishwasher on or off.  
Opening the drawer will automatically turn the dishwasher on for 30 seconds.

**Start/Pause**  
Press to start, pause, or resume a wash.  
After pausing a wash, wait for 3 beeps before opening the drawer. Forcing it open in mid-cycle may cause damage or injury.

**Keylock**  
Keylock disables all the buttons – helpful when cleaning the dishwasher.  
To activate, press and hold until you hear **one beep** (3 seconds). The display will show .  
To cancel, press and hold until its symbol disappears from the display.

 
**Cancel wash/Cancel Delay start**  
Press to cancel a wash that has already started or to cancel the Delay start setting.  
If there is any water in the drawer, it will automatically drain before the dishwasher turns off.

**Set Delay start**  
1 Press and hold until appears on the display, then release. You are now in Delay start mode.  
2 Press briefly again, repeating until the display shows the number of hours you want to delay the start of a wash by (1 to 12 hours).  
You have now set Delay start. The wash will start once the delay time is over, provided the drawer is closed.

**Childlock**  
Childlock locks the drawer and disables all the buttons, preventing unauthorized use by children.  
To activate, press and hold until you hear **two beeps** (5 seconds). The display will show .  
To cancel, press and hold until its symbol disappears from the display.

## During and after the wash

As the wash progresses, the display will count down the minutes remaining and show what stage the program is at (different programs will go through different stages). When the program has finished, the display will show **00** and the dishwasher will beep six times.

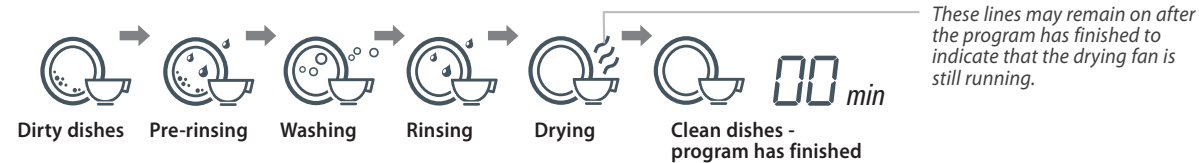


You may notice the following noises at the end of the wash. These are all part of normal operation:


- In double models, both drawers may be draining simultaneously.
- The drying fan may continue to run after a wash program has finished for a set time or until the drawer is opened. The fan assists with drying and uses negligible amounts of energy.

For best drying results, we recommend unloading the dishes once they have cooled.


## Dos and don'ts of loading

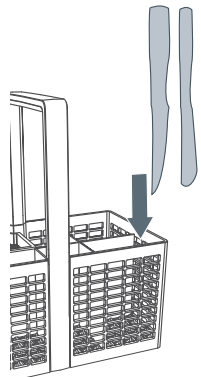 

 
Sharp or pointed items must be placed horizontally or with sharp edges/points facing down to avoid risk of injury.

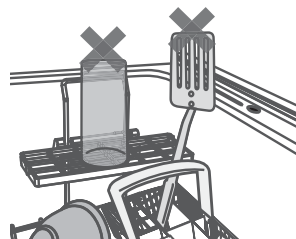

 
Protruding items will stop the internal lid of the dishwasher from sealing properly, which could result in a service call.

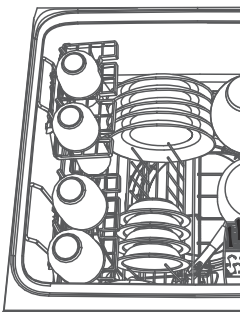

 
A neatly arranged load with evenly spaced dishes helps wash performance.

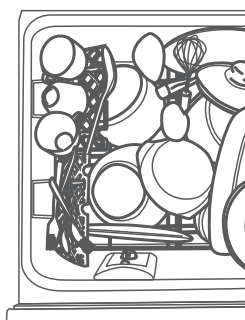


Overcrowding reduces wash performance.

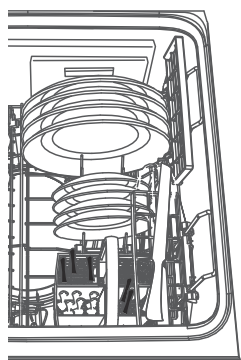 

 
Ensure there is enough space between plates. Mix spoons, knives and forks within the cutlery basket to prevent them from nesting.

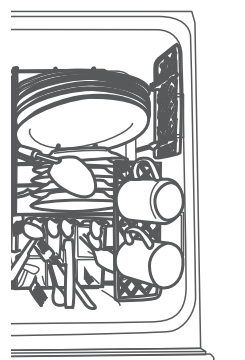

 If plates and cutlery are nesting, they are less likely to be cleaned well.

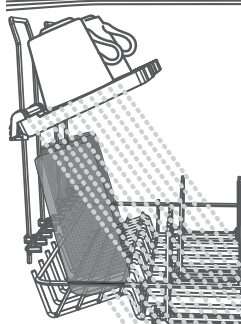

 Ensure that water reaches all items on the adjustable racks.

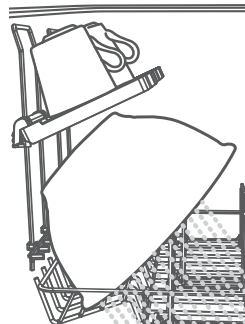

Dishware is blocking water from reaching items on the adjustable racks.

## Preference options

You can change the setting of these options to suit your preferences or circumstances. We recommend selecting the most suitable settings before you start using your dishwasher.

Option	Rinse aid	Water softener*	Open drawer auto power-on	Beeps at end of wash	Closed drawer autolock	Clean dish indication
<b>What does it do?</b>	Regulates the amount of rinse aid dispensed. Reduce this setting if there is excess foam after a wash. Increase this setting if dishes are wet or streaky after a wash.	Refer to the 'Water softener' section of the 'User guide' for details.	Your dishwasher is factory-set to automatically power on for 30 seconds whenever you open the drawer. You can turn this setting off.	Your dishwasher is factory-set to beep six times at the end of a wash. You can turn this setting off.	When this setting is on, the drawer will automatically lock 30 seconds after it's closed. It can then be unlocked by pressing <b>U</b> (unless Keylock or Childlock is also activated). Useful in boats or motor homes.	When this setting is on, <b>00</b> will remain in the display after a wash to remind you that the dishes are clean. This is useful if you prefer storing clean dishes in your dishwasher, taking out only what you need. When the last clean dish has been removed, press <b>U</b> to return to normal operating mode.

### How to change the setting of an option

#### 1 CHECK & OPEN

Check that there is no wash underway, press **U**, then open the drawer.

#### 2 ENTER MENU & SCROLL TO OPTION

**To enter the menu:** press the **ECO** selector on top first with one finger, then the **U** button on the front with another finger, hold both until one long beep sounds, then release.

- You are now in the Rinse aid option of the preference options menu.
- If you want to change the Rinse aid setting, go to step 3 now.
- If you want to change the setting of another option, you will need to scroll to that option first.

**To scroll to the next option:** press **▶▶**. To know which option you're in, watch the letters in the display (see table below). When you have scrolled to the end of the sequence, it will start again with Rinse aid (after the lower tone).

Option	Rinse aid ▶▶	Water softener* ▶▶	Open drawer auto power-on ▶▶	Beeps at end of wash ▶▶	Closed drawer autolock ▶▶	Clean dish indication ▶▶
<b>Which option am I in?</b>	<b>rA</b>	<b>hd</b>	<b>AP</b>	<b>EC</b>	<b>Ld</b>	<b>d5</b>
<b>Possible settings</b>	1 to 5	0 to 5	On or Off	On or Off	On or Off	On or Off
<b>Example</b>	 4 indicators lit = setting is 4		On  AP Off  AP	On  EC Off  EC	On  Ld Off  Ld	On  d5 Off  d5

#### 3 CHANGE SETTING

Press **U** to change the setting within an option. For example, to change the Rinse aid setting from 4 (factory default) to 2, you need to press **U** 3 times.

#### 4 SAVE SETTING & QUIT MENU

Press **U**. This will save the new setting and quit the preference options menu.

\*This option is disabled on models without water softener. It appears in the sequence of options but cannot be adjusted.

## For more info

For detailed information on the features of your dishwasher

➤ **see your 'User guide'**

For warranty information

➤ **see your 'Service and warranty' booklet**

If you...

- have any questions or comments
- need a Fisher & Paykel authorized technician to service your product
- need replacement parts or accessories
- want to register your product

**see your 'Service and warranty' booklet or contact us**

**NZ** toll-free, 24/7 **0800 372 273**  
**AU** toll-free, 24/7 **1300 650 590**  
**USA** toll-free, 24/7 **1 888 936 7872**  
**CA** toll-free, 24/7 **1 888 936 7872**

**www.fisherpaykel.co.nz**  
**www.fisherpaykel.com.au**  
**www.fisherpaykel.com**  
**www.fisherpaykel.ca**

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>