

QUICK START GUIDE

DishDrawer™ dishwasher (Classic)


GB IE

Fisher & Paykel


Keep this document handy for easy reference.

- For detailed information on the features of your dishwasher, see your 'User guide'.
- Before using your dishwasher, make sure you read the full 'User guide', with special attention to the 'Safety and warnings' section.
- For contact information or if you require service, assistance or replacement parts, see the end of this document or your 'Service & warranty' booklet.

 Your model

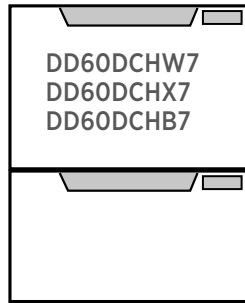

 Note: each drawer in double models has its own controls and can run independently of the other drawer.

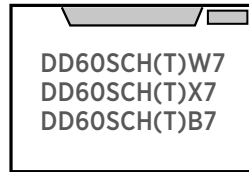

Operating instructions - Starting a wash

1 **Discard scraps**

Scrape large food particles off (e.g. bones, fruit stones) and remove any foreign objects (e.g. toothpicks, strings, paper).

2 **Load dishes carefully**

To help with wash performance, arrange dishes so they are evenly spaced and not nesting.

3 **Check spray arm(s)**

Ensure there are no items blocking the spray arm(s) from rotating.

4 **Add detergent and check rinse aid**

Fill the detergent dispenser (a) with powdered detergent and close the dispenser door.

Important!
Do not place liquid detergent or tablets in the detergent dispenser.

If the indicator on its plug (c) flashes bright red, refill the rinse aid dispenser (b) with liquid rinse aid. Make sure you then refit the rinse aid plug back into its original position.

If using a tablet, place it in the cutlery basket (d) or at the bottom of the drawer.

5 **Select wash**

Power DishDrawer on then select wash program .

6 **Start wash or set Delay start**

Close the drawer and press .

Wash program controls

Wash program indicators
These show which program is selected.

Wash program selector
Press to scroll through the wash programs.

STANDARD PROGRAMS - designed to clean and dry your dishes			
HEAVY Heavily soiled pots, pans and dishes.	NORMAL Dishes with normal soils for optimum performance.	FAST Lightly soiled dishes.	DELICATE Lightly soiled and heat sensitive crockery.
RINSE Prevents odors and soils drying on dishes.			
ECO selector and indicator Press if you'd like the program to use less energy. The indicator will glow red when an Eco program has been selected. If you require enhanced drying, we do not recommend selecting an Eco program.			

ECO PROGRAMS - designed to clean your dishes energy-efficiently			
HEAVY ECO	NORMAL ECO	FAST ECO	DELICATE ECO
Heavily soiled everyday dishes.	Normal soiled dishes for optimum water and energy use.	Lightly soiled, non-greasy dishes.	Lightly soiled, non-greasy and heat sensitive crockery.

Main controls and display

Time remaining
Stage of wash program (see 'During and after the wash')
Fault symbols (if these appear, see section 'If there is a fault' in your 'User guide')
Keylock or Childlock is activated
Delay start mode

Power on/off
Press to turn the dishwasher on or off.
Opening the drawer will automatically turn the dishwasher on for 30 seconds.

Start/Pause
Press to start, pause, or resume a wash.
After pausing a wash, wait for 3 beeps before opening the drawer. Forcing it open in mid-cycle may cause damage or injury.

Keylock
Keylock disables all the buttons – helpful when cleaning the dishwasher.
To activate, press and hold until you hear **one beep** (3 seconds). The display will show .
To cancel, press and hold until its symbol disappears from the display.

Childlock
Childlock locks the drawer and disables all the buttons, preventing unauthorized use by children.
To activate, press and hold until you hear **two beeps** (5 seconds). The display will show .
To cancel, press and hold until its symbol disappears from the display.

Cancel wash/Cancel Delay start
Press to cancel a wash that has already started or to cancel the Delay start setting.
If there is any water in the drawer, it will automatically drain before the dishwasher turns off.

Set Delay start
1 Press and hold until appears on the display, then release. You are now in Delay start mode.
2 Press briefly again, repeating until the display shows the number of hours you want to delay the start of a wash by (1 to 12 hours).
You have now set Delay start. The wash will start once the delay time is over, provided the drawer is closed.

During and after the wash

As the wash progresses, the display will count down the minutes remaining and show what stage the program is at (different programs will go through different stages). When the program has finished, the display will show **00** and the dishwasher will beep six times.

 
 
 
 
 
 
 
 


You may notice the following noises at the end of the wash. These are all part of normal operation:

- In double models, both drawers may be draining simultaneously.
- The drying fan may continue to run after a wash program has finished for a set time or until the drawer is opened. The fan assists with drying and uses negligible amounts of energy.

For best drying results, we recommend unloading the dishes once they have cooled.

Dos and don'ts of loading

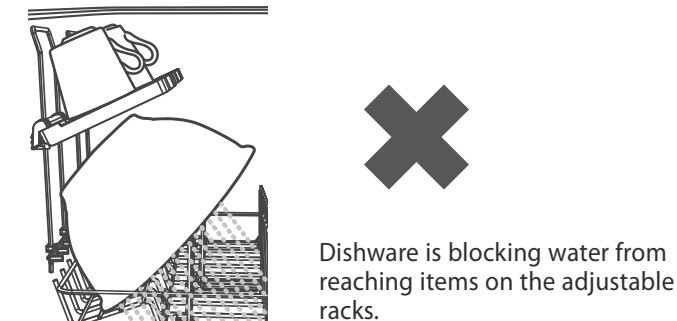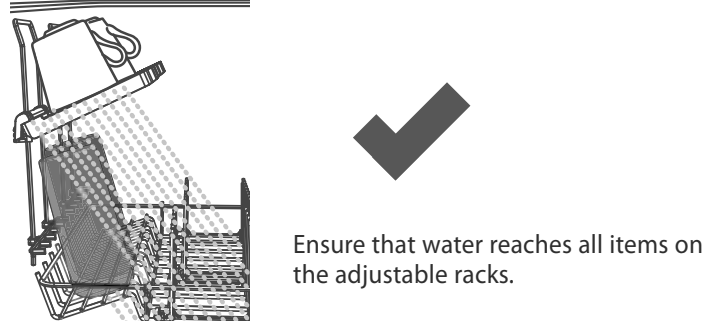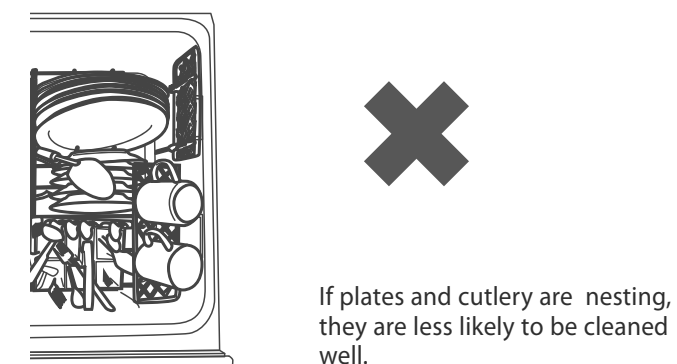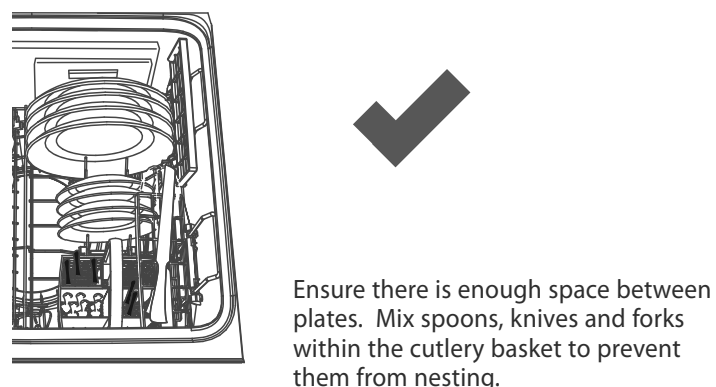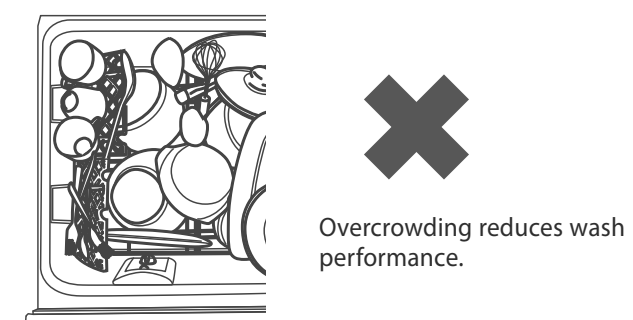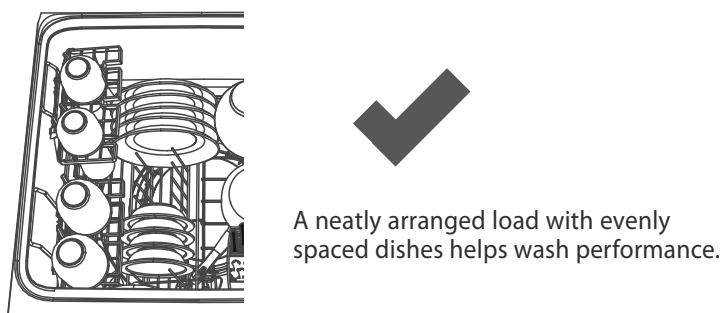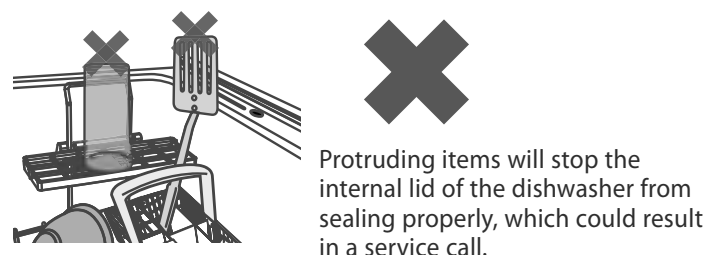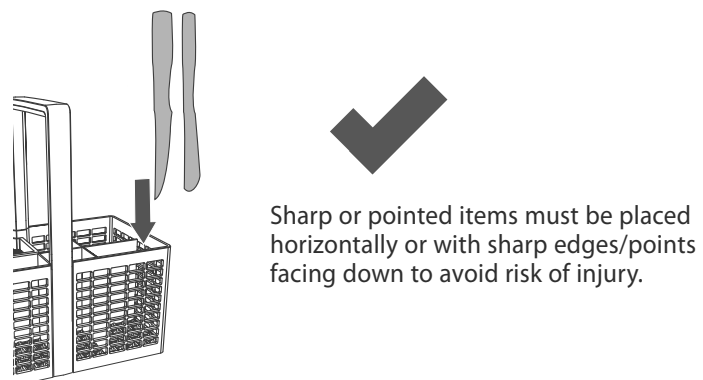

Preference options

You can change the setting of these options to suit your preferences or circumstances. We recommend selecting the most suitable settings before you start using your dishwasher.

Option	Rinse aid	Water softener	Open drawer auto power-on	Beeps at end of wash	Closed drawer autolock
What does it do?	Regulates the amount of rinse aid dispensed. Reduce this setting if there is excess foam after a wash. Increase this setting if dishes are wet or streaky after a wash.	Refer to the 'Water softener' section of the 'User guide' for details.	Your dishwasher is factory-set to automatically power on for 30 seconds whenever you open the drawer. You can turn this setting off.	Your dishwasher is factory-set to beep six times at the end of a wash. You can turn this setting off.	When this setting is on, the drawer will automatically lock 30 seconds after it's closed. It can then be unlocked by pressing U (unless Keylock or Childlock is also activated). Useful in boats or motor homes.

How to change the setting of an option

- CHECK & OPEN**
Check that there is no wash underway, press **U**, then open the drawer.
- ENTER MENU & SCROLL TO OPTION**
To enter the menu: press the **U** selector on top first with one finger, then the **U** button on the front with another finger, hold both until one long beep sounds, then release.
 - You are now in the Rinse aid option of the preference options menu.
 - If you want to change the Rinse aid setting, go to step 3 now.
 - If you want to change the setting of another option, you will need to scroll to that option first.

To scroll to the next option: press **▶▶**. To know which option you're in, watch the letters in the display (see table below). When you have scrolled to the end of the sequence, it will start again with Rinse aid (after the lower tone).

Option	Rinse aid ▶▶	Water softener* ▶▶	Open drawer auto power-on ▶▶	Beeps at end of wash ▶▶	Closed drawer autolock ▶▶
Which option am I in?	rA	hd	AP	EC	Ld
Possible settings	1 to 5	0 to 5	On or Off	On or Off	On or Off
Example	4 indicators lit = setting is 4		On AP Off AP	On EC Off EC	On Ld Off Ld

- CHANGE SETTING**
Press **U** to change the setting within an option. For example, to change the Rinse aid setting from 4 (factory default) to 2, you need to press **U** 3 times.
- SAVE SETTING & QUIT MENU**
Press **U**. This will save the new setting and quit the preference options menu.

For more info

For detailed information on the features of your dishwasher

➤ **see your 'User guide'**

For warranty information

➤ **see your 'Service and warranty' booklet**

If you...

- have any questions or comments
- need a Fisher & Paykel authorized technician to service your product
- need replacement parts or accessories
- want to register your product

see your 'Service and warranty' booklet or contact us

➤ **GB** toll-free, 24/7 **0845 066 2200** **www.fisherpaykel.co.uk**
IE toll-free, 24/7 **1800 625 174** **www.fisherpaykel.ie**

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>