 


PROBLEMS AND SOLUTIONS

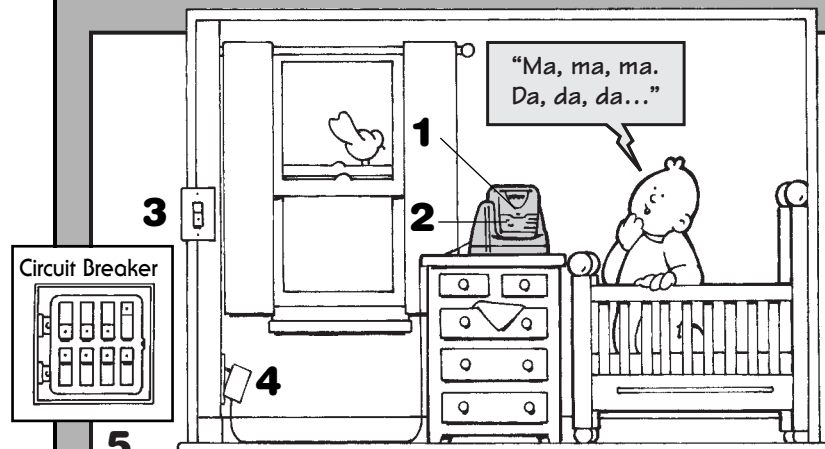

 
PROBLEMS

- 1 Transmitter power off. Power indicator not lit.
- 2 You hear static or buzzing because transmitter channel switch is not on same channel as receiver.
- 3 Transmitter power off. Power indicator not lit. Light switch that controls power flow to wall outlet off.
- 4 Transmitter power off. Power indicator not lit. AC adaptor jack-to-socket not connected. AC adaptor plug-to-outlet not connected.
- 5 Transmitter power off. Power indicator not lit. Power is off because circuit breaker for baby's room off.
- 6 You hear static or buzzing and all five bars lit on receiver.

SOLUTIONS

- 1 Turn transmitter power on. Power indicator lights.
- 2 Make sure channel switches on both transmitter and receiver set to same channel.
- 3 Make sure light switch that controls power flow to wall outlet is on.
- 4 Check AC adaptor jack-to-socket and plug-to-outlet connections.
- 5 Make sure house fuses and circuit breakers are on.
- 6 Check all five solutions above. Any one or more of these solutions should solve the problem.

Helpful Hint: If, after checking all of these solutions, you believe that your AC adaptor is damaged, please call Fisher-Price® at 1-800-432-KIDS.

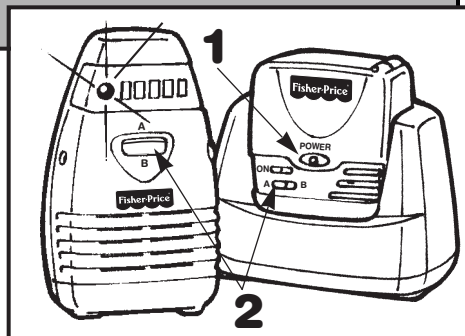

CONSUMER INFORMATION

Occasionally a consumer may experience a problem with one of our products. If this should happen, please call us, toll-free, rather than return this product to the store. Usually we can solve the problem on the telephone or by sending you replacement parts. Please call Fisher-Price® Consumer Affairs, toll-free at **1-800-432-KIDS**, 8 AM - 5 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Or, write to: Fisher-Price® Consumer Affairs, 636 Girard Avenue, East Aurora, New York 14052.

CARE

Excess dirt in the transmitter microphone will hamper transmission of sound. Also, excess dirt in the AC adaptor jack hole will prevent proper jack-to-socket connection. Clean outer surface of the transmitter, base and receiver with a cloth lightly dampened with a mild cleaning solution. Never immerse transmitter, base, receiver or AC adaptors.

FCC NOTE (UNITED STATES ONLY)

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Infant-to-Toddler Monitor

Model Number: 71577

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

Infant-to-Toddler Monitor
Consumer Affairs Department
636 Girard Avenue
East Aurora, New York 14052

Any modification of the transmitter or receiver will violate FCC compliance and can void the user's authority to operate the equipment.

ONE (1) YEAR LIMITED WARRANTY

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, New York 14052 warrants that the Infant-to-Toddler Monitor is free from all defects in material and workmanship when used under normal conditions for a period of one (1) year from the date of purchase.

Should the product fail to perform properly, we will repair or replace it at our option, free of charge. Purchaser is responsible for shipping the product to Consumer Affairs at the address indicated above and for all associated freight and insurance cost. Fisher-Price, Inc., will bear the cost of shipping the repaired or replaced item to you. This warranty is void if the owner repairs or modifies the product. This warranty excludes any liability other than that expressly stated above including but not limited to any incidental or consequential damages.

SOME STATES DO ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH MAY VARY FROM STATE TO STATE.

The electronic components in transmitter, receiver and AC adaptors are not designed for consumer repair. Evidence of any attempt of consumer repair will void this warranty.

If you have any questions about this product:

In Canada, call **1-800-567-7724**, or write to: Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2.

In Great Britain, telephone **01628 500303**.

In Australia, Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1-800-800-812 (valid only in Australia).

Fisher-Price, Inc., a subsidiary of Mattel, Inc., East Aurora, New York 14052, U.S.A.
©1999 Mattel, Inc. All Rights Reserved.

 
® and ™ designate U.S. trademarks of Mattel, Inc.
Printed in Hong Kong

71577A-0920


Fisher-Price®

INFANT-TO-TODDLER MONITOR

Product Number: 71577

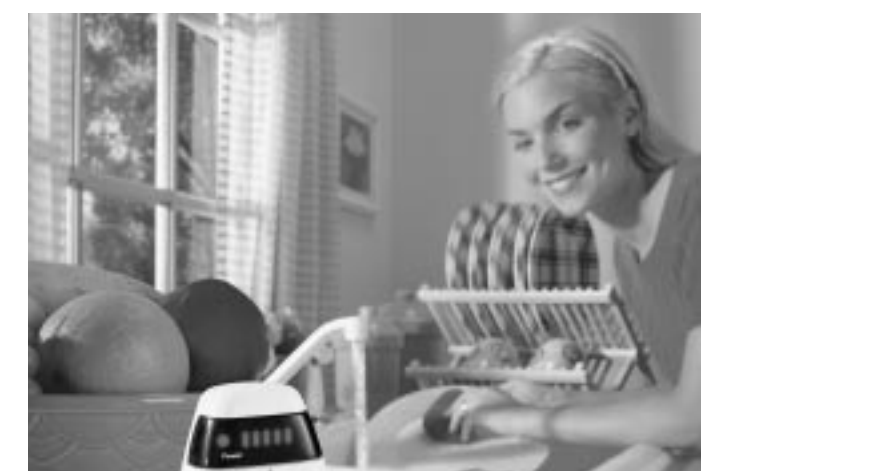

- Adult assembly is required to install batteries (if used).
- Tool required for battery installation: Phillips Screwdriver (not included).
- For proper setup and use, please read these instructions and keep for future reference.
- Includes two AC adaptors to power transmitter and receiver (plugs into standard household outlets - 120V AC). Receiver and transmitter also run on battery power (9V alkaline battery and three, "AAA" (LR03) alkaline batteries - not included).

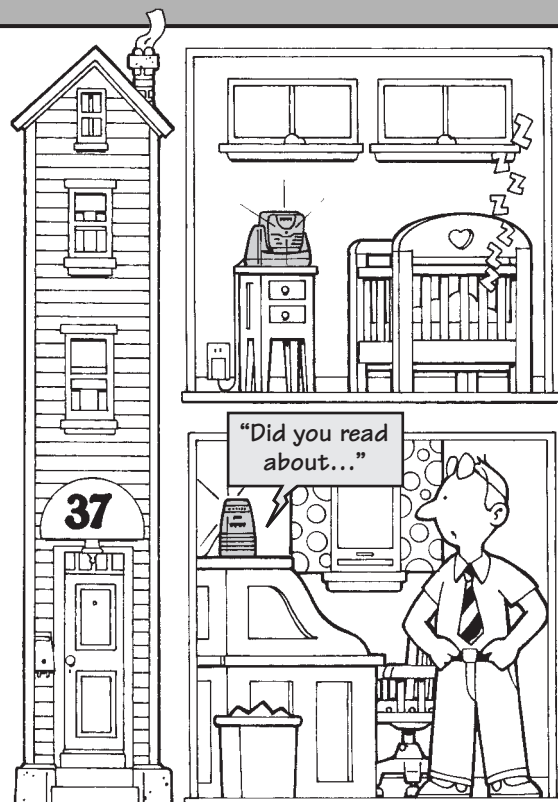 

PROBLEM

You can hear conversations or sounds from other homes. There is signal interference due to other nursery monitors on same channel or cordless telephones.

SOLUTION

Change channel switches on both transmitter and receiver to eliminate source of interference.

Helpful Hints:

- Do not use more than one transmitter and one receiver at same time in same household.
- Always remember that you are using public airwaves when using your monitor. Conversations, even from rooms near transmitter, may broadcast to other nursery monitors, radios, cordless telephones, or scanners outside your home. To protect privacy of your home, always turn transmitter off when not in use.



PROBLEM

You hear static or buzzing because receiver is out of range of transmitter.

Note: Range varies depending on surrounding conditions such as noise levels, physical obstructions and signal interference. Under ideal conditions, the range can be as far as the length of a football field.

SOLUTION

Move receiver closer to transmitter.

Helpful Hints:

- If you cannot hear your child and all five bars do not light, your receiver battery is weak. Replace the receiver battery with a fresh, 9V alkaline battery or use AC adaptor for power source.
- If receiver is too close to transmitter, you will hear squealing or whistling. For example, your toddler (while wearing the transmitter) may walk into the same room you are in (listening to receiver). Move receiver further away from transmitter, or turn volume on receiver down to reduce noise.



IMPORTANT!

 
CAUTION

- This product cannot replace responsible adult supervision.
- Please keep small parts out of children's reach. Dispose of dead "AAA" batteries properly.

- This product is not intended to be used as a medical monitor and its use should **not** replace adult supervision.
- Test sound reception of receiver before first-time use and whenever you change location of the transmitter.
- To prevent entanglement:
 - Never place transmitter in a crib or playpen. Keep transmitter and receiver out of baby's reach.
 - Never use extension cords with AC adaptors.
- Never use transmitter, receiver or AC adaptors near water (i.e.: bathtub, sink, laundry tub or wet basement, etc.).
- Always use transmitter, receiver and AC adaptors where there is adequate ventilation. To prevent overheating, keep transmitter, receiver and AC adaptors away from heat sources such as radiators, heat registers, direct sunlight, stoves, amplifiers, or other appliances which produce heat.

TESTING SOUND RECEPTION

Test transmitter transmission and receiver reception.

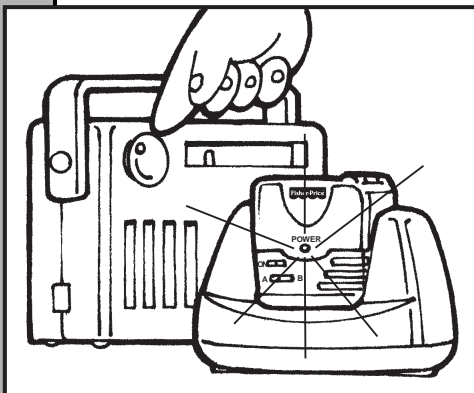


For use with baby, place transmitter in room in which you intend to use it. Slide transmitter power switch to turn on. Turn on a radio.

For use with toddler, have toddler stand in the area in which they will be playing. Slide transmitter power switch to turn on. Ask child to speak.

For use with baby, place receiver in room in which you intend to use it. Rotate on/off/volume dial to turn power on. Adjust receiver location.

For use with toddler, position the receiver where you will be listening. Rotate on/off/volume dial to turn power on. Adjust receiver location.

 Hint: If you turn receiver power on before transmitter power, you will hear a static noise and all five bars in the moving light display light. Simply turn volume down and turn transmitter power on.


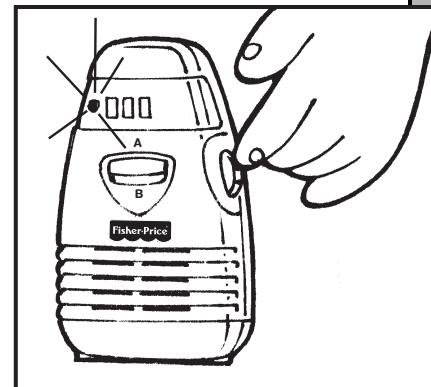


If you experience interference (buzzing or static, etc.) while using one channel setting, switch both units to other channel. Selecting a channel is usually a one time adjustment.

Notes:

- Moving light display lights when sound is received by receiver.
- If all five bars in moving light display light:
 - Receiver power is on and transmitter power is off.
 - Receiver is too far away from transmitter.
 - Receiver and transmitter are not on same channel.
 - Loud sounds are transmitting.

  BATTERY INSTALLATION

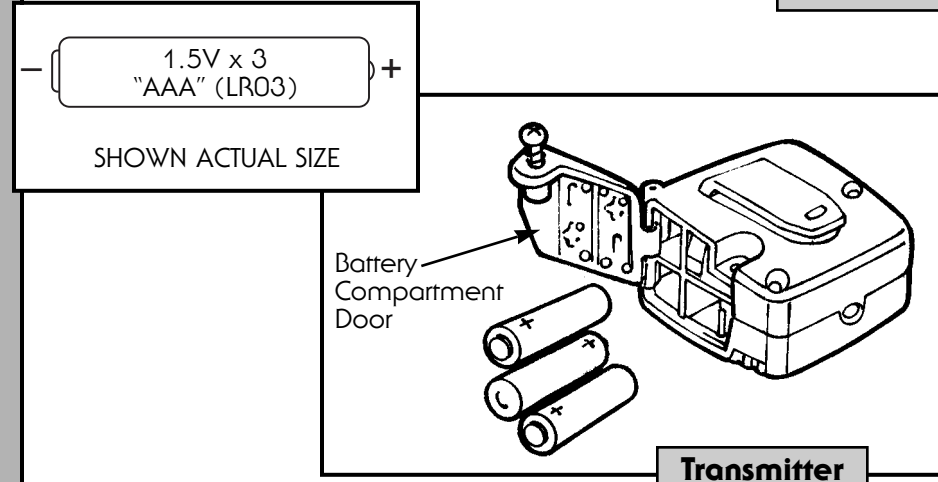
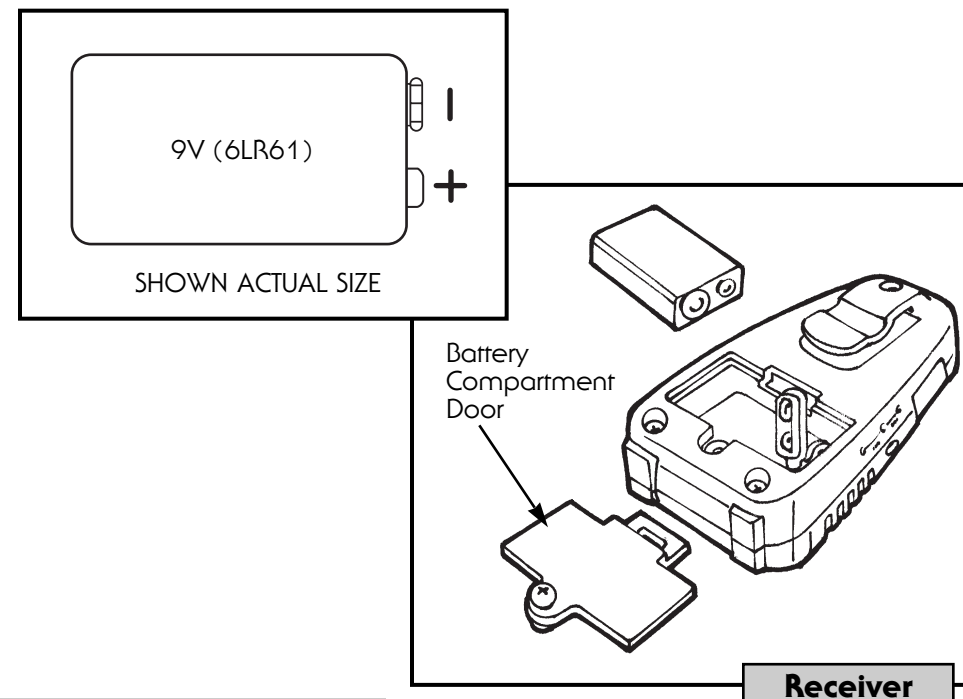


- Remove transmitter from base.
- Locate battery compartment door on bottom of receiver and back of transmitter.
- Loosen screw in both battery compartment doors with a Phillips screwdriver.
- Open battery compartment doors.
- Snap terminals of a fresh, 9V alkaline battery into receiver connectors.
- Insert three "AAA" (LR03) alkaline batteries, as indicated inside battery compartment.
- Close battery compartment doors and tighten screws with a Phillips screwdriver. Do not over-tighten.

BATTERY TIPS

- Do not mix old and new batteries.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Remove the batteries during long periods of non-use. Always remove exhausted batteries from the product. Battery leakage and corrosion can damage the product. Dispose of batteries safely.
- Never short circuit the battery terminals.
- Non-rechargeable batteries are not to be recharged.
- Only batteries of the same or equivalent type as recommended in the "Battery Installation" instructions are to be used.
- If removable rechargeable batteries are used, they are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the product before they are charged.
- If you use a battery charger, it should be examined regularly for damage to the cord, plug, enclosure and other parts. Do not use a damaged battery charger until it has been properly repaired.

  JUST FOR BABY

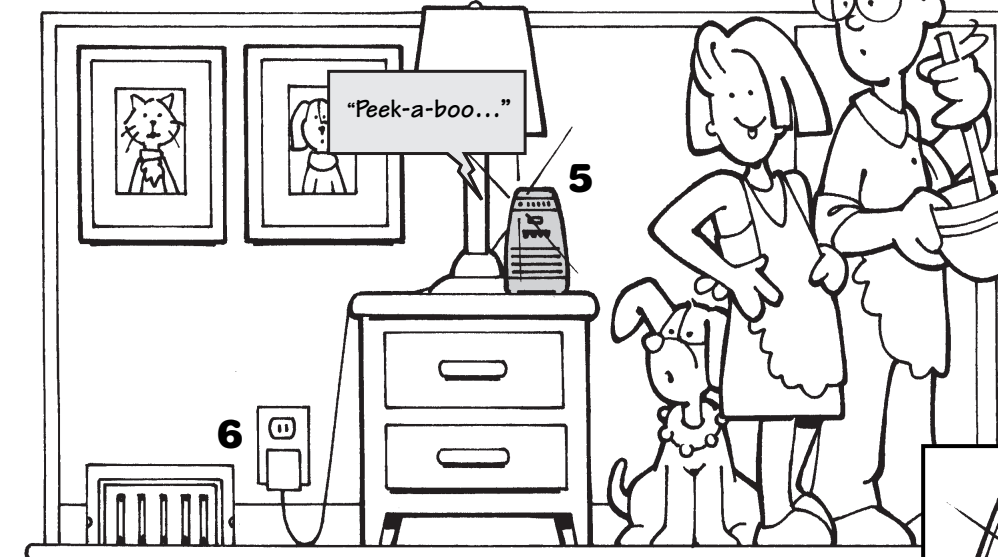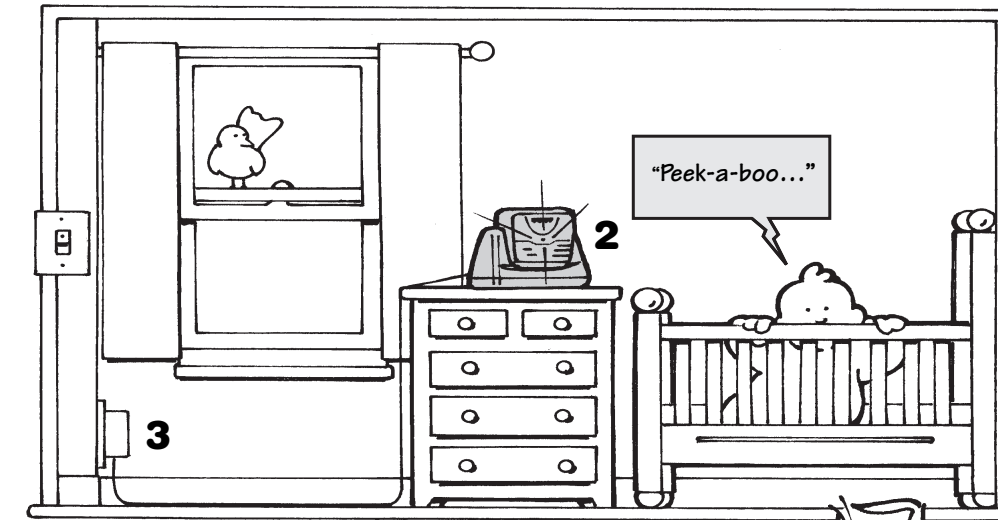

IMPORTANT! Test sound reception of this monitor before first time use and whenever you change location of the transmitter (see this page).

- 1 Set transmitter channel switch to same channel as receiver.
- 2 Place transmitter (in base) in same room with child. Point microphone directly toward crib or play area.
- 3 Unwrap and fully extend AC adaptor cord for best transmission. Insert AC adaptor jack into transmitter socket and plug into wall outlet.

Note: To use three, "AAA" alkaline batteries for power source, refer to "Battery Installation" instructions on this page.

 
- 4 Slide transmitter on/off switch to turn power on. Power indicator lights.

- 5 Place receiver where you will see or hear it.

- 6 Unwrap and fully extend AC adaptor cord for best reception. Insert AC adaptor jack into receiver socket and plug into wall outlet.

Note: To use a 9V alkaline battery for power source, refer to "Battery Installation" instructions on this page.

- 7 Rotate receiver on/off/volume dial to turn power on. Power indicator lights. Rotate on/off/volume dial to adjust volume.

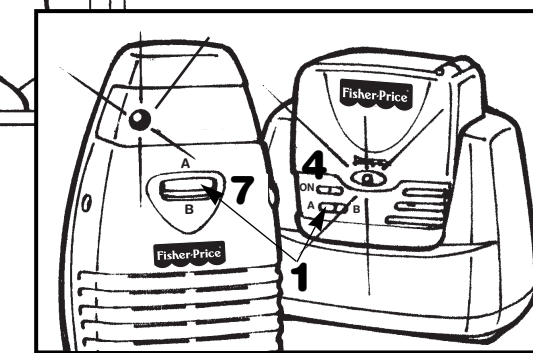

FOR YOUR TODDLER

 
IMPORTANT! Test sound reception of this monitor before first time use and whenever you change location of the transmitter (see this page).

- 1 Set transmitter channel switch to same channel as receiver.
- 2 Remove transmitter from base. Attach transmitter to child's clothing using clip. **Check to be sure transmitter is secure.**
- 3 Slide transmitter on/off switch to turn power on. Power indicator lights.

- 4 Place receiver where you will see or hear it.
- 5 Unwrap and fully extend AC adaptor cord for best reception. Insert AC adaptor jack into receiver socket and plug into wall outlet.

Note: To use a 9V alkaline battery for power source, refer to "Battery Installation" instructions on this page.

- 6 Rotate receiver on/off/volume dial to turn power on. Power indicator lights. Rotate on/off/volume dial to adjust volume.

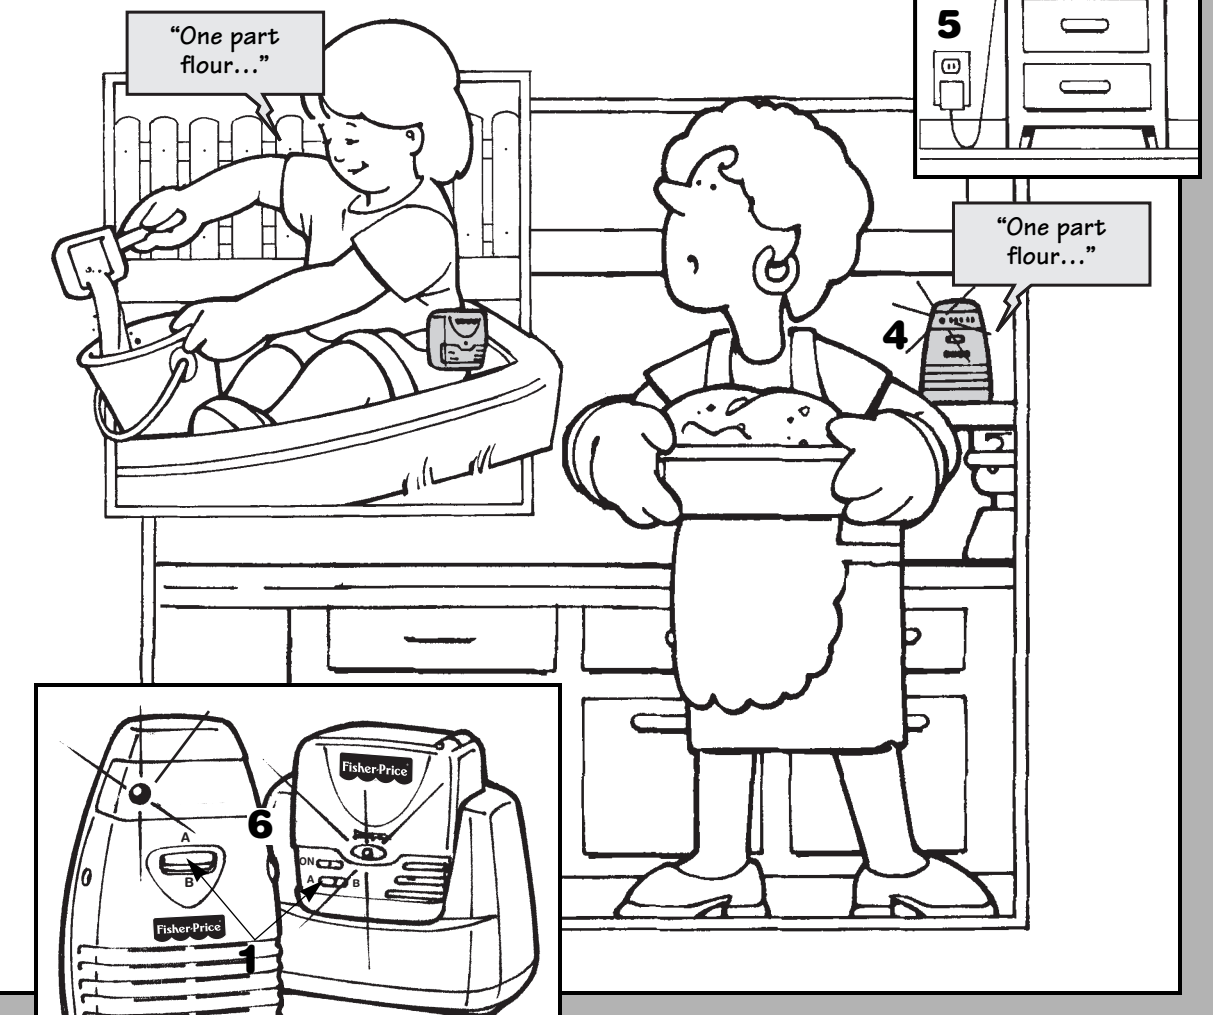

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>