

**Fisher-Price®**

J6998



**! WARNING**

PLEASE KEEP THESE INSTRUCTIONS  
FOR FUTURE REFERENCE.

[www.fisher-price.com/uk](http://www.fisher-price.com/uk)

## Important!



### WARNING

To prevent strangulation with power cord, never place transmitter within reach of child.



### CAUTION

This product cannot replace responsible adult supervision.

#### One (1) Year Limited Warranty

Mattel UK Limited guarantees to the original consumer purchaser that this product will be free of defects in material and workmanship when used under normal conditions for a period one (1) year from the date of purchase. In the event of a defect covered by this guarantee Mattel will repair or replace the product at its sole option. To claim under this guarantee the original consumer purchaser must telephone Mattel UK Limited at the number detailed below to arrange for the return of the product to its Service Department. Mattel UK Limited will need your name, address, contact number, original dated sales receipt for this product and a brief explanation of the defect. The repaired or replaced items will be returned to you free of charge. This guarantee does not cover damage resulting from unauthorized repair, or modification, accident, misuse or abuse of the product and excludes any liability, other than that expressly stated above, including but not limited to any incidental or consequential damages. This guarantee is only valid in the UK. This guarantee does not affect your statutory rights as a consumer.

Telephone and address for returns: Tel: 01628 500303. Mattel UK Limited, Mattel House, Vanwall Business Park, Vanwall Road, Maidenhead, Berkshire SL6 4UB.



49MHz

Hereby Mattel declares that the product is in compliance with the essential requirements and other relevant provisions of European Council Directives 99/5/EC, 89/336/EEC, 88/378/EEC. Suitable for the U.K.

- For proper setup and use, please read these instructions.
- Transmitter operates on AC current.
- Receiver operates on AC current (use enclosed AC adaptor) or three "AAA" (LR03) **alkaline** batteries (batteries not included).
- Adult assembly is required to install batteries (if used).
- Tool needed for battery installation: Phillips screwdriver (not included).
- This product is not intended to be used as a medical monitor and its use should not replace adult supervision.
- Test sound reception of receiver before first-time use and whenever you change location of transmitter.
- To prevent entanglement:
  - Never place transmitter in a cot or playpen. Keep transmitter and receiver out of baby's reach.
  - Never use extension cords with the AC adaptor.
- Never use transmitter or receiver near water (ie.: bathtub, sink or wet basement, etc.).
- **Adults Note:** Periodically examine the transmitter and the AC adaptor for damage to the cord, housing or other parts that may result in the risk of fire, electric shock or injury. If the transmitter or AC adaptor is damaged, do not use the monitor (if the transmitter is damaged) or the AC adaptor. Use batteries as the power source in the receiver.
- Always use transmitter and receiver where there is adequate ventilation. To prevent overheating, keep transmitter and receiver away from heat sources such as radiators, heat registers, direct sunlight, stoves, amplifiers, or other appliances which produce heat.
- Do not connect the transmitter or receiver (if AC adaptor is used) to more than the recommended number of power supplies.
- The AC adaptor is not a toy.
- Disconnect the AC adaptor from the receiver before cleaning.
- Fisher-Price® does not recommend the use of two monitors in one house.
- Always remember that you are using public airwaves when using your monitor. Conversations, even from rooms near transmitter, may broadcast to other nursery monitors, radios, cordless telephones, or scanners outside your home. To protect privacy of your home, always turn transmitter off when not in use.
- Excess dirt in transmitter microphone will hamper transmission of sound. Clean outer surface of transmitter and receiver with a cloth lightly dampened with a mild cleaning solution.
- Never immerse transmitter, receiver or AC adaptor.
- Product features and decoration may vary from photos.

**Great Britain:** Vanwall Business Park, Maidenhead SL6 4UB.

**Helpline:** 01628 500303, [www.service.mattel.com/uk](http://www.service.mattel.com/uk).

**Australia:** Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

**New Zealand:** 16-18 William Pickering Drive, Albany 1331, Auckland.

**Asia:** Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.

## Features

Flexible Antenna

Night Light - press to turn on a soft glow

Power Indicator


Microphone

Channel Switch

Power Button

**TRANSMITTER**

## Features

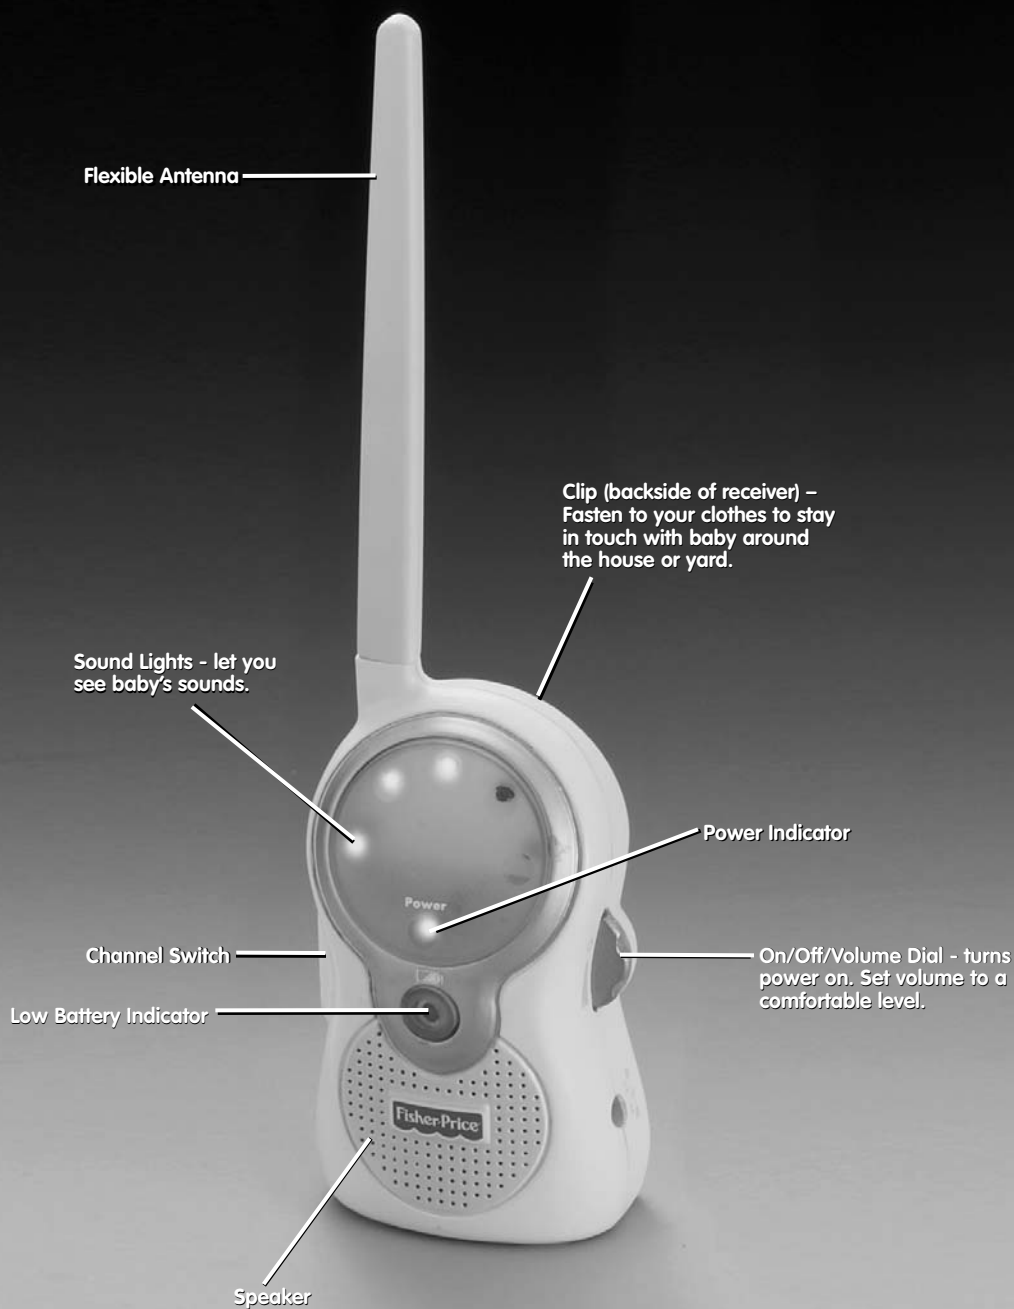

RECEIVER

## Receiver Battery Installation (Optional)



### Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removeable, rechargeable batteries are used, they are only to be charged under adult supervision.



- Locate battery compartment door on back of receiver.
- Loosen screw in battery compartment door with a Phillips screwdriver. Remove battery compartment door.
- Insert three "AAA" (LR03) **alkaline** batteries into the battery compartment.
- Replace battery compartment door. Tighten screw with a Phillips screwdriver.



- Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities (Europe only).

## Testing Sound Reception

Test transmitter transmission and receiver reception each time you change location of use.




- Place transmitter in room in which you intend to use it.
- Press transmitter power button to turn power on. Power indicator lights.
- Set transmitter channel switch to **same** channel as receiver. Turn on a radio.



- Place the receiver in the room in which you intend to use it.
- Turn on/off/volume dial to turn power on. Power indicator lights. Adjust receiver location for best reception.

**Hint:** If battery power is low, the low battery indicator lights. Replace batteries with three, new **alkaline** "AAA" (LR03) batteries or use AC adaptor for power source.

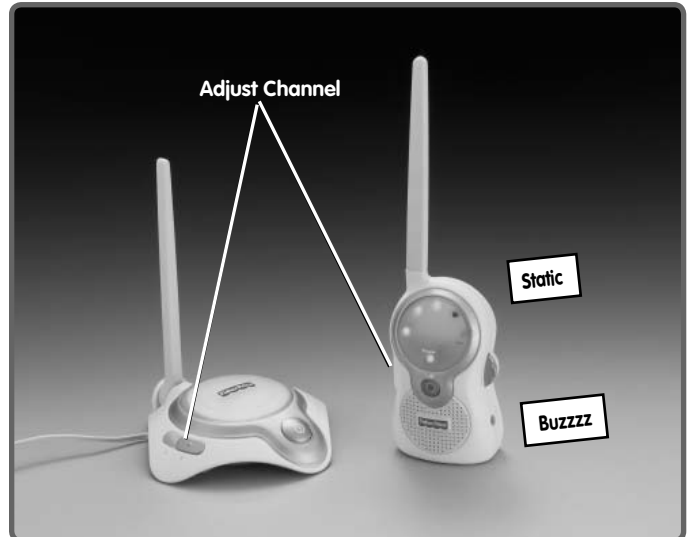

- Sound lights turn on when sound is received by the receiver.
  - One or two lights for shallow sounds.
  - Three or more lights for louder sounds.
- If you experience interference (buzzing or static, etc.) while using one channel setting, switch all units to other channel. Selecting a channel is usually a one time adjustment.

**Hint:** You will see all five sound lights:

- If you turn receiver power on before transmitter power. You will also hear static noise. Turn volume down and turn transmitter power on.
- If the receiver is too far away from the transmitter. Move the receiver closer to the transmitter.
- If loud sounds are transmitting.

## Setup & Use

**IMPORTANT!** Test sound reception of this monitor before first time use and whenever you change location of transmitter (see page 6).



- Set transmitter channel switch to same channel as receiver.



- Place transmitter in same room with child. Point microphone directly toward cot or play area.
- Unwrap and fully extend power cord for best transmission. Plug power cord into wall outlet. Use the power cord only in a wall outlet. Do not plug the power cord into a ceiling outlet.
- Press transmitter power button to turn power on.
- Press night light on transmitter for a soft, glowing light. (Press again to turn off night light.)



- Place receiver where you will see or hear it.
- Unwrap and fully extend AC adaptor cord for best reception. Insert AC adaptor jack into receiver socket and plug into wall outlet. Use the AC adaptor only in a wall outlet. Do not plug the AC adaptor into a ceiling outlet.

**Note:** To use batteries as a power source, refer to instructions on page 5.

- Rotate receiver on/off/volume dial to turn power on. Power indicator lights. Rotate on/off/volume dial to adjust volume.



- Clip to your clothes to stay in touch with baby!  
**Hint:** Under permitting conditions, the receiver receives sounds up to 120 meters (400 feet) away from baby!

## Problems & Solutions

Problem	Solution
You hear static or buzzing	Receiver is out of range of transmitter. Move receiver closer to transmitter. <b>Note:</b> Range varies depending on surrounding conditions such as noise levels, physical obstructions and signal interference.
	Transmitter power is off. Turn transmitter power on.
	Channel switches are on different channels. Make sure channel switches on both transmitter and receiver are set to same channel.
	Loose power cord connection and transmitter power is off. Check transmitter power cord plug-to-outlet connection.
	No power to wall outlet and transmitter power is off. Make sure light switch that controls power flow to wall outlet is on.
	Power is off because circuit breaker for room is off. Make sure house fuses and circuit breakers are on.
Receiver power indicator does not light	Receiver power is off. Turn receiver power on.
	Batteries in receiver are weak or dead. Replace all batteries with three, <b>alkaline</b> "AAA" (LR03) batteries or use AC adaptor as power source.
	Power is off because circuit breaker for room is off. Make sure house fuses and circuit breakers are on.
	No power to wall outlet and power is off. Make sure light switch that controls power flow to wall outlet is on.
Receiver low battery indicator lights	Batteries in receiver are weak or dead. Replace all batteries with three, <b>alkaline</b> "AAA" (LR03) batteries or use AC adaptor as power source.
Transmitter power indicator does not light	Transmitter power is off. Turn transmitter power on.
	Loose power cord connection and transmitter power is off. Check transmitter power cord plug-to-outlet connection.
	No power to wall outlet and transmitter power is off. Make sure light switch that controls power flow to wall outlet is on.
	Power is off because circuit breaker for baby's room is off. Make sure house fuses and circuit breakers are on.
You can hear conversations or sounds from other homes	There is signal interference due to other nursery monitors on same channel or cordless telephone use. Change channel switches on both transmitter and receiver to eliminate source of interference.

**Hint:** If, after checking all of these solutions, you believe that your transmitter power cord or AC adaptor are damaged, please contact Mattel.



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>