

Fisher-Price®

M7949



! WARNING

IMPORTANT! KEEP INSTRUCTIONS FOR FUTURE REFERENCE.

www.fisher-price.com.au

Download from www.Somanuals.com. All Manuals Search And Download.

Important!



WARNING

To prevent strangulation with power cord, never place transmitter within reach of child.



CAUTION

This product cannot replace responsible adult supervision.



CAUTION

To reduce the risk of electric shock, do not expose to rain or moisture.

Important!

- For proper setup and use, please read these instructions.
- Please keep this instruction sheet for future reference, as it contains important information.
- Transmitter operates on AC current.
- Receiver operates on AC current (use enclosed AC adaptor) or a 3.6V, 350mAH nickel metal hydride rechargeable battery pack (included).
- **Before first-time use**, charge the rechargeable battery pack for **10-12 hours** (please see page 6 for instructions).
- Adult assembly is required to install battery pack (if used).
- Tool needed for battery pack installation: Phillips screwdriver (not included).
- This product is not intended to be used as a medical monitor and its use should not replace adult supervision.
- Test sound reception of receiver before first-time use and whenever you change location of transmitter.
- To prevent entanglement:
 - Never place transmitter in a crib or playpen. Keep transmitter and receiver out of baby's reach.
 - Never use extension cords with the AC adaptor.
- Never use transmitter or receiver near water (ie.: bathtub, sink, laundry tub or wet basement, etc.).
- Always use transmitter and receiver where there is adequate ventilation. To prevent overheating, keep transmitter and receiver away from heat sources such as radiators, heat registers, direct sunlight, fire, stoves, amplifiers, or other appliances that produce heat.
- Fisher-Price® does not recommend the use of two monitors in one house.
- Always remember that you are using public airwaves when using your monitor. Conversations, even from rooms near transmitter, may broadcast to other nursery monitors, radios, cordless telephones, or scanners outside your home. To protect privacy of your home, always turn transmitter off when not in use.
Frequency: 915 - 920 MHz
- Do not disassemble the sealed battery pack. Do not recharge a battery pack that shows leakage or corrosion.
- Do not connect to more than the recommended power supplies.
- If you use a battery charger (enclosed AC adaptor), it should be examined regularly for damage to the cord, plug, enclosure and other parts. Do not use a damaged battery charger until it has been properly repaired.
- Use only the provided AC adaptor to charge the battery pack.
- Product features and decoration may vary from photos.



Consumer Information



AUSTRALIA: Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

 
NEW ZEALAND: 16-18 William Pickering Drive, Albany 1331, Auckland.

Features



- ① Transmitter
- ② Power Indicator
- ③ LCD Screen – shows which channel you are on.
- ④ Channel Button
- ⑤ Power Button
- ⑥ Microphone
- ⑦ Receiver
- ⑧ On/Off/Volume Dial – Turns power on. Set volume to a comfortable level.
- ⑨ Clip (backside of receiver) – Fasten to your clothes to stay in touch with baby around the house or yard.
- ⑩ Channel Button
- ⑪ Sound Lights – let you see baby's sounds.
- ⑫ Speaker
- ⑬ AC Adaptor (Charger) Socket
- ⑭ LCD Screen – shows channel, reception and low battery indicator.

Receiver Battery Installation

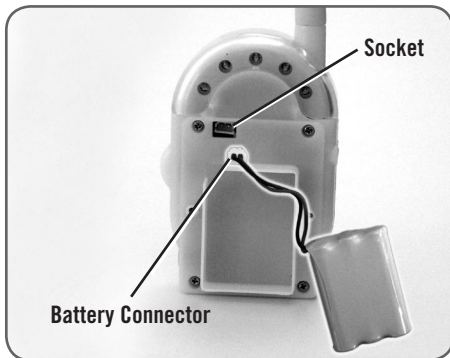

- Locate the battery compartment door on the back of the receiver.
- Loosen the screws in the battery compartment door with a Phillips screwdriver. Remove the battery compartment door.
- Plug the battery connector into the receiver socket.

Hint: If the battery connector will not plug into the socket, turn it over and try again. Do not force the battery connector into the receiver socket.

- Replace the battery compartment door. Tighten the screws with a Phillips screwdriver.

Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

 
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type as recommended.
- Do not charge non-rechargeable batteries.
- If removeable, rechargeable batteries are used, they are only to be charged under adult supervision.

Charging the Battery


Even with proper care, the rechargeable battery will not last forever. The life of the rechargeable battery depends on how well you follow these instructions and the total number of hours it is used. If you should need to replace the rechargeable battery, contact Fisher-Price®.




- Use the power cord only in a wall outlet. Do not plug the power cord into a ceiling light.
- Insert the AC adaptor jack into the receiver and then plug into a wall outlet.

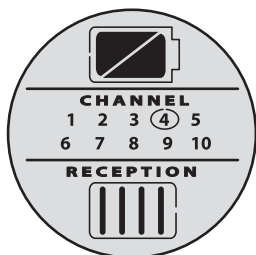

Full Charge

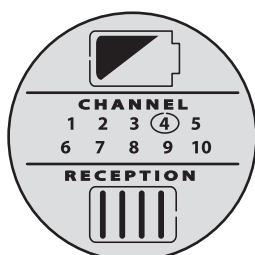 

Half Charged

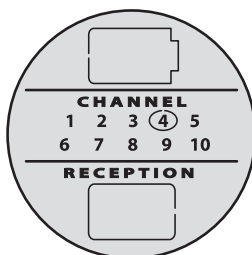 

No Charge

- Charge the rechargeable battery for **10-12 hours**. Do not overcharge your battery. After a first-time charge, you will only need to charge the battery for 8 hours for a full charge.

Hint: When using the receiver with the AC adaptor, you will be charging the battery while monitoring your baby!

 
Testing Sound Reception

Test transmitter transmission and receiver reception each time you change location of use.




- Place the transmitter in the room in which you intend to use it.
- Press the transmitter power button to turn power on. Power indicator lights and the LCD screen turns on.
- Press the channel buttons on the transmitter to select a channel.
- Look at the LCD screen to see which channel you have selected (you will adjust the receiver channel to the same channel). Turn on a radio.

Testing Sound Reception

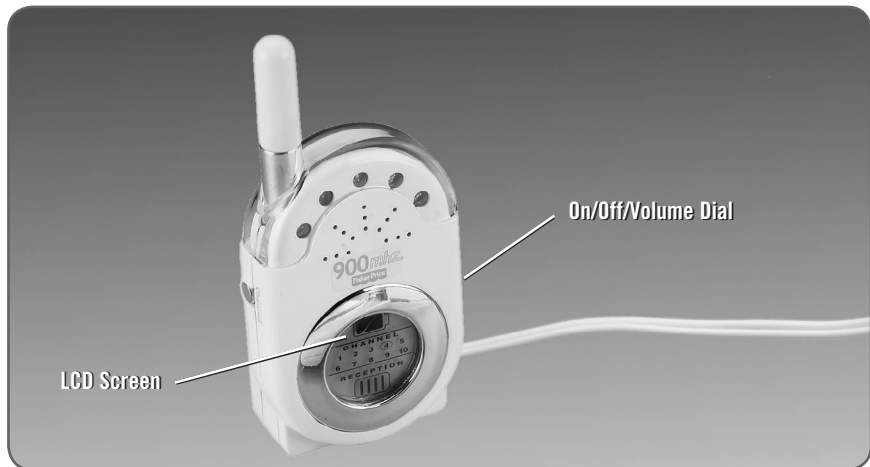


- Place the receiver in the room in which you intend to use it.
- Rotate the receiver on/off/volume dial to turn power on. The LCD screen turns on.
- Look at the LCD screen to see current channel selected.
- Press the channel button on the receiver to select the same channel as the transmitter.
- Adjust receiver location.

 Testing Sound Reception

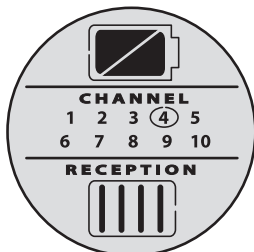


Good Reception

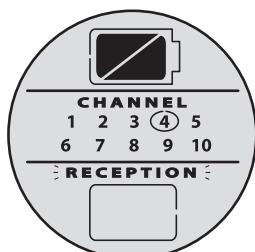 


No Reception/Out of Range


Check reception! If you see bars (||||) on the LCD, you have reception. If you are out of range, the reception display will blink and you will hear a low pitched beep.

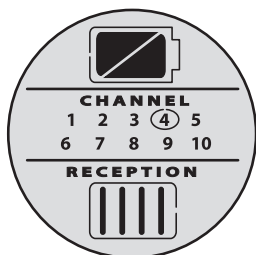 

Full Charge

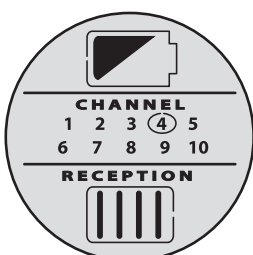 

Half Charged

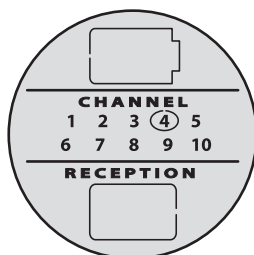 

No Charge

Check to be sure there is enough battery power.

Hint: You will hear a high pitched beep if battery power is low. We recommend using the AC adaptor for power source (and you'll charge the battery too).

Testing Sound Reception



 
- Sound lights on the receiver turn on when sound is received by a receiver.
 - One or two lights for shallow sounds.
 - Three or more lights for louder sounds.
- If reception is poor, or there is no reception on one channel, change the channel on both units.

Setup & Use

IMPORTANT! Test sound reception of this monitor before first time use and whenever you change location of transmitter (see page 8).



- Set transmitter channel switch to same channel as the receiver.

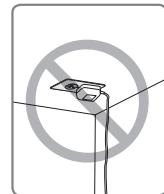

- Place transmitter in same room with child. Point the microphone directly toward crib or play area.
- Unwrap and fully extend power cord for best transmission. Plug power cord into wall outlet.
- Use the power cord only in a wall outlet. Do not plug the power cord into a ceiling outlet.
- Press the transmitter power button to turn power on.

Setup & Use



- Place the receiver where you will see or hear it.
- If desired, use the AC adaptor. Unwrap and fully extend the AC adaptor cord for best reception. Insert the AC adaptor jack into the receiver socket and plug into a wall outlet.
- Rotate the receiver on/off/volume dial to turn the power on. LCD screen turns on. Rotate the on/off/volume dial to adjust volume.

Setup & Use



- Clip the receiver to your clothes to stay in touch with baby around your house or yard.

Hint: Under permitting conditions, the receiver receives sounds up to 244 meters away from baby!

Problems & Solutions

Problem	Solution
You hear static or buzzing	There may be a physical obstruction or noise level causing interference. Change the location of receiver or try a different channel. Range varies depending on surrounding conditions such as noise levels, physical obstructions and signal interference.
Reception display on receiver LCD screen flashes and you hear a low pitched beep	Transmitter power is off. Turn transmitter power on.
	Transmitter and receiver are on different channels. Change both units to the same channel.
	Loose power cord connection and transmitter power is off. Check transmitter power cord plug-to-outlet connection.
	No power to wall outlet and transmitter power is off. Make sure light switch that controls power flow to wall outlet is on.
	Power is off because circuit breaker for room is off. Make sure house fuses and circuit breakers are on.
Receiver LCD screen does not turn on	Receiver power is off. Turn receiver power on.
	Battery needs to be recharged. Charge the battery for 8 hours. Or, use the AC adaptor as a power source (and charge the battery at the same time).
	Power is off because circuit breaker for room is off. Make sure house fuses and circuit breakers are on.
	No power to wall outlet and power is off. Make sure light switch that controls power flow to wall outlet is on.
Receiver(s) LCD screen indicates low battery power <input type="checkbox"/> and you hear a high pitched beep	Battery needs to be recharged. Charge the battery for 8 hours. Or, use the AC adaptor as a power source (and charge the battery at the same time).
Transmitter power indicator does not light	Transmitter power is off. Turn transmitter power on.
	Loose power cord connection and transmitter power is off. Check transmitter power cord plug-to-outlet connection.
	No power to wall outlet and transmitter power is off. Make sure light switch that controls power flow to wall outlet is on.
	Power is off because circuit breaker for baby's room is off. Make sure house fuses and circuit breakers are on.
You can hear conversations or sounds from other homes	There is signal interference due to other nursery monitors on same channel or cordless telephone use. Change the channel on all units.

Hint: If, after checking all of these solutions, you believe that your transmitter power cord or AC adaptor are damaged, please contact Fisher-Price®.

One (1) Year Limited Warranty

Mattel Australia Pty., Ltd., (658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia) warrants to the original owner that this product is free from all defects in material and workmanship when used under normal conditions for a period of one (1) year from the date of purchase.

Should the product fail to perform properly, we will repair replace it at our option, free of charge. Purchaser is responsible for shipping the product to the Fisher-Price Product Service Department at the address indicated above and for all associated freight and insurance costs. Fisher-Price Inc., will bear the cost of shipping the repaired or replacement item to you. The warranty is void if the owner repairs or modifies the product. The is warranty excludes any liability other than that expressly stated above, including, but not limited to, any incidental or consequential damages.

SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH MAY VARY FROM STATE TO STATE.

Consumer Advisory Service phone numbers are as follows:

Australia 1300 135 312

New Zealand 0800 174 063

Care

Excess dirt in transmitter microphone will hamper transmission of sound. Clean outer surface of transmitter and receiver with a cloth lightly dampened with a mild cleaning solution. Never immerse transmitter, receiver or AC adaptor.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>