

# Fisher-Price®

## Kick 'n Crawl Barn™

### Instructions

Model Number 71699




Product features may vary from the photos above.

- For Ages 0 and Up
- Please save these instructions for future reference.
- Activity toy requires two replaceable button-cell (LR44 or equivalent) alkaline batteries. Dispose of batteries safely.
- Adult assembly is required for battery replacement.
- Tool required for battery replacement: Phillips screwdriver (not included).

## ! WARNING


To prevent entanglement injury, never place play quilt in a crib or playpen. Never add strings, ties or other products to this item.

## Assembling the Play Quilt

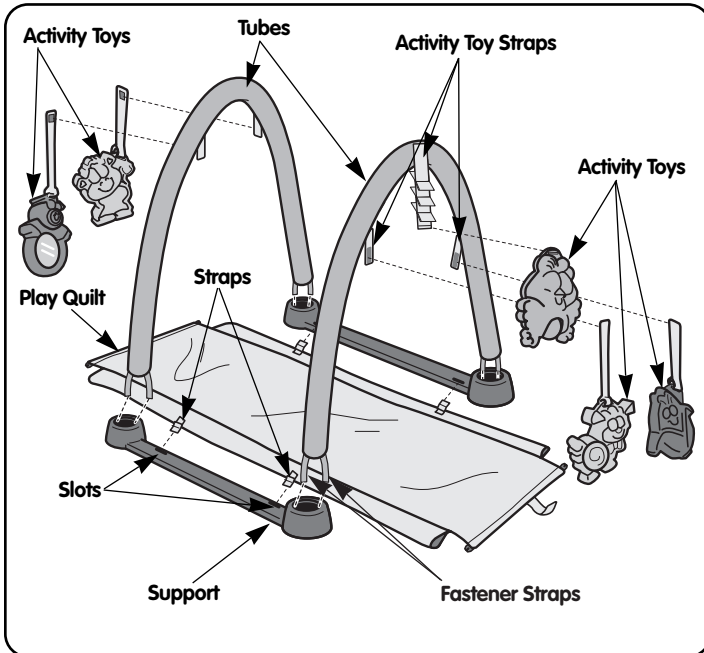

- Place the play quilt print side up on a flat surface.
- Fit the two straps on each side of the play quilt down through the slots in the supports. Make sure the tab at the end of each strap forms a "T" under the support. Pull up on the play quilt to be sure it is secure to the supports.
- Fit the two small fastener straps on each end of the tubes through the slots inside the circular opening in the supports. Fasten the fastener straps together to secure the tubes to the supports.

## Attaching the Activity Toys

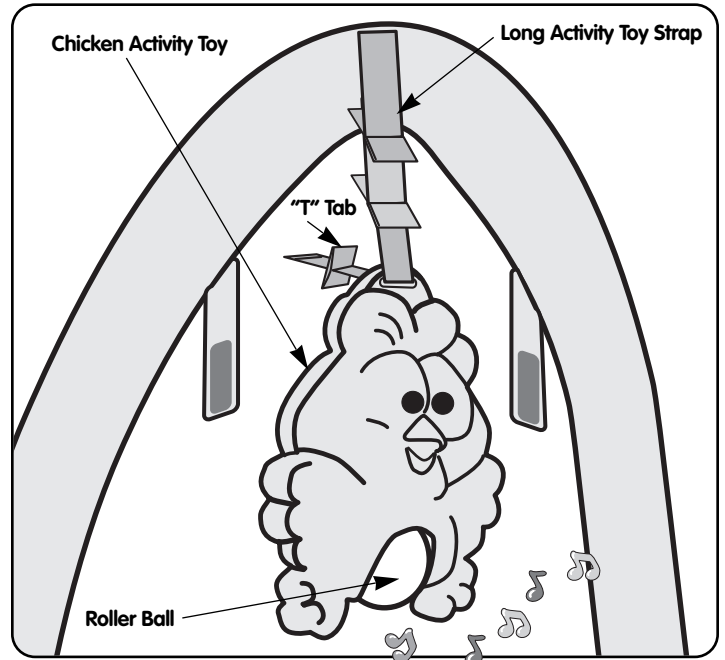


- Locate the longest activity toy strap on the tubes.
- Flatten the first tab on the longest activity toy strap.
- Insert the strap through the slot in the top of the chicken activity toy. Make sure the tab at the end of the strap forms a "T" under the slot.
- Pull firmly on the chicken activity toy to be sure it is secure.

**Hint:** To adjust the height of the chicken activity toy, flatten each tab as you pull the strap through the slot. When the toy is the desired height, make sure a tab forms a "T" behind the slot. Pull firmly on the toy after each adjustment to be sure the toy is secure.


- Spin the roller ball on the chicken activity toy to hear a friendly tune and see flashing lights!
- Fasten the remaining activity toys to the Velcro fasteners on the activity toy straps.

## Assembling the Barn

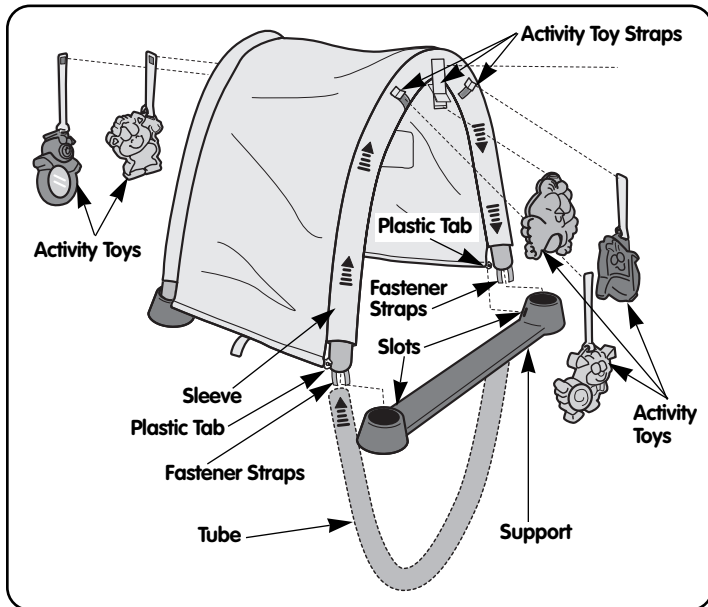

- Slide the tubes through the sleeves in each side of the play quilt.
- Position the supports so that the sides with the slots face inward.
- Fit the two small fastener straps on each end of the tubes through the slots inside the circular openings in the supports. Fasten the fastener straps together to secure the tubes to the supports.
- Fit the plastic tabs at the corners of the play quilt into the slots in the supports.
- Fasten the activity toys to the activity toy straps.

## Carry-Along

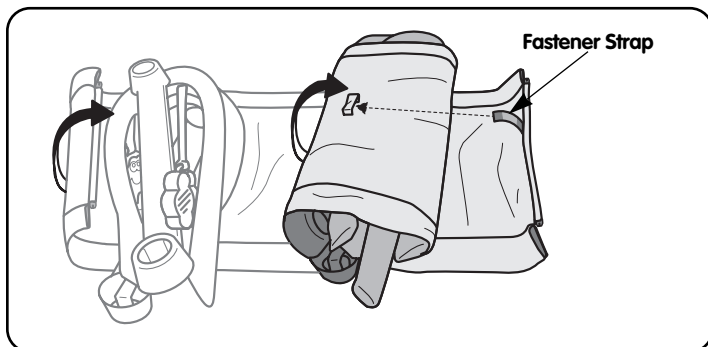


- Place the play quilt print side up on a flat surface.
- Attach the activity toys to the straps on the sides of the play quilt and place the toys on top of the quilt.
- Locate the fastener strap at one end of the play quilt. Place the supports and tubes at the opposite end of the play quilt and roll the play quilt from end to end.
- Fit the fastener strap through the loop on the outside of the play quilt and fasten to close.

## Battery Replacement



**CAUTION**

This product contains small parts.  
Batteries must be replaced by an adult.

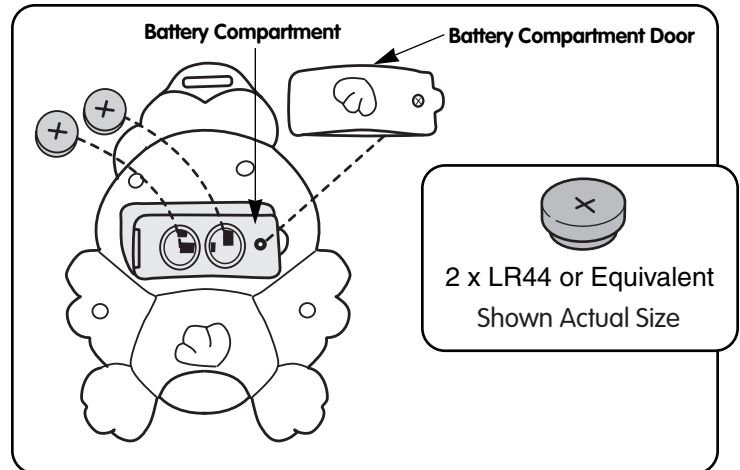

- Locate the battery compartment door on the back of the chicken activity toy.
- Loosen the screw in the battery compartment door with a Phillips screwdriver. (The screw will remain in the door.)
- Lift the battery compartment door to open.
- Remove the used batteries and dispose of them properly.
- Insert two new button-cell (LR44 or equivalent) alkaline batteries in the battery compartment as shown. Make sure the flat side of each battery (printed with the battery designation) faces up.

**Helpful Hint:** We recommend using alkaline batteries for longer battery life.

- Replace the battery compartment door and tighten the screw with a Phillips screwdriver. Do not over-tighten.
- When lights or sounds from this toy become faint or stop working, it's time to replace the batteries!

## Battery Tips

- Do not mix old and new batteries.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Remove the batteries during long periods of non-use. Always remove exhausted batteries from the toy. Battery leakage and corrosion can damage this toy. Dispose of batteries safely.
- Never short circuit the battery terminals.
- Non-rechargeable batteries are not to be recharged.
- Only batteries of the same or equivalent type as recommended in the "Battery Replacement" instructions are to be used.

## Battery Tips

- If removable rechargeable batteries are used, they are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the toy before they are charged.
- If you use a battery charger, it should be examined regularly for damage to the cord, plug, enclosure and other parts. Do not use a damaged battery charger until it has been properly repaired.
- When sounds from this toy become faint or stop working, it's time for an adult to replace the batteries!

## Care

- Machine-wash the play quilt in cold water on the gentle cycle. DO NOT use bleach. Tumble dry on low heat.
- Surface wash the tubes, activity toys and supports with a mild cleaning solution.
- This toy has no consumer serviceable parts. Please do not take this toy apart.

## FCC Note (United States Only)

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

## Consumer Information

### Questions? We'd like to hear from you!

Call Fisher-Price Consumer Relations, toll-free at **1-800-432-KIDS**, 8 AM - 6 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TTD equipment, please call 1-800-382-7470. Or, write to: Fisher-Price Consumer Relations, 636 Girard Avenue, East Aurora, New York 14052.

If you have any questions about this product:

**In CANADA**, Mattel Canada Inc. 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2. Questions? **1-800-567-7724**

**In GREAT BRITAIN**, Mattel U.K., Ltd. Helpline: 01628 500303.

**In AUSTRALIA**, Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia.  
Consumer Advisory Service 1-800-800-812 (valid only in Australia).

[www.fisher-price.com](http://www.fisher-price.com)

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>