

Instructions

Flip Track Rail and Road Set™

Model Number 72334




Please keep these instructions for future reference.

Parent assembly suggested for the beginner.

For best track performance, use on a flat, hard surface.

Parts

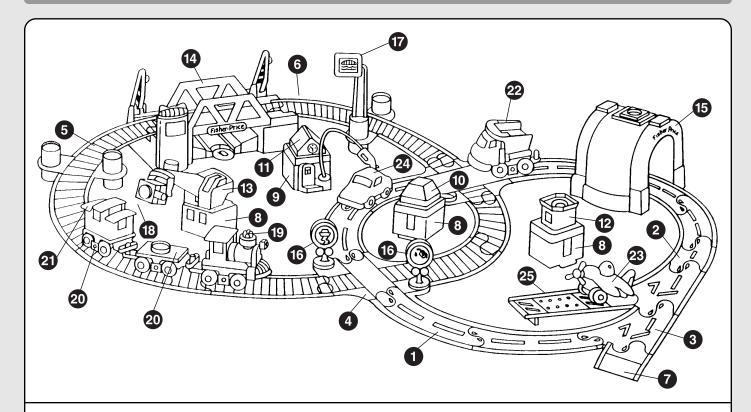

- 1. 11 Curved Tracks
- 2. 3 Straight Tracks
- 3. 2 Turnout Tracks
- 4. 2 Universal Connector Tracks
- 5. Left Ramp Track
- 6. Right Ramp Track
- 7. On/Off Ramp
- 8. 3 Bases
- 9. Gas Station

- 10. Roof I
- 11. Roof II
- 12. Control Tower
- 13. Crane
- 14. Bridge
- 15. Tunnel
- 16. 2 Round Signs
- 17. Overhead Sign
- 18. Crate


- 19. Engine
- 20. Flat Car
- 21. Removable Caboose Top
- 22. Dump Truck with Removable Bucket
- 23. Plane
- 24. Car
- 25. Runway


Decoration


Proper label application will help to keep the labels looking their best.

- · Wash your hands before applying the labels.
- Make sure the areas where the labels will be applied are clean and dry. Wipe this product with a clean, soft, dry cloth to remove any dust or oils.
- For best results, do not attempt to apply a label more than once.
- Apply the labels as shown in the illustrations.


Runway Track

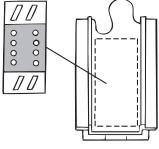

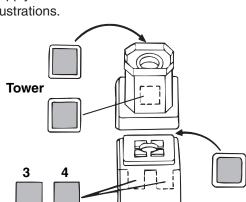


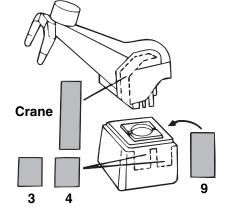



Decoration

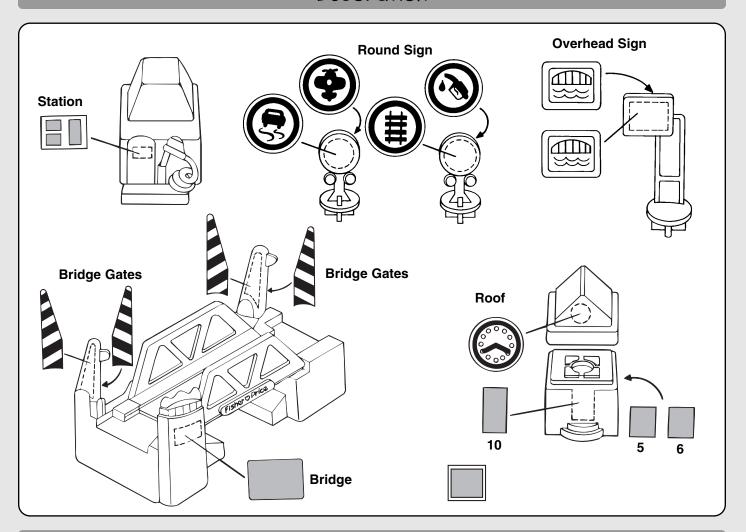


Assembly

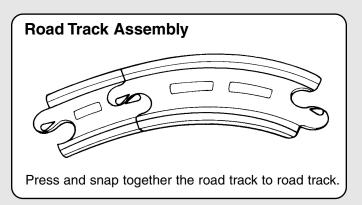


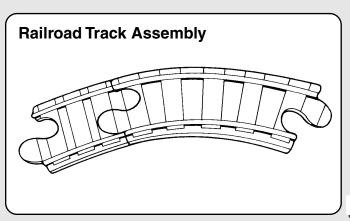


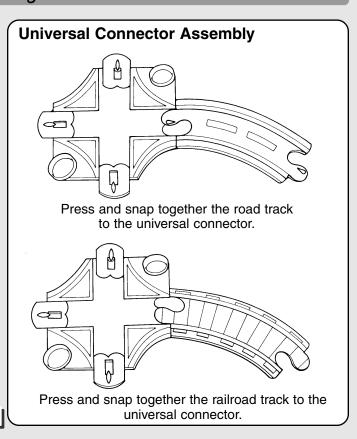



Assembly

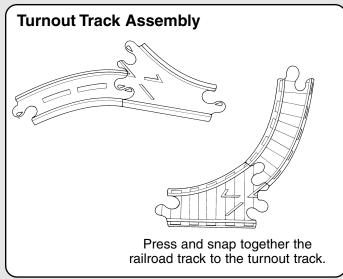


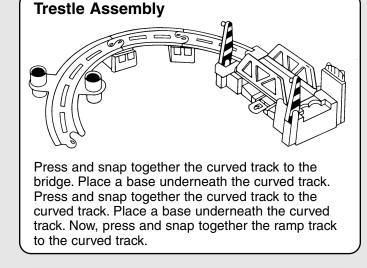

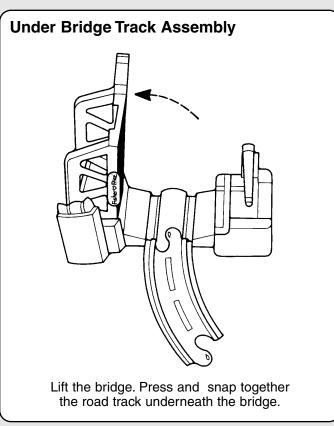

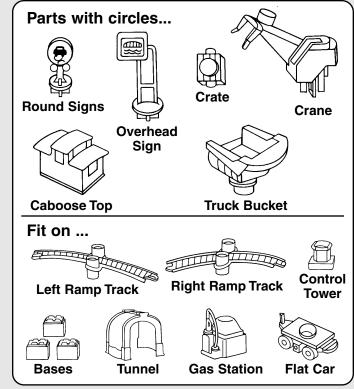

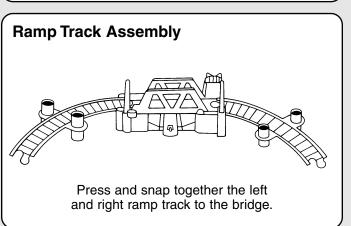

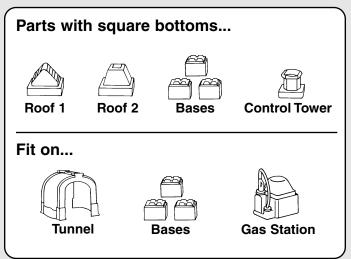


Assembly

Preschool children will enjoy using all parts of this toy. To start out, however, it may be less overwhelming to provide just a few basic parts, according to your child's age and development, play interests and abilities. Here are some hints for layout possibilities.


2 - 3 years

Start with a simple set-up, using only a few pieces of track.

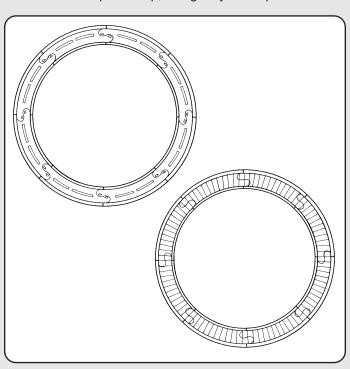


3 – 4 yearsAdd more track and accessories for more detailed layouts as development and skill increase.

Note: To assemble the track as shown, remove the straight track. Press and snap the straight track onto either side of the uninersal connector.

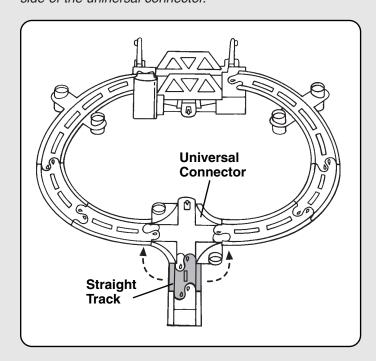

4 - 6 years

Build more complex layouts using most or all of the track and accessories.

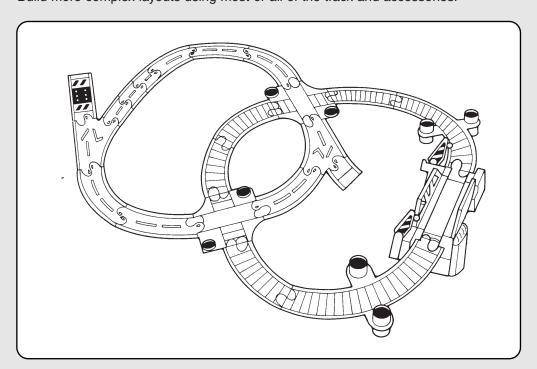

Care

To clean, wipe the surface of this toy with a mild soap and water solution and clean cloth. Rinse clean with water to remove soap residue. Do not immerse this toy.

Consumer Information



Questions? We'd like to hear from you!

Call Fisher-Price® Consumer Affairs, toll-free at **1-800-432-KIDS**, 8 AM - 6 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Or, write to:

Fisher-Price® Consumer Affairs 636 Girard Avenue East Aurora, New York 14052

www.fisher-price.com

Fisher-Price, Inc., a subsidiary of Mattel, Inc. East Aurora, New York 14052, U.S.A. ©2000 Mattel, Inc. All Rights Reserved. ® and ™ designate U.S. trademarks of Mattel, Inc.



Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com