

Fisher-Price®

SOUNDS 'N LIGHTS DELUXE SOOTHING BOUNCER

Model Number: 79008

Please save these instructions for future reference.

Tool needed for adult assembly:

Phillips screwdriver (not included).

Requires one, size "D" (LR20) alkaline battery (not included) in the soothing unit.

Requires three, size "AA" (LR6) alkaline batteries (not included) in the toy bar.



WARNINGS

⚠️ WARNING

To prevent serious injury and/or falls:

- Never use on any elevated surface.
- Never use as a carrier or lift while child is seated.
- Always use the restraint system.
- Never leave child unattended.
- Never use as a car seat.
- Never use with a child able to sit up unassisted.

CONSUMER INFORMATION

Occasionally a consumer may experience a problem with one of our products.

If this should happen, please call us toll-free, rather than return this product to the store.


Usually, we can solve the problem over the telephone or send you replacement parts.

Please call Fisher-Price® Consumer Affairs, toll-free at **1-800-432-KIDS**, between 8 AM - 5 PM EST, Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470.

Or write to:

Fisher-Price® Consumer Affairs
636 Girard Avenue
East Aurora, New York 14052.

PARTS

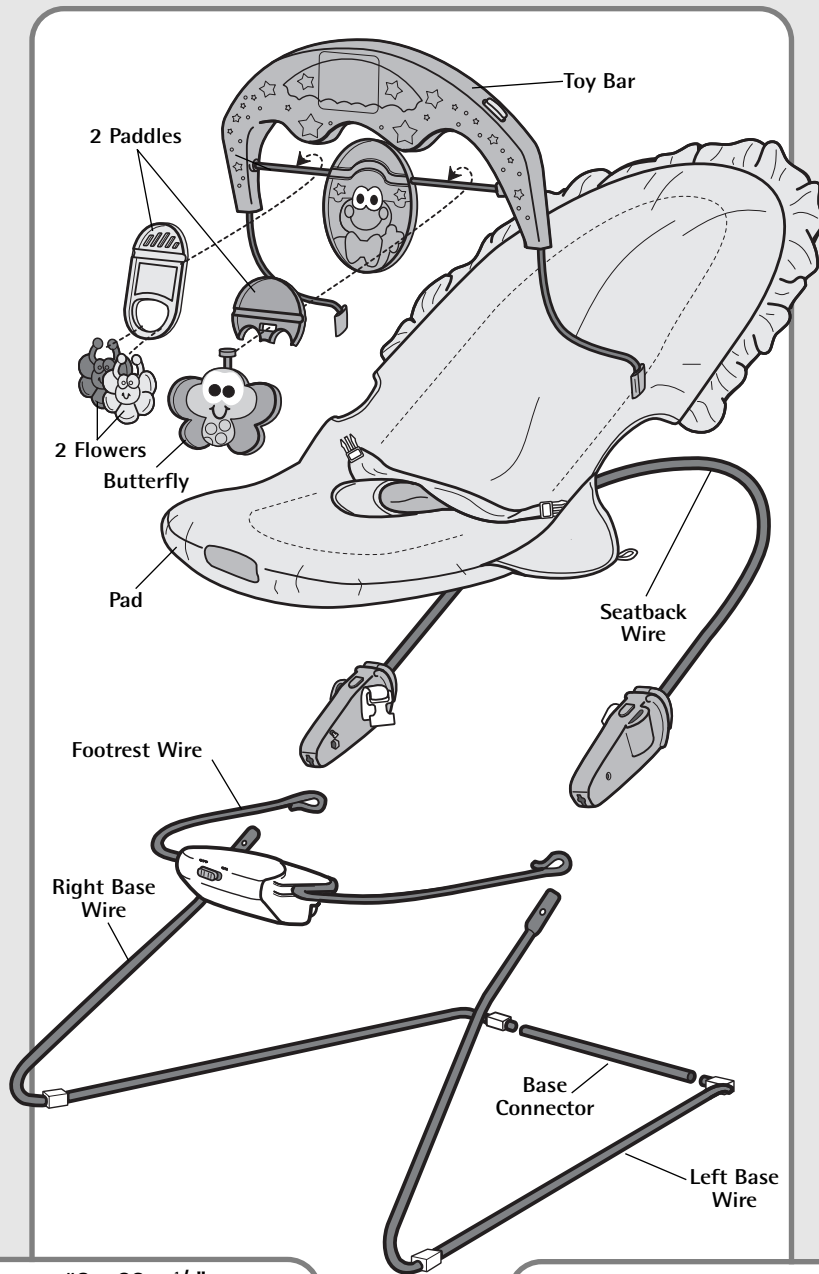

#8 - 32 x 1/2"
Screw - 2



Shown Actual Size

#8 - 32 Nut - 2




Shown Actual Size

ASSEMBLY

⚠ CAUTION


This package contains small parts.
Adult assembly is required.

1

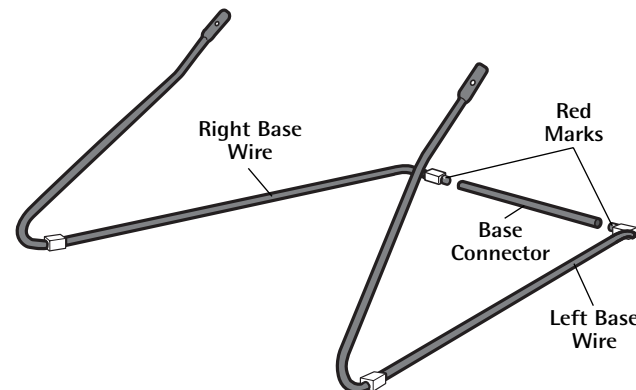


- Place the base connector on a flat surface as shown.
- Position the left and right base wires as shown. Note the locations of the red marks on the left and right base wire.
- Fit the left base wire into the base connector.
- Fit the right base wire into the base connector.
- **Make sure both red marks on the base wires are covered by the base connector.**

ASSEMBLY

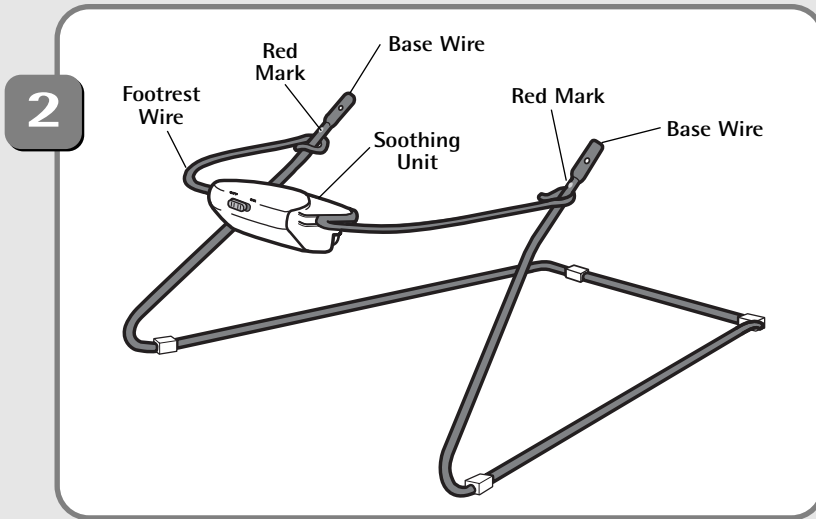


- Position the footrest wire so that the soothing unit is upright.
- While flexing the base wires toward each other, hook the footrest wire onto the ends of the base wires.
- Push the footrest wire down completely, below the red marks on the base wires.

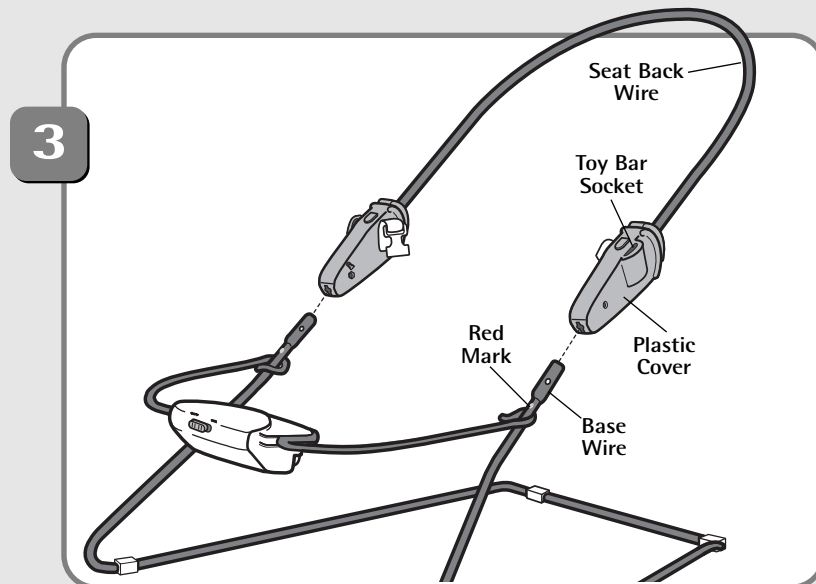

- Position the seat back wire **with the toy bar sockets upright**.
- Fit the seat back wire completely onto the base wires, so that each end covers the red mark on each base wire.
- **Make sure the plastic covers on the seat back wire cover the red marks on the base wire.**


ASSEMBLY

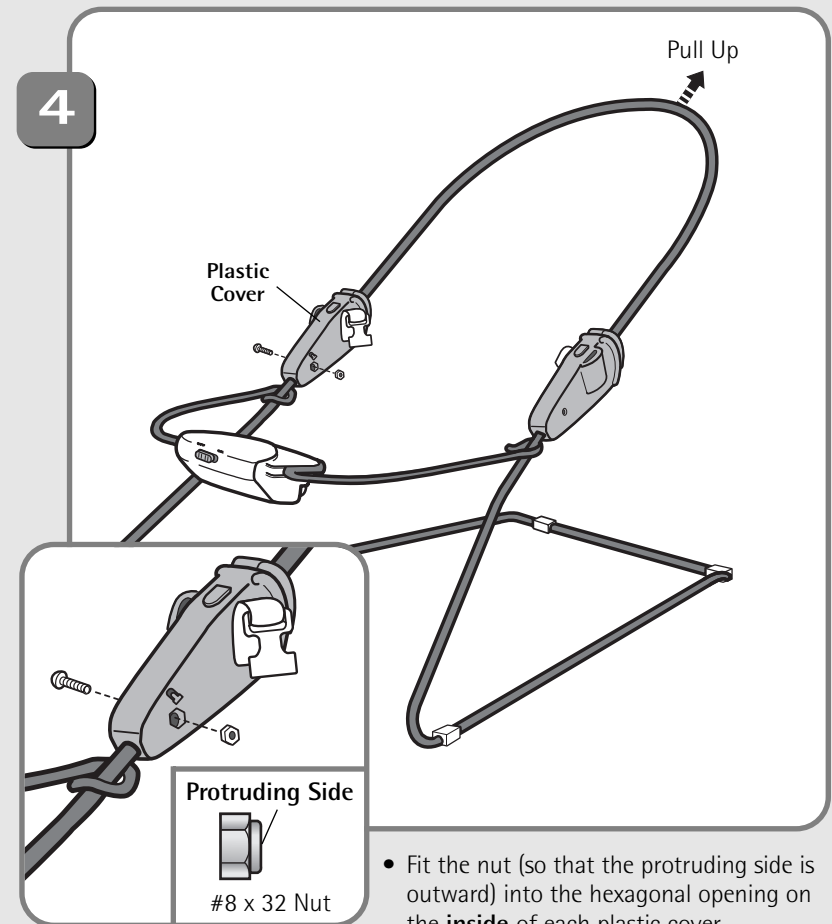

- Fit the nut (so that the protruding side is outward) into the hexagonal opening on the **inside** of each plastic cover.
- Insert a screw through the **outside** of each plastic cover and tighten with a Phillips screwdriver. Do not over-tighten.
- Pull up on the seat back wire to be sure it is secure. If you can remove either end of the seat back wire, you have not assembled it correctly. Remove the screws, re-read and repeat Assembly steps 3 and 4.

ASSEMBLY

5

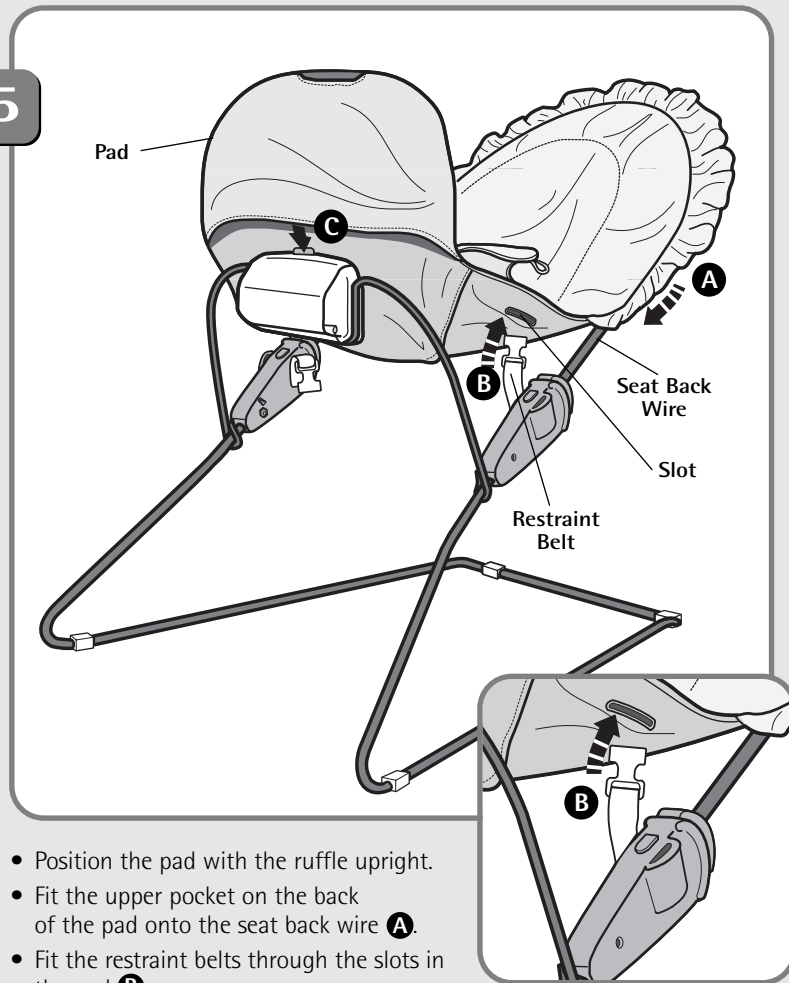


- Position the pad with the ruffle upright.
- Fit the upper pocket on the back of the pad onto the seat back wire **A**.
- Fit the restraint belts through the slots in the pad **B**.
- Lift the footrest wire. Fit the lower pocket on the back of the pad onto the footrest wire **C**. Lower the footrest wire.

Hint: Before assembling the lower portion of the pad to the footrest wire, you may want to install the battery in the soothing unit. Please see the next section (page 10, Battery Installation) for instructions.

ASSEMBLY

6

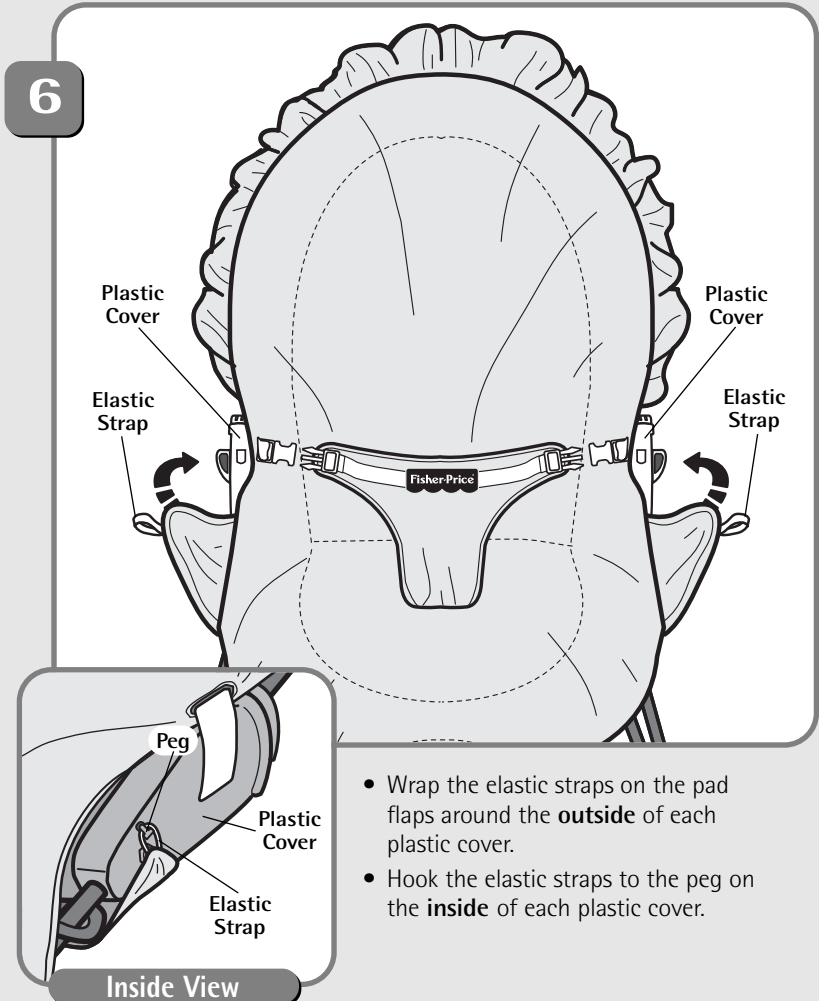


- Wrap the elastic straps on the pad flaps around the **outside** of each plastic cover.
- Hook the elastic straps to the peg on the **inside** of each plastic cover.

Inside View

ASSEMBLY

BATTERY INSTALLATION

7

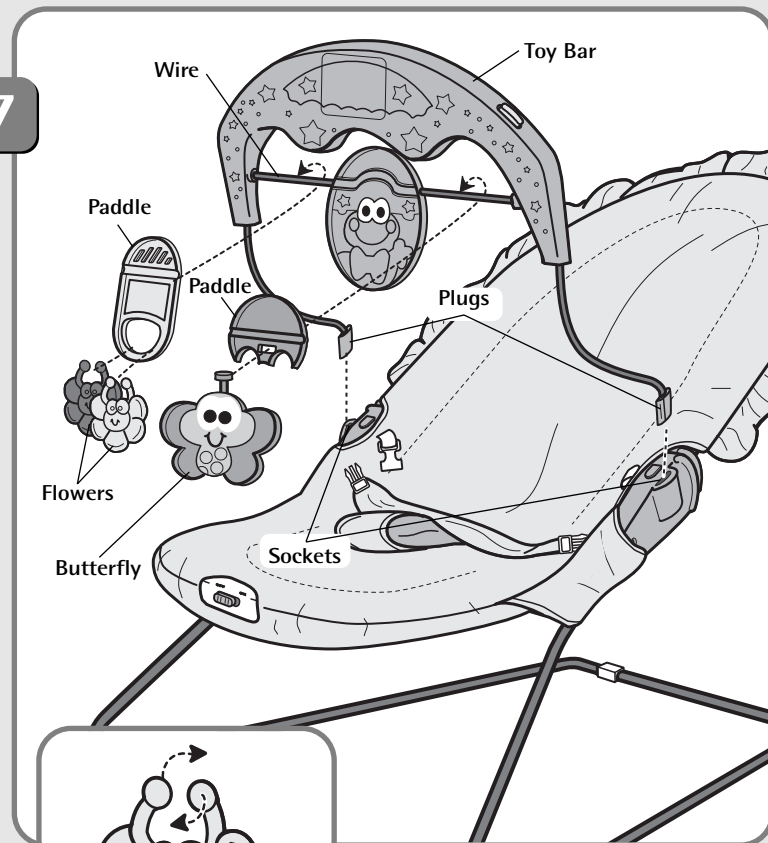


- Fit the toy bar plugs into the socket in each plastic cover.
- Snap the paddles to the toy bar wire.
- Fit the tab on the butterfly into the slot in the paddle.

- The flowers can be attached to the paddles.



Hint: Twist the ends of the flowers apart to attach them to the paddles.

Assembly is now complete.

- The toy bar is removable. Simply pull up to remove.

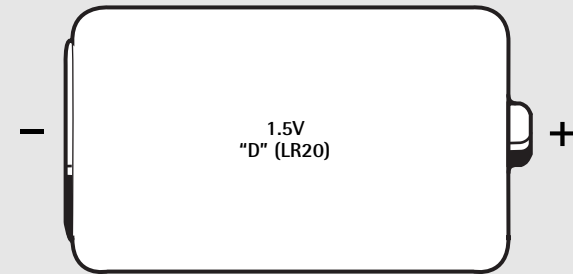

SHOWN ACTUAL SIZE

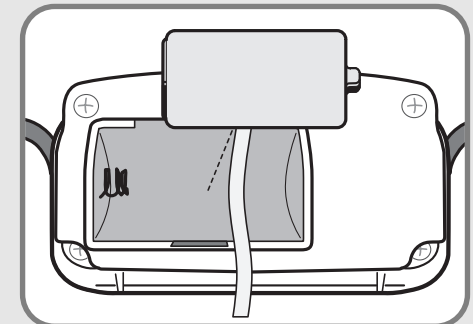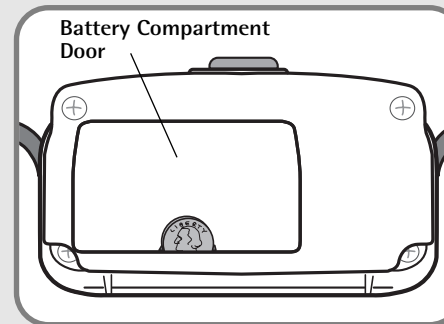


Soothing Unit

- Lift the footrest wire. Remove the pad from the footrest wire.
- Insert a coin into the battery compartment door and pry the battery compartment door off.
- Insert one, size "D" (LR20) alkaline battery, as indicated inside the battery compartment. Be sure to place the battery on top of the ribbon.

Hint: For easy battery removal, simply lift the ribbon.

- Replace the battery compartment door and be sure it snaps securely closed.
- Replace the bottom of the pad onto the footrest wire.
- Lower the footrest wire.

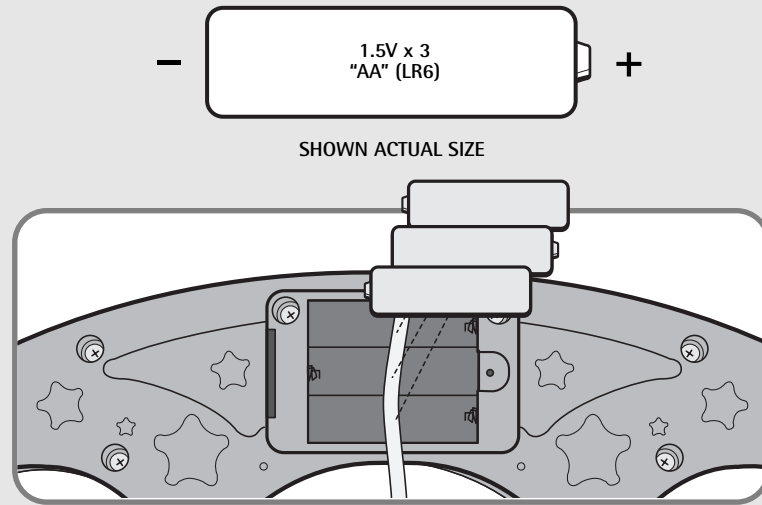

Toy Bar

- Locate the battery compartment door on the back side of the toy bar.
- Loosen the screw in the battery compartment door with a Phillips screwdriver and lift to remove the door.
- Insert three, new, size "AA" (LR6) alkaline batteries, as indicated inside the battery compartment. Be sure to place the batteries on top of the ribbon.

Hint: For easy battery removal, simply lift the ribbon.

- Replace the battery compartment door and tighten the screw with a Phillips screwdriver. Do not over-tighten.


Battery Tips

- Do not mix old and new batteries.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Remove the batteries during long periods of non-use. Always remove the exhausted batteries from the product. Battery leakage and corrosion can damage the product. Dispose of the batteries safely.
- Never short circuit the battery terminals.
- Non-rechargeable batteries are not to be recharged.
- Only batteries of the same or equivalent type as recommended in the "Battery Installation" instructions are to be used.
- If removable rechargeable batteries are used, they are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the product before they are charged.
- If you use a battery charger, it should be examined regularly for damage to the cord, plug, enclosure and other parts. Do not use a damaged battery charger until it has been properly repaired.

⚠ WARNING

To prevent serious injury and/or falls:


- Never use on any elevated surface.
- Never use as a carrier or lift while child is seated.
- Always use the restraint system.
- Never leave child unattended.
- Never use with a child able to sit up unassisted.

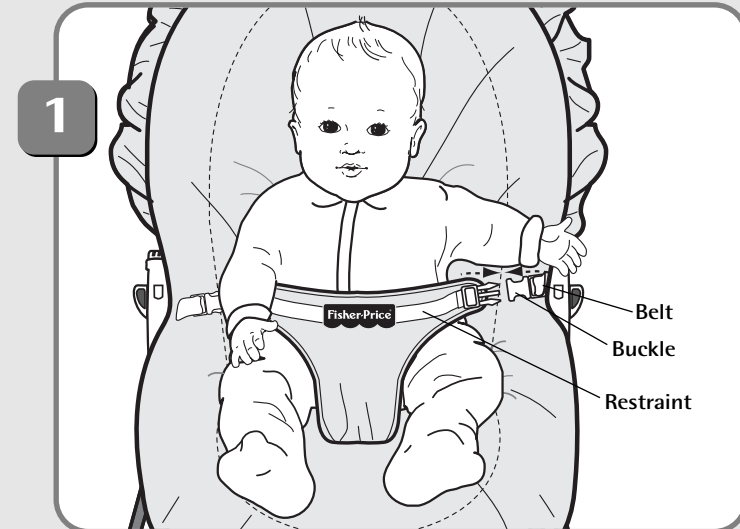

Securing Your Child

- If the toy bar is attached, remove it before placing your child in the seat.
- Place your child in the seat. Position the restraint between your child's legs.
- Fasten both belts to the buckles on each side of the restraint. **Make sure you hear a "click" on both sides.**
- Check to be sure the restraint is securely attached by pulling it away from your child. The restraint should remain attached.
- Attach the toy bar, if desired (see Assembly step 7).

SET-UP & USE

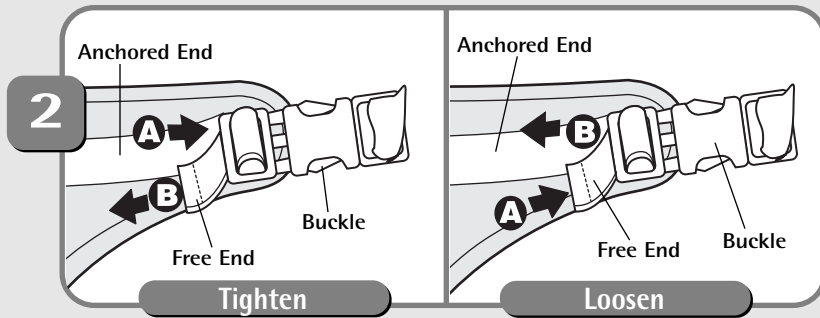

To tighten the restraint:


- Feed the anchored end of the restraint strap up through the buckle to form a loop **A**.
- Pull the free end of the restraint strap **B**.
- Repeat this procedure to tighten the other restraint strap.

To loosen the restraint:

- Feed the free end of the restraint strap up through the buckle to form a loop **A**.
- Enlarge the loop by pulling on the end of the loop toward the buckle.
- Pull the anchored end of the restraint strap to shorten the free end of the restraint strap **B**.
- Repeat this procedure to loosen the other restraint strap.

Please Note: After adjusting the restraint straps to fit your child, make sure you pull on them to be sure they are securely fastened.

SET-UP & USE

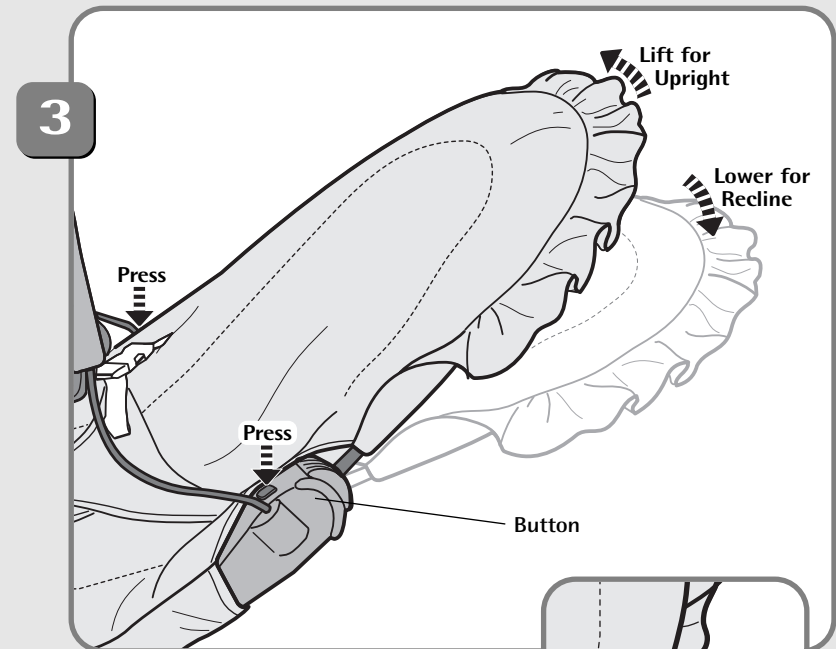

Seat Back Adjustment


The seat back can be adjusted upright or reclined for baby's comfort.

Reclined – Press the button on each plastic cover to lower the seat back.

Hint: If your child is not seated in the seat, you will need to push the seat back at the same time you are pressing both buttons on the plastic covers.

Upright – Lift the seat back until the buttons snap into the opening in each plastic covers. Make sure you hear a "click" on each side. Push the seat back to be sure it is secure in the upright position.


SET-UP & USE

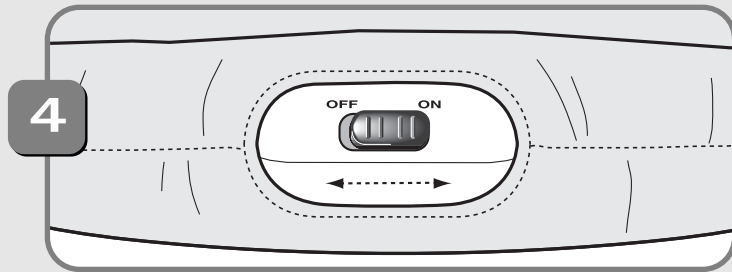

Soothing Vibrations

- Make sure your child is properly secured in the seat.
- Slide the ON/OFF switch on the soothing unit to the "ON" position. The seat will vibrate.
- Slide the ON/OFF switch on the soothing unit to the "OFF" position. The seat will not vibrate.

IMPORTANT! If vibrations from the soothing unit become faint, or if there are no vibrations, remove the battery from the soothing unit and dispose of it properly. Replace the battery with a new, size "D" (LR20) alkaline battery.

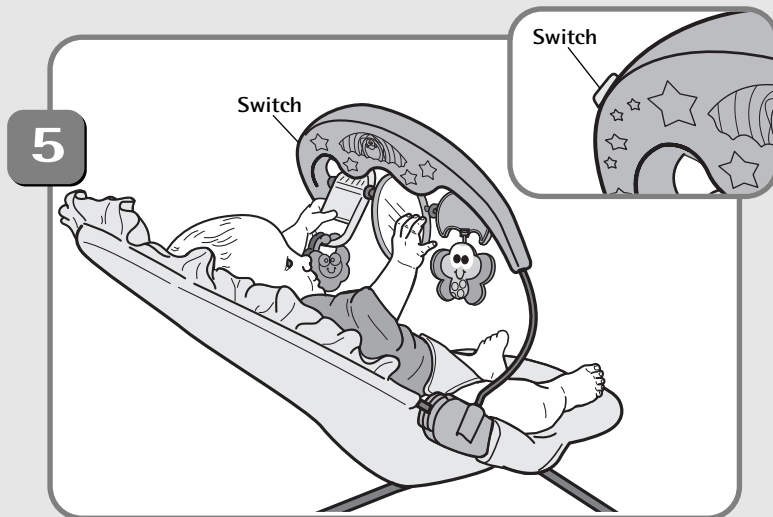

Sounds and Lights

Long-Play Mode

- Slide the switch to 🎵 for long-play mode. Baby delights to five minutes of music and light patterns when the mirror is batted.

Short-Play Mode

- Slide the switch to 🎵 for short-play mode. Baby enjoys one song and a light pattern when the mirror is batted.

Off

- Slide the switch to ○ to turn off sound and lights.

CARE

The pad is machine washable. Wash the pad separately in cold water on the gentle cycle.
Do not use bleach. Tumble dry separately on low heat and remove promptly. The frame, toy bar, mirror, paddles, butterfly and flowers may be wiped clean using a mild cleaning solution and a damp cloth.
Do not immerse the soothing unit or toy bar.

To remove the pad:

- Remove the toy bar.
- Lift the footrest wire and remove the pad lower pocket.
- Fit the restraint straps back through the slots in the pad.
- Slide the pad upper pocket off of the seat back wire.

To re-assemble the pad:

- Refer to Assembly steps 5 and 6.

FCC Note (United States Only)

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>