



Please keep this instruction sheet for future reference,
as it contains important information.

Adult assembly is required.

Requires three "AA" (LR6) **alkaline** batteries (not included).

Tool required for battery installation: Phillips screwdriver (not included).

Link-a-Doos

www.fisher-price.com

Kick & Play Piano™

 
WARNING

To prevent child from climbing out of crib, do not attach this product to crib rail once child can sit up unassisted or can pull to a standing position.

CAUTION

- Always attach all provided fasteners (strings, straps, clamps, etc.) tightly to a crib or playpen according to the instructions. Check frequently.
- Do not add additional strings or straps to attach to crib or playpen.

Battery Installation

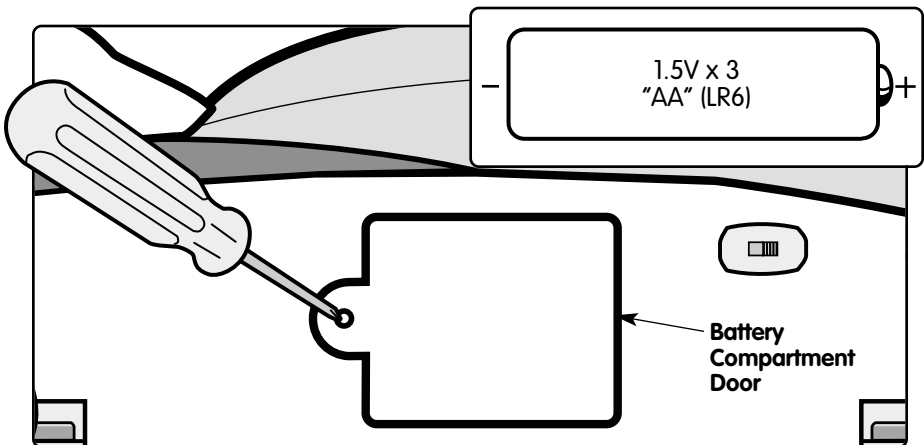

For best performance, we recommend replacing the batteries that came with this toy with three, new alkaline "AA" (LR6) batteries.

- Locate the battery compartment door on the back of the toy.
- Loosen the screw in the battery compartment door with a Phillips screwdriver. Remove the battery compartment door.
- Insert three "AA" (LR6) **alkaline** batteries.

Hint: We recommend using **alkaline** batteries for longer life.

 
- Replace the battery compartment door and tighten the screws with a Phillips screwdriver. Do not over-tighten.
- When sounds or lights from this toy become faint or stop, it's time for an adult to change the batteries!

Battery Safety Information

Batteries may leak fluids that can cause a chemical burn injury or ruin your toy. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the toy. Dispose of batteries safely. Do not dispose of batteries in a fire. The batteries may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

Attaching Kick & Play Piano™ to a Crib

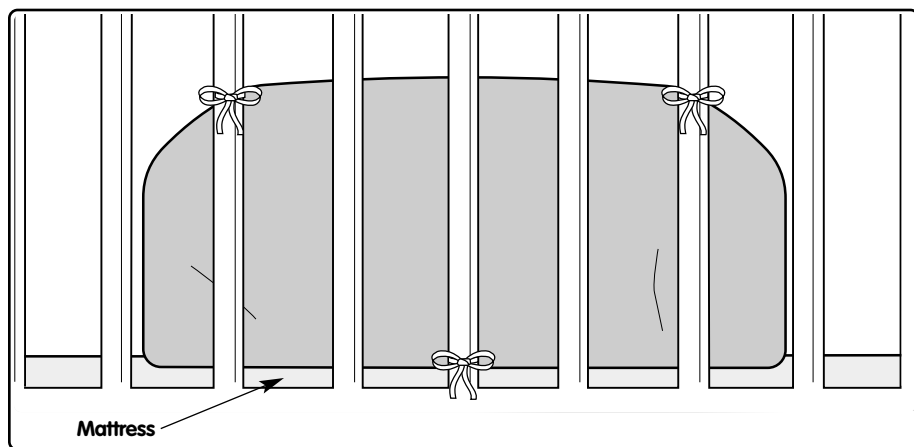


- Position Kick & Play Piano™ against the rails on the inside of baby's crib near the mattress.

Hint: For newborns, place Kick & Play Piano along a side rail where baby can easily hear and see it. For infants, place Kick & Play Piano near baby's feet, within baby's reach.


- Tie each fastener to fit snugly around a crib rail.
- You can easily remove Kick & Play Piano from the crib rails for out-of-crib play.

 Play Time!

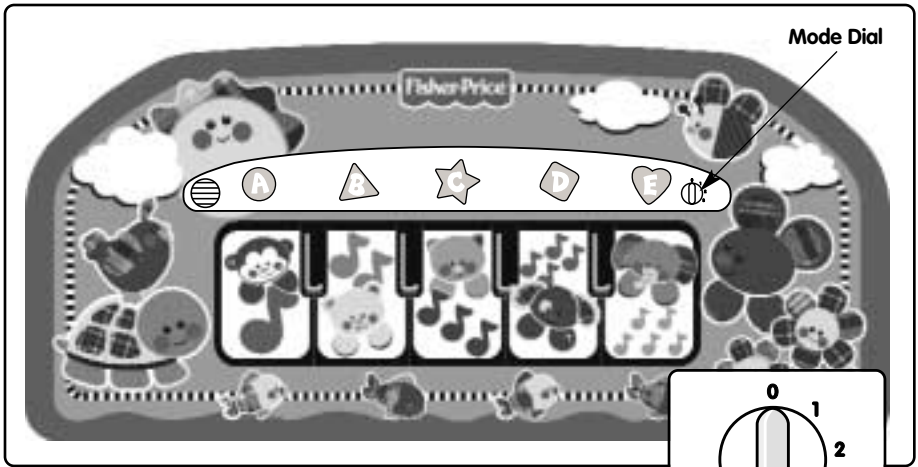

Kick & Play Piano™ features three play modes:

 - Mode 1 - Melody Medley
- Mode 2 - Play & Learn
- Mode 3 - Floor Piano

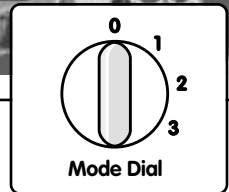

Turn the four position mode dial to select a play mode or to turn OFF 0.

For longest battery life, always remember to turn power OFF 0 when not in use.

Mode 1: Melody Medley

- Turn the mode dial to 1 to start a medley of 10 different nursery melodies and a twinkling light display. The medley will play through three times to total approximately 10 minutes of music and lights!
- Press a piano key at any time during the medley to advance to the next melody. The nursery medley will restart and, if uninterrupted, will cycle through all 10 melodies three times.
- After Kick & Play Piano has cycled through each of the 10 melodies three times; it will automatically turn off (sleep). Press any key to restart this mode.


Mode 2: Play & Learn

- Turn the mode dial to 2 where baby can learn about letters, numbers and animals.
- Baby can kick or press any piano key to hear the letter pressed, the name of the animal depicted, and the animal's sound.
- When baby kicks or presses any piano key a second time, they will hear the number pressed. The Kick & Play Piano™ will then count out the number accompanied by flashing lights and then play a short tune.
- If your child is not actively playing with the Kick & Play Piano, it will encourage your child to do so by twice playing an animal sound prompt. If your child does not press a piano key either time, Kick & Play Piano automatically turns off (sleep). Press any key to restart this mode.

Mode 3: Floor Piano


- Turn the mode dial to position 3 for keyboard fun.
- Your child can press the piano keys to compose a fun tune! The lights twinkle each time a key is pressed.
- If your child is not actively playing with the Kick & Play Piano, it will encourage your child to do so by twice playing a musical prompt. If your child does not press a piano key either time, the Kick & Play Piano will switch into auto-sleep. Press any key to restart this mode.

 Volume Adjustment

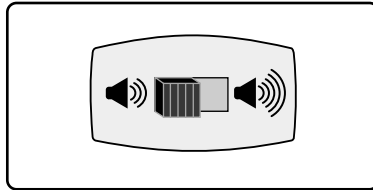

- Open the back of the Kick & Play Piano™ cover and locate the volume switch.
- Adjust volume to high  or low , for your child's comfort.

 Care

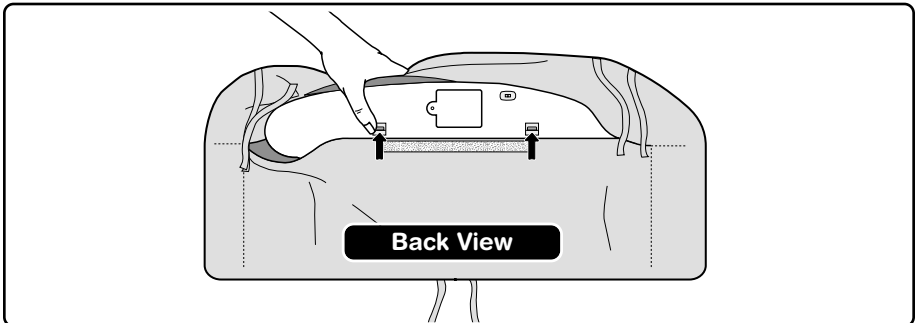

- Hand wash the cover in cold water with a mild detergent. Line dry. DO NOT machine wash or dry the cover. Surface clean the piano by wiping it with a damp cloth. Do not immerse the piano.
- To remove the cover, open the flap on the back of the piano. Push up the lock tabs on the back, one side at a time to separate the cover from the piano. Remove the cover.
- To replace the cover, fit the piano into the cover. Make sure the shape lights on the front of the piano fit into the shape cut-outs in the cover.
- Gently press down on the cover between the shape lights to "click" it in place.
- Pull gently on the cover to make sure it is attached to the piano.
- Close and fasten the cover.

Consumer Information

Questions? We'd like to hear from you!

Call Fisher-Price® Consumer Relations, toll-free at **1-800-432-5437**, 8 AM - 6 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Or, write to: Fisher-Price® Consumer Relations, 636 Girard Avenue, East Aurora, New York 14052.

FCC Note (United States Only)

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

For countries outside the United States:

CANADA: Questions? **1-800-567-7724**. Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2.

GREAT BRITAIN: Mattel UK Ltd, Vanwall Business Park, Maidenhead SL6 4UB. Helpline: 01628 500302.

AUSTRALIA: Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

NEW ZEALAND: 16-18 William Pickering Drive, Albany 1331, Auckland.

ASIA: Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>