

Fisher-Price®

**C6324
Instructions**

Learning Phone™

Please keep this instruction sheet for future reference, as it contains important information.

Requires three "AAA" batteries (included).

Adult assembly is required for battery replacement.



Tool required for battery replacement:
Phillips screwdriver (not included).



Laugh & Learn™

www.fisher-price.com

Battery Replacement

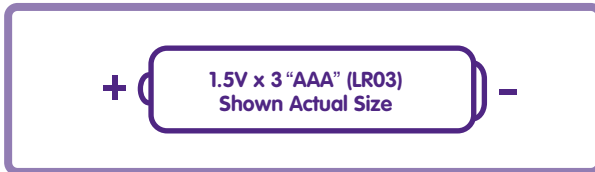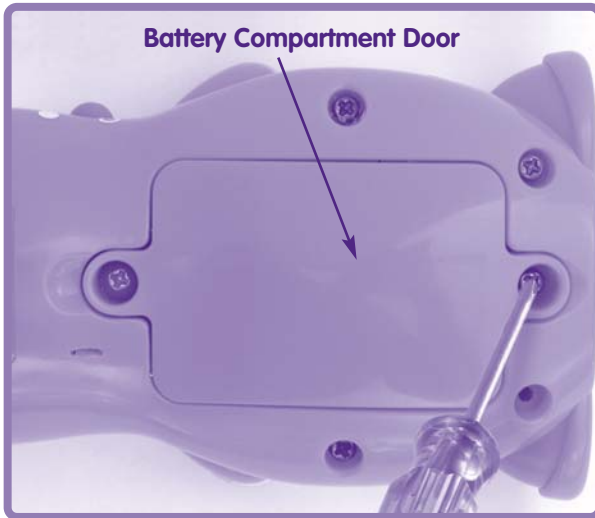

For best performance, we recommend replacing the batteries that came with this toy with three, new “AAA” (LR03) alkaline batteries.

- Locate the battery compartment on the bottom of the toy.
- Loosen the screws in the battery compartment door with a Phillips screwdriver. Remove the battery compartment door.
- Insert three “AAA” (LR03) **alkaline** batteries, as indicated inside the battery compartment.

Hint: We recommend using **alkaline** batteries for longer life.

- Replace the battery compartment door and tighten the screws with a Phillips screwdriver. Do not over-tighten.
- When lights or sounds from this toy become faint or stop, it's time for an adult to change the batteries!

Battery Safety Information

Batteries may leak fluids that can cause a chemical burn injury or ruin your toy. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the toy. Dispose of batteries safely. Do not dispose of batteries in a fire. The batteries may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

FCC Note (United States Only)




Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

3 Interactive Play Modes



- Locate the On/Off switch on the side of the toy.
- Slide the switch to the ● position to turn the toy on and to the ○ position to turn it off.
- Press one of the three mode buttons to chose a learning mode: Alphabet ; Numbers ; or Music .
- Low battery power may affect toy function, including irregular sound/lights and the toy may not turn off.
- Replace all batteries with alkaline batteries only.

Alphabet

- Press the keys to hear the letters of the alphabet and see them displayed.
- Press the “O” key to hear fun greetings or the alphabet song.

Number

- Press the keys to hear the number and see it displayed along with a short ditty.
- Press the “O” key to hear fun greetings or a counting song.

Music

- Press the keys to hear lots of fun songs and see a light show.
- Press the “O” key to hear a greeting or another song.

Care

- Wipe this toy with a clean cloth dampened with a mild soap and water solution. Do not immerse this toy.
- This toy has no consumer serviceable parts. Do not take this toy apart.

Consumer Information

Questions? We'd like to hear from you! Call Fisher-Price® Consumer Relations, toll-free at **1-800-432-5437**, 8 AM - 6 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Or, visit us on-line at www.service.fisher-price.com.

Write to us at:

Fisher-Price® Consumer Relations

636 Girard Avenue, East Aurora, New York 14052

Learn every day - through fun, familiar play!

Make learning more fun with the whole collection of **Laugh & Learn™** toys. With rich music, lyrics and lots of activities, they combine early academics and everyday experiences, for the way kids really learn.

Each sold separately and subject to availability.



Learning Home™
C6327



Musical Learning Chair™
H4609



Learning Toolbench™
G6167



Learning Keys
G9452



Learning Pots & Pans™
G6685



Learning CD Player™
H6319



Learning Puppy™
C6325



Stride-to-Ride Learning Walker™
H6372



Learning Table™
C5522



Learning Birdbath™
C6513



For countries outside the United States:

CANADA Questions? 1-800-567-7724. Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2.

GREAT BRITAIN Mattel UK Ltd, Vanwall Business Park, Maidenhead SL6 4UB. Helpline: 01628 500302.

AUSTRALIA Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

NEW ZEALAND 16-18 William Pickering Drive, Albany 1331, Auckland.

ASIA Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>