

Fisher-Price®

C6325
Instructions

Learning Puppy™

Please keep this instruction sheet for future reference, as it contains important information.

Requires three "AA" batteries (included).

Adult assembly is required for battery replacement.

Tool required for battery replacement:
Phillips screwdriver
(not included).



Laugh & Learn™

www.fisher-price.com


Before Use

⚠ CAUTION

Please keep small parts such as the plastic tab out of children's reach. Throw the plastic tab away.

Note: A plastic tab was attached to the toy for in-store demonstration purposes. While the tab may have already been removed, check the back of the toy to be sure. If the plastic tab is still attached, open the fasteners on the back of the toy and pull and remove the tab. Close the fasteners and throw the plastic tab away.

Battery Replacement

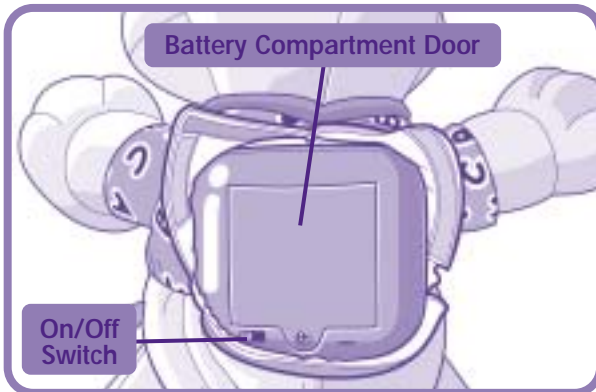


For best results, we recommend replacing the batteries that came with this toy with three, new "AA" (LR6) alkaline batteries.

- Open the fasteners on the back of the toy to access the battery compartment.
- Loosen the screws in the battery compartment door with a Phillips screwdriver. Remove the battery compartment door. Throw the exhausted batteries away.
- Insert three, new "AA" (LR6) **alkaline** batteries.

Hint: We recommend using **alkaline** batteries for longer battery life.

- Replace the battery compartment door and tighten the screws with a Phillips screwdriver. Do not over-tighten.
- Close the fasteners on the toy.
- When sounds or lights from this toy become faint or stop, it's time for an adult to change the batteries!

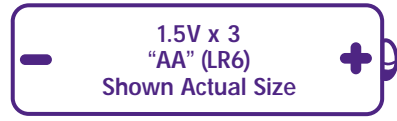

Battery Safety Information

Batteries may leak fluids that can cause a chemical burn injury or ruin your toy. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the toy. Dispose of batteries safely. Do not dispose of batteries in a fire. The batteries may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

FCC Note (United States Only)

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

2 Interactive Play Modes!

- Locate the mode select switch on puppy's left foot.
- Press the left foot to turn the toy on and start in learning mode. Press again for music mode. Press once more to turn the toy off.

Hint: If you'd like your child to play with this toy as a regular plush without sounds and lights, there is an On/Off switch located inside the back of the toy. Open the fasteners on the back of the toy, and slide the switch to either off ○ or on ●.

- Low battery power may affect toy function, including irregular sound/lights and the toy may not turn off.
- Replace all batteries with alkaline batteries only.



ABC Learning Mode

- Press the puppy's right foot, left hand, nose or tummy or right ear to hear it identified followed by a short ditty. Press again to learn a color.
- Press the note button 🎵 on the puppy's right hand to hear the A-B-C song. Press again to hear another fun song about colors, a counting song or a song about the parts of the body.

🎵 Music Mode

- Press the puppy's right foot to hear "This Little Puppy Went to Market." Press again to hear a fun phase.
- Press the note button 🎵 on the puppy's right hand to hear "Head, Shoulders, Knees and Toes." Press again to hear a fun phase.
- Press the puppy's right ear to hear "Do Your Ears Hang Low?" Press again to hear a fun phase.
- Press the puppy's left hand to hear "Pat-a-Cake." Press again to hear a fun phase.
- Press the puppy's tummy to hear "If You're Happy and You Know It." Press again to hear the puppy giggle and bark.
- Press the puppy's nose to hear "The Itsy-Bitsy Spider." Press again for a fun phase.

Care

- Wipe this toy with a clean cloth dampened with a mild soap and water solution. Do not immerse this toy.
- This toy has no consumer serviceable parts. Do not take this toy apart.

Consumer Information

Questions? We'd like to hear from you! Call Fisher-Price® Consumer Relations, toll-free at **1-800-432-5437**, 8 AM - 6 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Or, write to: Fisher-Price® Consumer Relations, 636 Girard Avenue, East Aurora, New York 14052.

Create a world of learning at home!

Collect all these **Laugh & Learn™** toys.
Each has a special place in the Learning Home!



Learning Home™
C6327



Learning Table™
C5522



Learning Phone™
C6324



Learning Birdbath™
C6513

For countries outside the United States:

CANADA Questions? 1-800-567-7724. Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2.

GREAT BRITAIN Mattel UK Ltd, Vanwall Business Park, Maidenhead SL6 4UB. Helpline: 01628 500302.

AUSTRALIA Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

NEW ZEALAND 16-18 William Pickering Drive, Albany 1331, Auckland.

ASIA Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>