



Please keep this instruction sheet for future reference, as it contains important information.

Requires three "C" batteries (included).

Adult assembly is required.

Tool required for assembly: Phillips screwdriver (not included).



www.fisher-price.com

Dancin' Bandstand™

Download from www.Somanuals.com. All Manuals Search And Download.

Parts


⚠ CAUTION

Please keep small parts such as the plastic tab out of children's reach. Throw the plastic tab away.


Before Use: A plastic tab was attached to the toy for in-store demonstration purposes. While the tab may have already been removed, check the underside of the keyboard to be sure. If the plastic tab is still attached, pull and remove the tab. Throw the plastic tab away.



Base with Mat

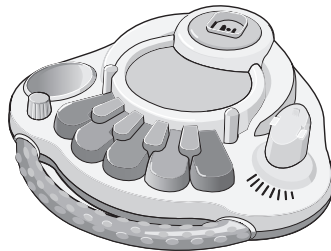

Keyboard

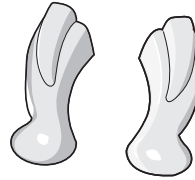

2 Feet (Larger)



2 Feet (Smaller)



Horns



Guitar



Monkey



#8 x 1/2" Screw – 8
Fastener Shown Actual Size


Note: Tighten or loosen all screws with a Phillips screwdriver. Do not over-tighten the screws.

Assembly

⚠ CAUTION


This product contains small parts in its unassembled state. Adult assembly is required.

1

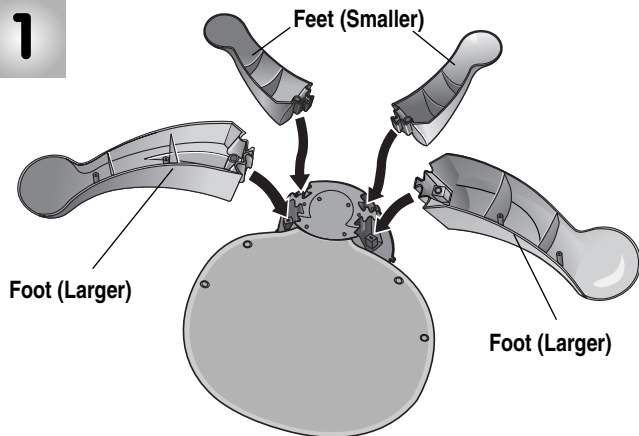


- Position the base so the bottom is facing you.
- Slide the two larger feet into the grooves in the base, as shown. Be sure you do not pinch the mat when you attach the feet.
- Slide the two smaller feet into the grooves in the base, as shown.

2

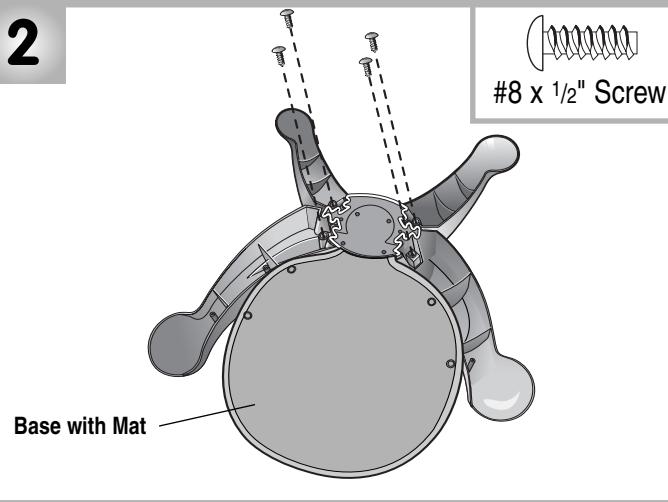


- Insert a screw into each of the four feet. Tighten the screws.

3

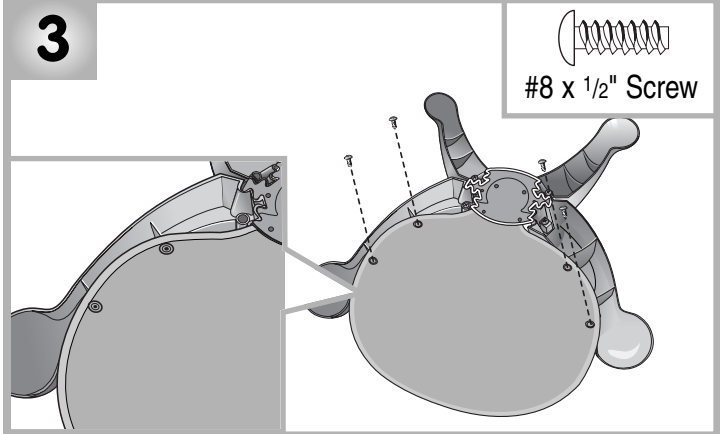


- Fit the four grommets on the mat onto the pegs on the larger feet, as shown.
- Insert a screw through each of the four grommets and into the pegs. Tighten the screws.

4

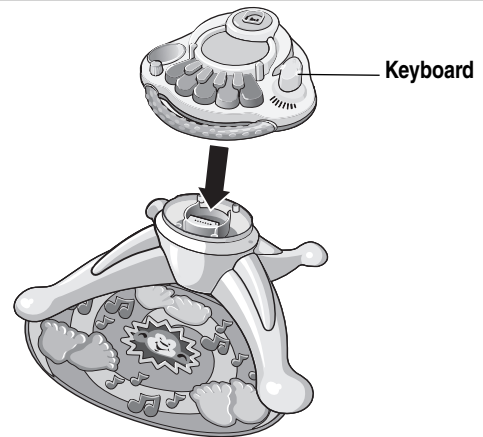


- "Snap" the keyboard on the base.
- Pull up on the keyboard to be sure it is secure.

5

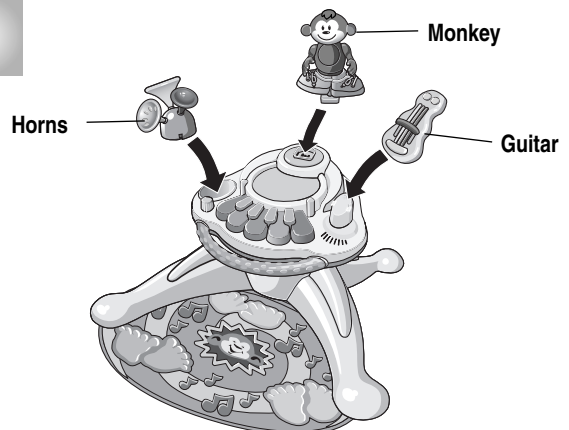


- "Snap" the horns, monkey and guitar to the base, as shown. **Assembly is now complete.**

Battery Replacement

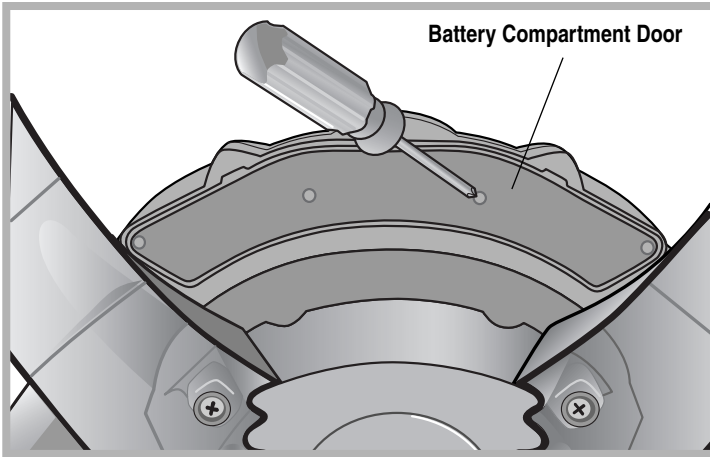

For best performance, we recommend that you replace the batteries that came with this toy, with three, new "C" (LR14) alkaline batteries.

- Locate the battery compartment on the underside of the keyboard.
 - Loosen the screws in the battery compartment door. Remove the battery compartment door.
 - Insert three "C" (LR14) **alkaline** batteries.
- Hint:** We recommend using **alkaline** batteries for longer life.
- Replace the battery compartment door and tighten the screws.
 - When lights, sounds or motions from this toy become faint or stop, it's time for an adult to change the batteries!

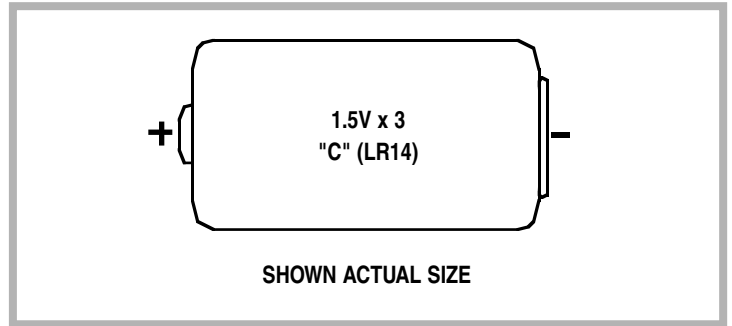








Battery Safety Information

Batteries may leak fluids that can cause a chemical burn injury or ruin your toy. To avoid battery leakage:

   - Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the toy. Dispose of batteries safely. Do not dispose of batteries in a fire. The batteries may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

Dance Along with the Monkey!

- Locate the power/volume switch on the underside of the keyboard.
- Slide the switch to the desired position: off ; on with low volume ; or on with high volume .
- Turn the mode select knob to music mode ; build a song mode ; or freeplay .
- If your child is finished playing with this toy, slide the power/volume switch to the off  position.

Music


- When your child sits, stands or dances on the mat, one of three songs plays as the monkey dances along with flashing lights.
- Press the keyboard or drum, bat the horns or slide the guitar to hear a solo from each instrument.

Build a Song


- When your child sits, stands or dances on the mat, part of a song plays as the monkey dances along with flashing lights. Press the mat again to hear more.
- Press the keyboard or drum, bat the horns or slide the guitar to add that instrument to the song. Hit that instrument again to take it out of the mix.

Freeplay

- When your child sits, stands or dances on the mat, a lively beat starts. The monkey dances along with flashing lights.
- Press the keys to hear individual notes.
- Slide the guitar, bat the horns or tap the drum to hear a short riff from each instrument.

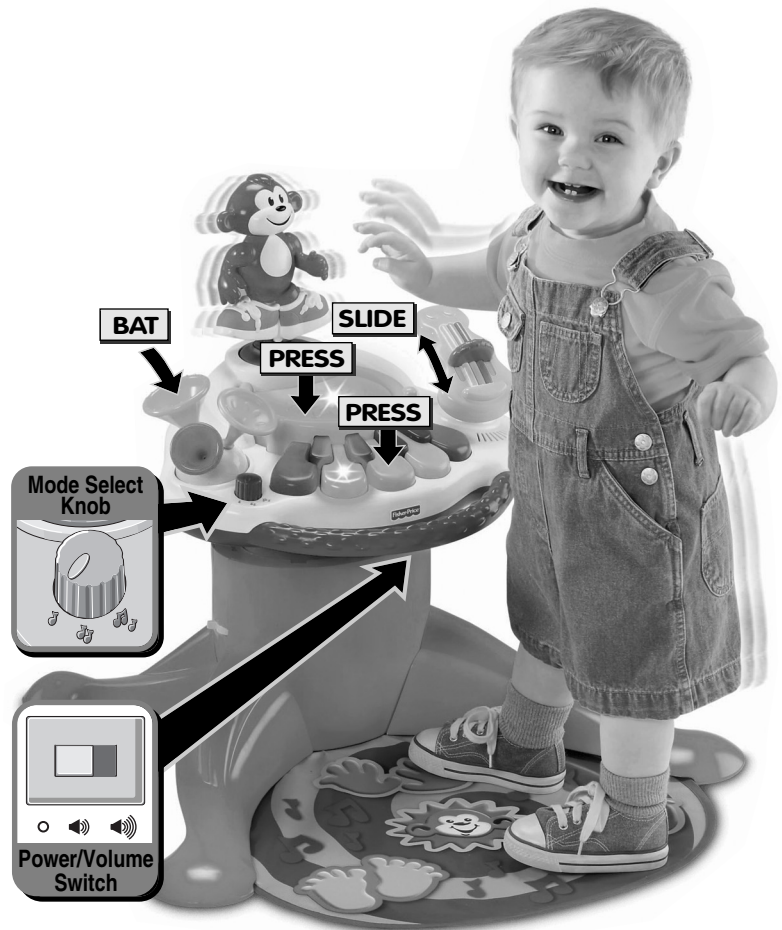

Adjusting Keyboard Height

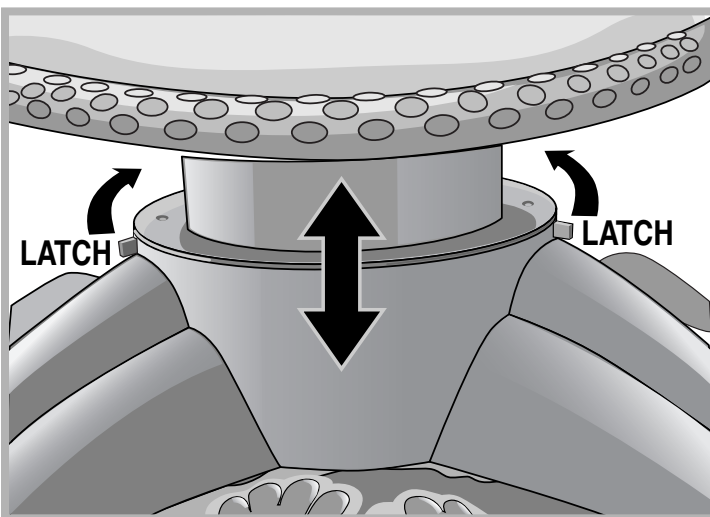

You can adjust the height of the keyboard for sitting babies or standing toddlers.

- Locate both latches on the base. Rotate the latches back (toward the monkey), and hold them as you raise or lower the keyboard. When the keyboard "snaps" in place, release the latches.

Care

- Wipe this toy with a clean cloth dampened with a mild soap and water solution. Do not immerse this toy.
- This toy has no consumer serviceable parts. Do not take this toy apart.

Consumer Information

Questions? We'd like to hear from you!

Call Fisher-Price® Consumer Relations, toll-free at **1-800-432-5437(KIDS)**, 8 AM - 6 PM EST Monday through Friday.

Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Or, write to:

Fisher-Price® Consumer Relations
636 Girard Avenue
East Aurora, New York 14052

For other countries, outside the United States:

CANADA

Questions? 1-800-567-7724. Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2.

GREAT BRITAIN

Mattel UK Ltd, Vanwall Business Park, Maidenhead SL6 4UB.
Helpline: 01628 500302.

AUSTRALIA

Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870,
Richmond, Victoria 3121 Australia.
Consumer Advisory Service 1300 135 312.

NEW ZEALAND

16-18 William Pickering Drive, Albany 1331, Auckland.

ASIA

Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre,
Harbour City, Tsimshatsui, HK, China.

FCC Note (United States Only)

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>