



Please keep this instruction sheet for future reference, as it contains important information.

Requires three LR14 ("C") alkaline batteries (not included).

Adult assembly is required.


Tool required for battery installation: Phillips screwdriver (not included).





Download from Www.Somanuals.com. All Manuals Search And Download.

Battery Installation

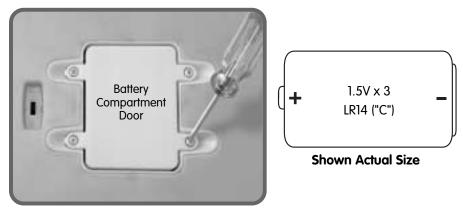

- Locate the battery compartment on the bottom of the toy.
- Loosen the screws in the battery compartment door with a Phillips screwdriver. Remove the battery compartment door.
- Insert three LR14 ("C") alkaline batteries.

Hint: We recommend using alkaline batteries for longer life.

- Replace the battery compartment door and tighten the screws with a Phillips screwdriver. Do not over-tighten.
- When sounds, or motions from this toy become faint or stop, it's time for an adult to change the batteries!


Battery Safety Information

Batteries may leak fluids that can cause a chemical burn injury or ruin your toy. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated on the battery compartment door.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the toy. Dispose of batteries safely. Do not dispose of batteries in a fire. The batteries may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.


Fisher-Price, Inc., a subsidiary of Mattel, Inc., East Aurora, NY 14052 U.S.A. ©2004 Mattel, Inc. All Rights Reserved. © and ™ designate U.S. trademarks of Mattel, Inc.

Five Sides of Busy Play!

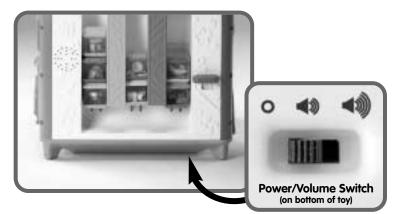

- Locate the power/volume switch on the bottom of the toy.
- Slide the switch to the desired position: off O, on with low volume ◄» or on with high volume ◄».
- When your child is finished playing with the toy, slide the power/volume switch to the off **O** position.

Spin & Learn

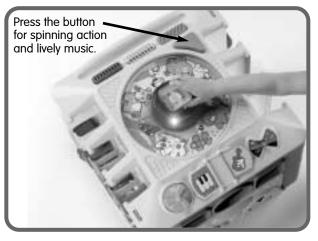

• Place any of the eight special blocks upright in the centre of the carousel and press down. Hear about what's inside of each block followed by a fun sound effect!


Note: The block recognition feature only works with the eight blocks included with this toy. Using other Peek-a-Blocks[™] produces only a sound effect.

• Press the action button to hear a fun tune and see the carousel spin around with flashing lights.

Download from Www.Somanuals.com. All Manuals Search And Download.


Five Sides of Busy Play!

Stack & Spill

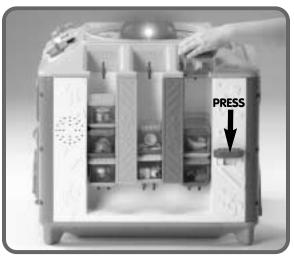


- Drop blocks into each of the three channels to hear a song or a fun sound effect.
- Press the lever and watch the blocks spill out!

Drop & Tumble

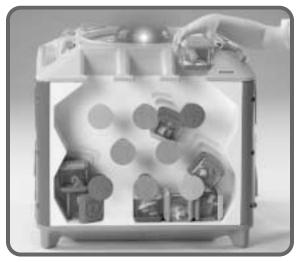

• Drop the blocks through the top and watch them tumble.

Sort & Store

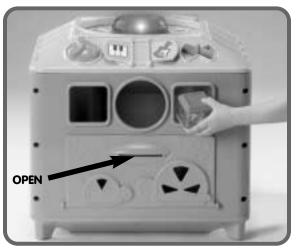

- Baby can drop the blocks through the side openings.
- Store up to 30 Peek-a-Blocks™ (only eight included with this toy) inside the large compartment.


Plug & Play



- This side features bold patterns, fun animals and a large mirror.
- Plug blocks into either of the square openings.

Decoration

- Apply the labels as shown in the illustration.
- For best results, wash your hands before applying the labels and make sure the areas to which the labels will be applied are clean and dry. Avoid repositioning a label once it has been applied.

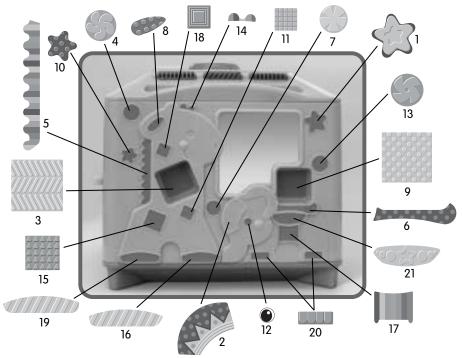

Care

- Wipe this toy with a clean cloth dampened with a mild soap and water solution.
- Do not immerse this toy.

Consumer Information

Questions? We'd like to hear from you! Mattel UK Ltd, Vanwall Business Park, Maidenhead SL6 4UB. Helpline: 01628 500302.

AUSTRALIA: Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312. NEW ZEALAND: 16-18 William Pickering Drive, Albany 1331, Auckland.

ASIA: Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.

Download from Www.Somanuals.com. All Manuals Search And Download.

Free Manuals Download Website <u>http://myh66.com</u> <u>http://usermanuals.us</u> <u>http://www.somanuals.com</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.com</u> <u>http://www.404manual.com</u> <u>http://www.luxmanual.com</u> <u>http://aubethermostatmanual.com</u> Golf course search by state

http://golfingnear.com Email search by domain

http://emailbydomain.com Auto manuals search

http://auto.somanuals.com TV manuals search

http://tv.somanuals.com