

**Fisher-Price®**

**G6685  
Instructions**

# Learning Pots & Pans™

Please keep this instruction sheet for future reference, as it contains important information.

Requires three "AA" batteries (included).

Adult assembly is required for battery replacement.

Tool required for battery replacement:  
Phillips screwdriver  
(not included).



**Laugh & Learn™**

[www.fisher-price.com](http://www.fisher-price.com)

 
## Before Use

### ⚠ CAUTION

Please keep small parts such as the plastic tab out of children's reach. Throw the plastic tab away.

**Note:** A plastic tab was attached to the toy for in-store demonstration purposes. While the tab may have already been removed, check the back of the toy to be sure. If the plastic tab is still attached, pull and remove the tab. Throw the plastic tab away.

## Battery Replacement

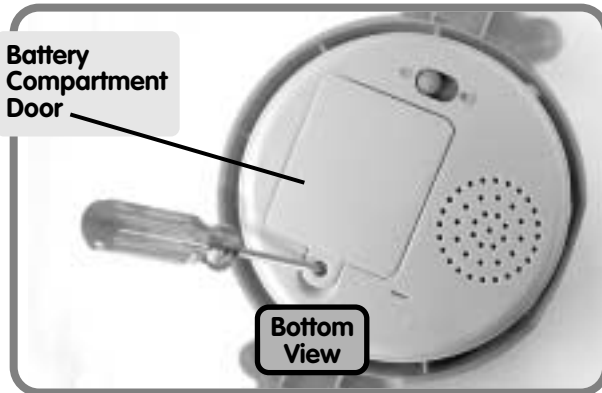


**For best performance, we recommend replacing the batteries that came with this toy with three, new "AA" (LR6) alkaline batteries.**

- Locate the battery compartment on the bottom of the toy.
- Loosen the screw in the battery compartment door with a Phillips screwdriver. Remove the battery compartment door.
- Insert three "AA" (LR6) **alkaline** batteries.

**Hint:** We recommend using alkaline batteries for longer life.

 - Replace the battery compartment door and tighten the screw with a Phillips screwdriver. Do not over-tighten.
- When sounds or lights from this toy become faint or stop, it's time for an adult to change the batteries!



## Battery Safety Information

Batteries may leak fluids that can cause a chemical burn injury or ruin your toy. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the toy. Dispose of batteries safely. Do not dispose of batteries in a fire. The batteries may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.



 


## FCC Note (United States Only)


**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

## 2 Fun Ways to Play!

 - Locate the mode switch on the front of the toy.
- Slide the switch to either learning mode **ABC** ; music mode  or off .
- When your child is finished playing with this toy, slide the mode switch to the off  position.
- Locate the volume switch on the bottom of the toy.
- Adjust volume to high  or low , for your child's comfort.
- Low battery power may affect toy function, including irregular sound/lights and the toy may not turn off.
- Replace all batteries with **alkaline** batteries only.

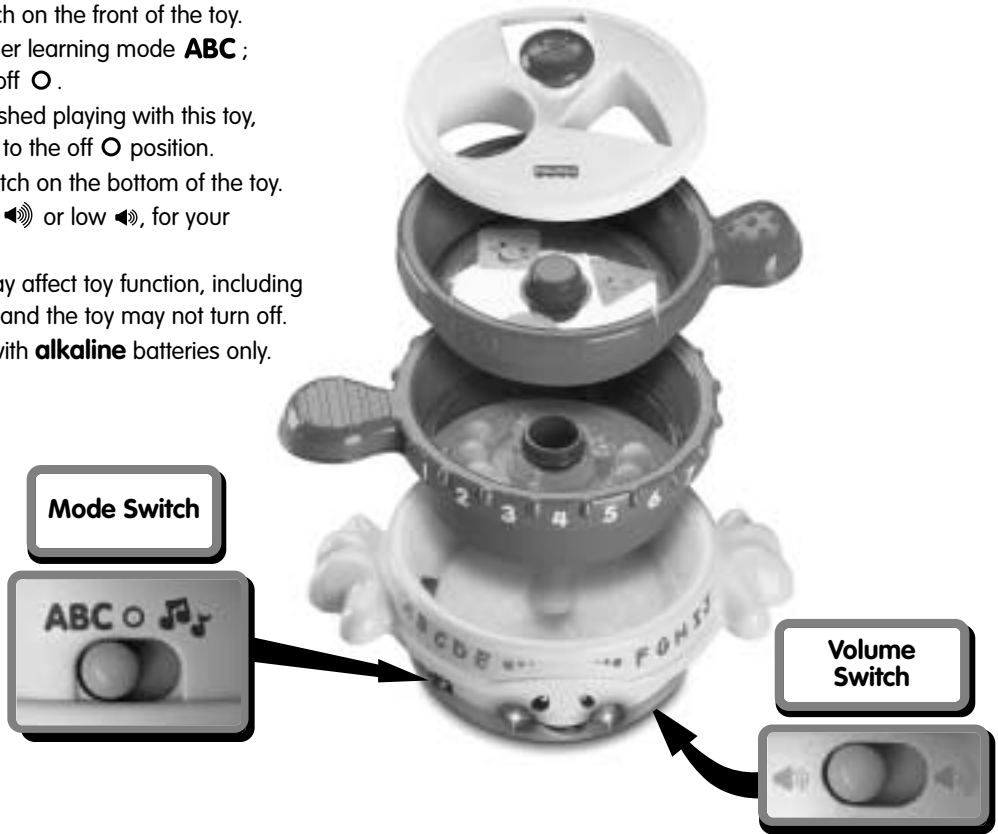

### ABC Learning Mode

- Rock the yellow pan to hear a fun phrase or the A-B-C song.
- Add the blue pan to hear the color identified. Rock the pans to hear a fun counting song.
- Add the red pan to hear the color identified. Rock the pans to hear a fun song about colors.
- Add the lid for shape sorting fun.

### Music Mode

- Rock the yellow pan to hear fun songs or sound effects.
- Add the blue pan and hear a sound effect. Rock the pans to hear a fun tune.
- Add the red pan and hear a sound effect. Rock the pans to hear another tune.
- Add the lid for shape sorting fun.

## Care

- Surface wash only. Wipe with a clean cloth dampened with a mild soap and water solution.
- Do not immerse the toy.

## Consumer Information

**Questions? We'd like to hear from you!** Call Fisher-Price® Consumer Relations, toll-free at **1-800-432-5437 (KIDS)**, 8 AM - 6 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Or, write to: Fisher-Price® Consumer Relations, 636 Girard Avenue, East Aurora, New York 14052.

## Learn every day - through fun, familiar play!

Make learning more fun with the whole collection of **Laugh & Learn™** toys.

With rich music, lyrics and lots of activities, they combine early academics and everyday experiences, for the way kids really learn.

 Each sold separately and subject to availability.



**Learning Toolbench™**  
G6167



**Learning Home™**  
C6327



**Learning Phone™**  
C6324



**Learning Table™**  
C5522



**Learning Keys**  
G9452



**Learning Puppy™**  
C6325



**Learning Birdbath™**  
C6513

**For countries outside the United States:**

**CANADA Questions? 1-800-567-7724.** Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2.

**GREAT BRITAIN** Mattel UK Ltd, Vanwall Business Park, Maidenhead SL6 4UB. Helpline: 01628 500302.

**AUSTRALIA** Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

**NEW ZEALAND** 16-18 William Pickering Drive, Albany 1331, Auckland.

**ASIA** Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>