



**Fisher-Price**

[www.fisher-price.com](http://www.fisher-price.com)

**SUPER  
SOUNDS™**

**3D VIEWER**



In an effort to provide the best products possible, we periodically make product modifications. Actual products may not be identical to items pictured.

**Please keep this instruction sheet for future reference,  
as it contains important information.**

**Requires two “AAA” batteries (included).**

 
**Adult assembly is required for battery replacement.**

**Tool required for battery installation: Phillips screwdriver (not included).**

**Model H4159**

Download from [Www.Somanuals.com](http://Www.Somanuals.com). All Manuals Search And Download.

# 3D VIEWER WITH DEMO REEL (INCLUDED)

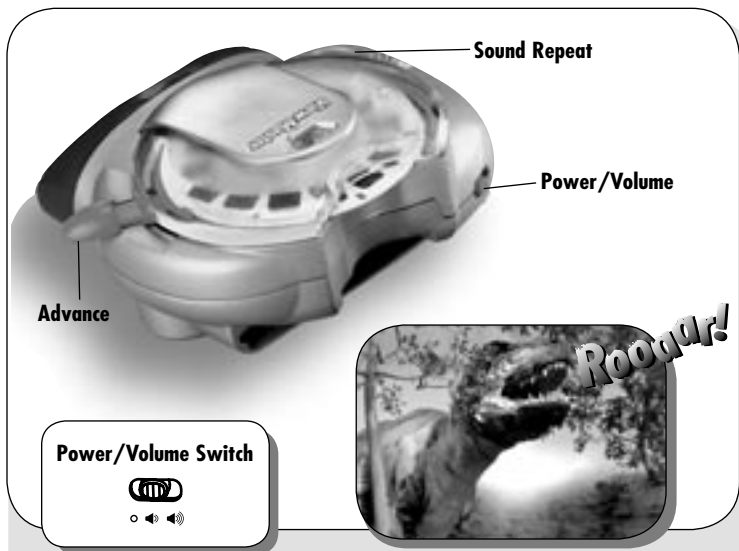

1. Locate the power/volume switch on the side of the viewer. Slide the switch to either **on** with low volume ; or **on** with high volume .
2. Press the advance lever to move to the next image. Listen to sound effects, character voices and music!
3. Press the sound repeat button to hear the sounds again and again!

## Notes:

- *The demo reel (included) does not require an audio cartridge for sounds. Other Super Sounds™ Reels (sold separately) require an Audio Cartridge. See next page for instructions.*
- *Use this viewer with any View-Master® reels to see images only.*

# SUPER SOUNDS™ REEL AND AUDIO CARTRIDGE (SOLD SEPARATELY)



Super Sounds™  
3D Reel  
(sold seperately)

Super Sounds™ Audio Cartridge  
(included with Super Sounds™ 3D Reel)

1. Insert a View-Master® Super Sounds™ reel into the viewer, **caption side up.**
2. Insert the **matching** Super Sounds™ 3D audio cartridge into the viewer.
3. Slide the power/volume switch on and press the advance lever. Listen to fun sound effects, character voices and music!

**Note:** Store Super Sounds™ reels inside the Audio Cartridge Case.

Super Sounds™ 3D Reels and Audio Cartridges  
are sold together in sets.



# CONSUMER INFORMATION

## Questions? We'd like to hear from you!

Call Fisher-Price® Consumer Relations, toll-free at **1-800-432-5437**, 8 AM - 6 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Or, visit us on line at **www.service.mattel.com**.

Write to us at: Fisher-Price® Consumer Relations, 636 Girard Avenue, East Aurora, New York 14052

## FCC NOTE (UNITED STATES ONLY)

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

### For countries outside the United States:

**CANADA:** Questions? **1-800-432-5437**. Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2; [www.service.mattel.com](http://www.service.mattel.com).

**GREAT BRITAIN:** [Mattel UK Ltd. Vanwall Business Park, Maidenhead SL6 4UB](http://MattelUKLtd.VanwallBusinessPark.MaidenheadSL64UB). Helpline: 01628 500302.

**AUSTRALIA:** Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

**NEW ZEALAND:** 16-18 William Pickering Drive, Albany 1331, Auckland.

**ASIA:** Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.

Fisher-Price, Inc., a subsidiary of Mattel, Inc. East Aurora, New York 14052, U.S.A.

 
©2005 Mattel, Inc. All Rights Reserved. ® and ™ designate U.S. trademarks of Mattel, Inc.

Download from [Www.Somanuals.com](http://Www.Somanuals.com). All Manuals Search And Download


# BATTERY REPLACEMENT



Battery Compartment Door

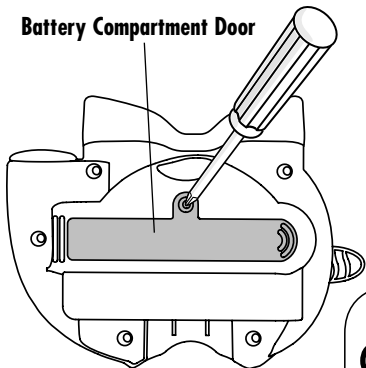

 *For best performance, we recommend replacing the batteries that came with this toy with two, new alkaline “AAA” (LR03) batteries.*



Shown Actual Size

- Locate the battery compartment on the bottom of the toy.
- Loosen the screw in the battery compartment door with a Phillips screwdriver. Remove the battery compartment door.
- Insert two “AAA” (LR03) **alkaline** batteries, as indicated inside the battery compartment.

***Hint:** We recommend using **alkaline** batteries for longer life.*

- Replace the battery compartment door and tighten the screws with a Phillips screwdriver. Do not over-tighten.
- When sounds become erratic, faint or stop, it's time for an adult to change the batteries!

# BATTERY SAFETY INFORMATION

**Batteries may leak fluids that can cause a chemical burn injury or ruin your toy. To avoid battery leakage:**

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the toy. Dispose of batteries safely. Do not dispose of batteries in a fire. The batteries may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

## CARE

- Wipe this toy with a clean cloth dampened with a mild soap and water solution. Do not immerse this toy.
- This toy has no consumer serviceable parts. Do not take this toy apart.



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>