

Play Wall



Please keep this instruction sheet for future reference, as it contains important information.

Requires three "AA" (LR6) **alkaline** batteries (not included).

Adult assembly is required.

Tool required for assembly: Phillips screwdriver (not included).



Parts

 
 
⚠ CAUTION

This toy contains small parts in its unassembled state. Adult assembly is required.



Parts not shown: 4 Toys



2 Curtain Walls (Left and Right)

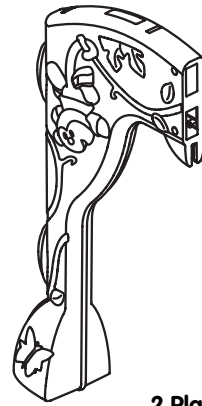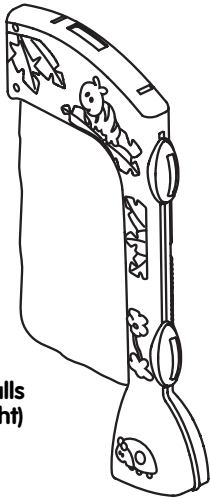


2 Plain Walls (Left and Right)

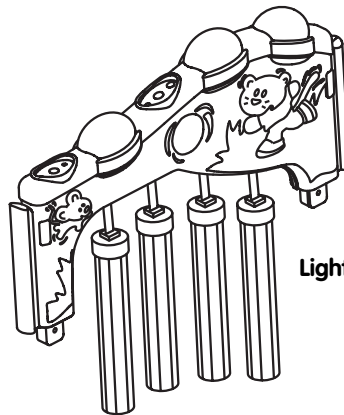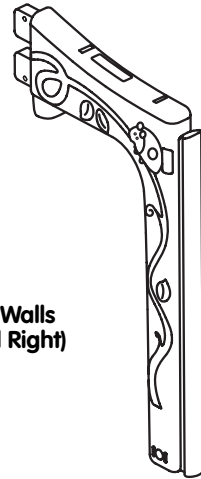  

Lights and Sounds Wall



 
Frog Panel



Dial Panel



 Inflatable Ball

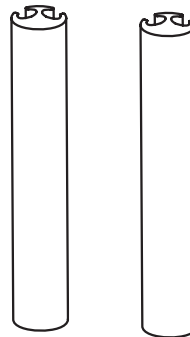


2 Connectors



Handle



 2 Bases

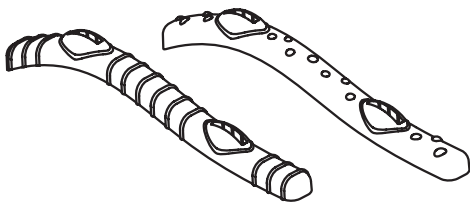

2 Wall Covers



2 Connector Caps



3 Pull-Up Handles




#8 x 1³/₁₆" Screw - 6

 
Shown Actual Size

Note: Tighten or loosen all screws with a Phillips screwdriver. Do not over-tighten the screws.

Battery Installation



Shown Actual Size

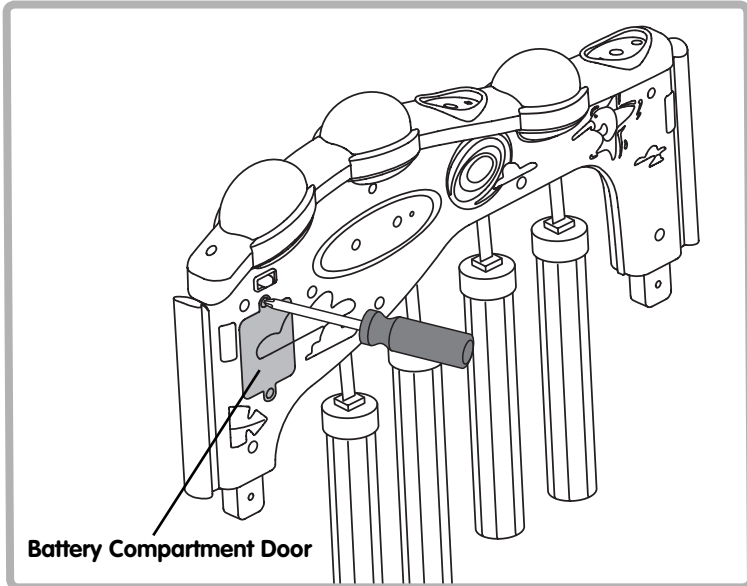 

- Locate the battery compartment on the lights and sounds wall.
- Loosen the screws in the battery compartment door. Remove the battery compartment door.
- Insert three "AA" (LR6) **alkaline** batteries, as indicated inside the battery compartment.

Hint: We recommend using **alkaline** batteries for longer battery life.

- Replace the battery compartment door and tighten the screws.
- When lights or sounds from this toy become faint or stop, it's time for an adult to change the batteries!

 
Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of batteries in a fire. The batteries may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.


Assembly

1

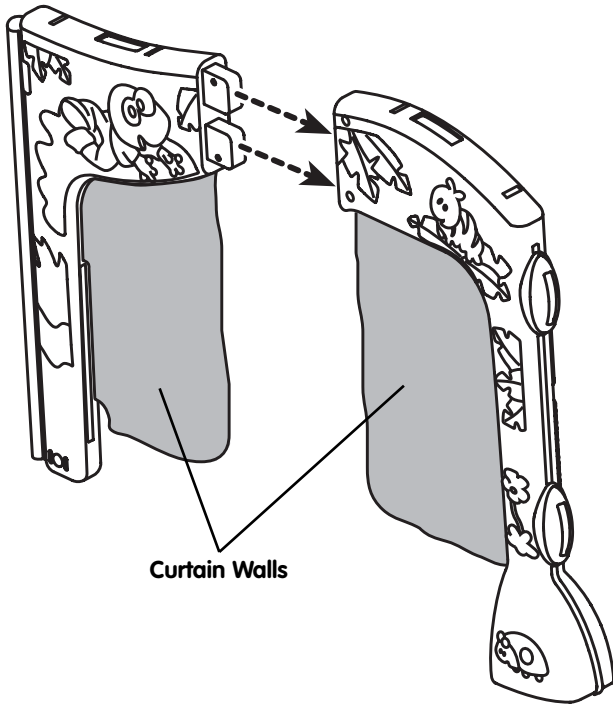


- Join the curtain walls.

 3

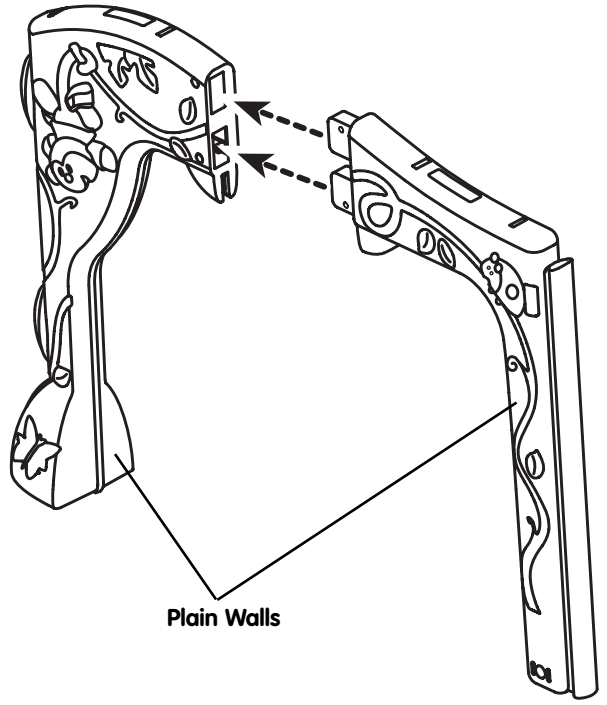


- Join the plain walls.

 2

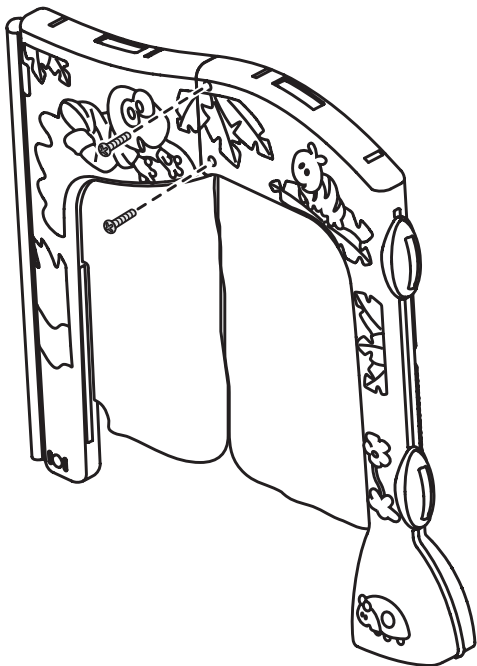

- Insert two screws into the curtain wall and tighten.

 
4

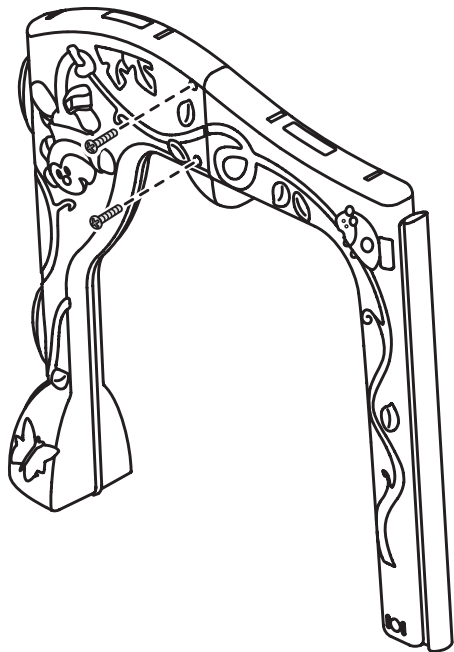

- Insert two screws into the plain wall and tighten.


Assembly

 5

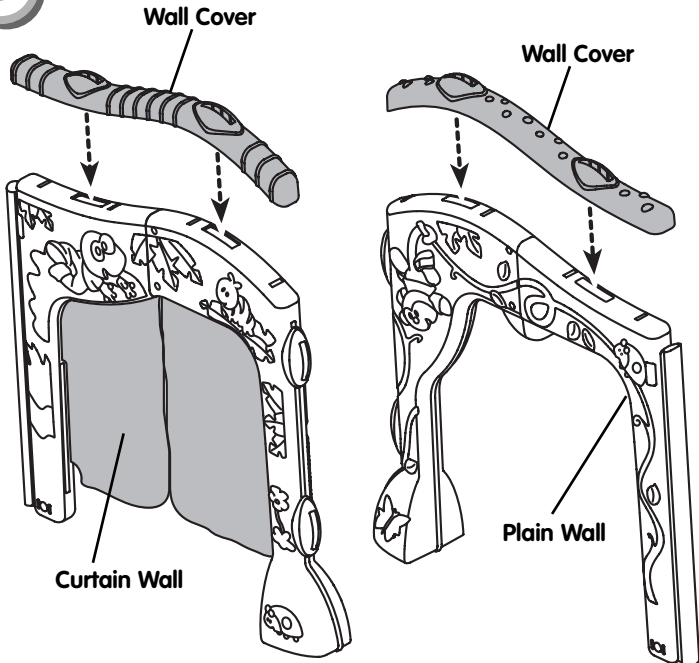


- "Snap" the wall cover onto the top of each wall.

 6

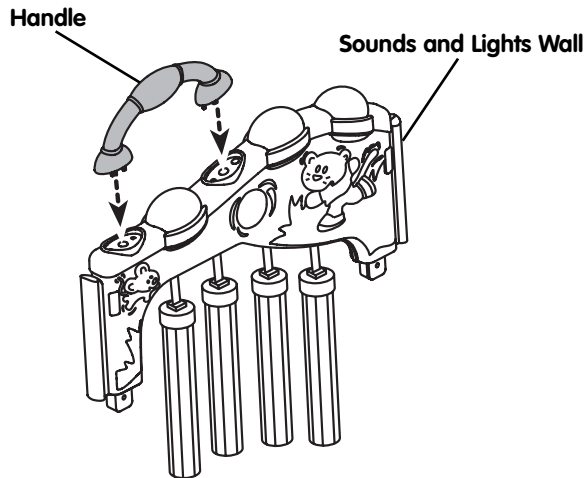


- "Snap" the handle into the sounds and lights wall.

 7

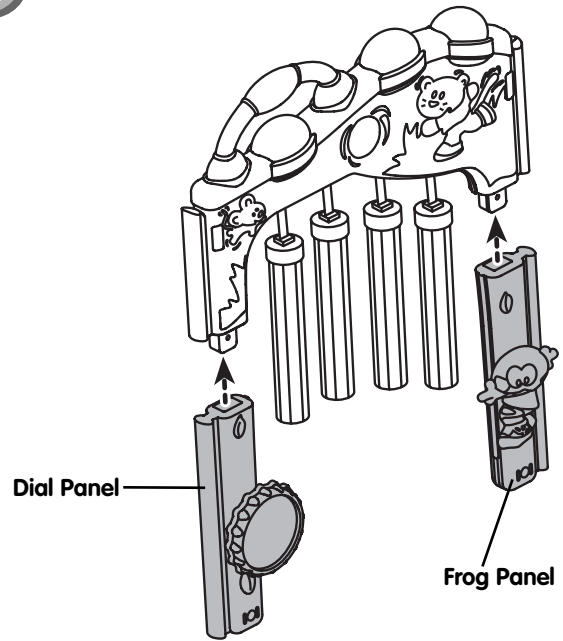

- Fit the dial panel and frog panel to the sounds and lights wall.
Hint: The dial and frog panels are designed to fit to the sounds and lights wall one way.

 
8

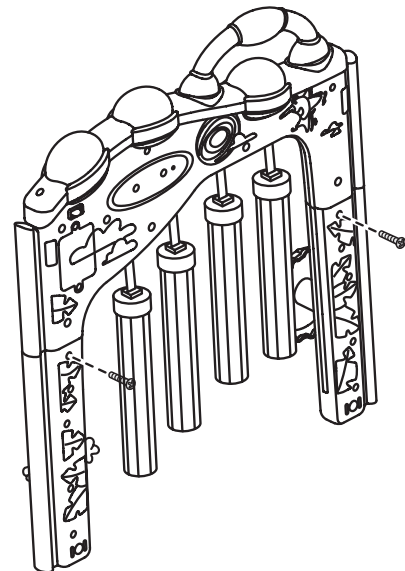

- Turn the assembly around. Insert two screws into the sounds and lights wall and tighten.


Assembly

 9

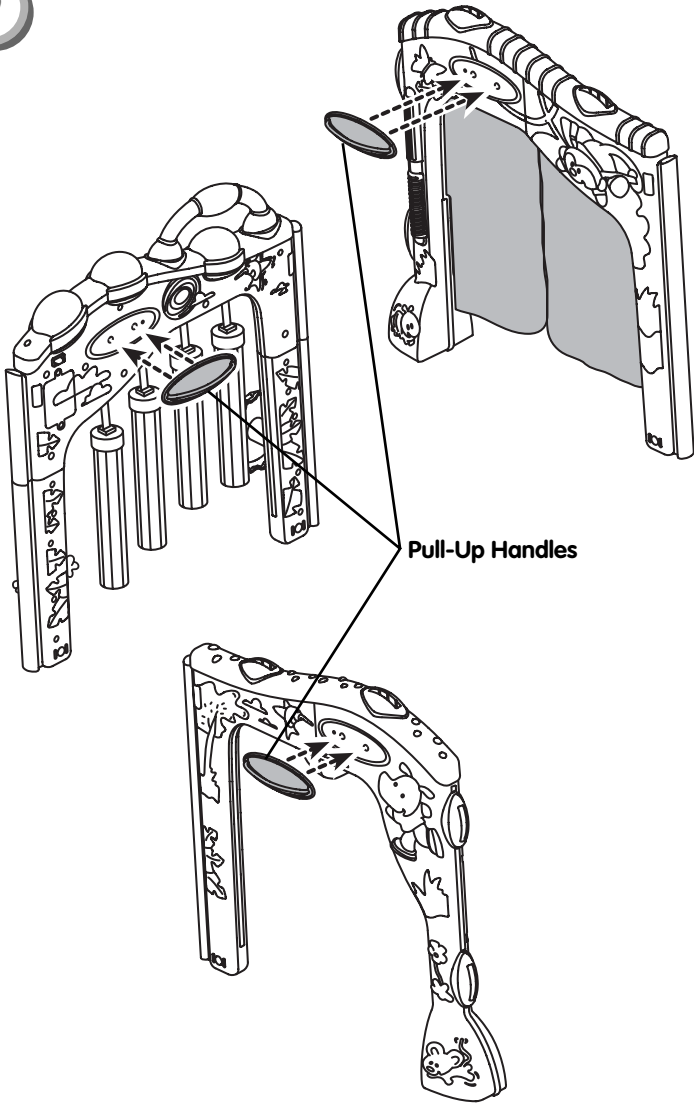

Pull-Up Handles

 10

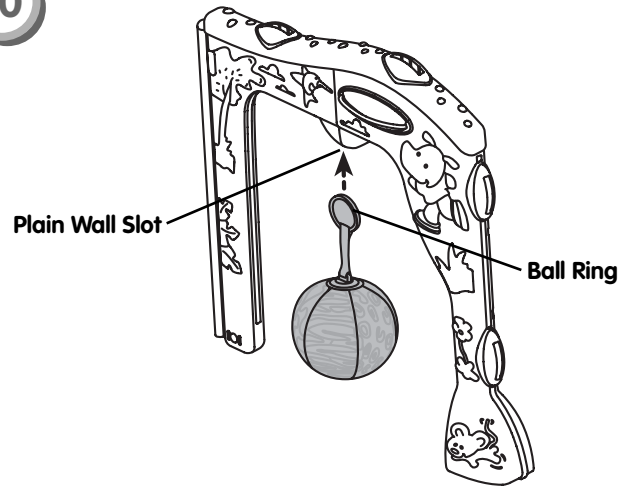

Plain Wall Slot

Ball Ring

- Squeeze the stem to inflate the ball.
- Fit the ring on the ball into the slot in the plain wall.

 
One-time assembly is now complete. Please refer to pages 7-10 to build a Zig-Zag or U-shaped Wall.

- "Snap" a pull-up handle to each of the walls.

Build a Zig-Zag Wall




1

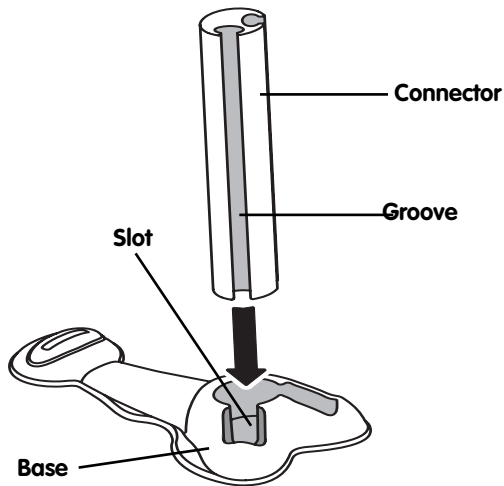


- Fit a connector into each base.
- Turn the connector so that the grooves in the connector match the slots in the base.

 2

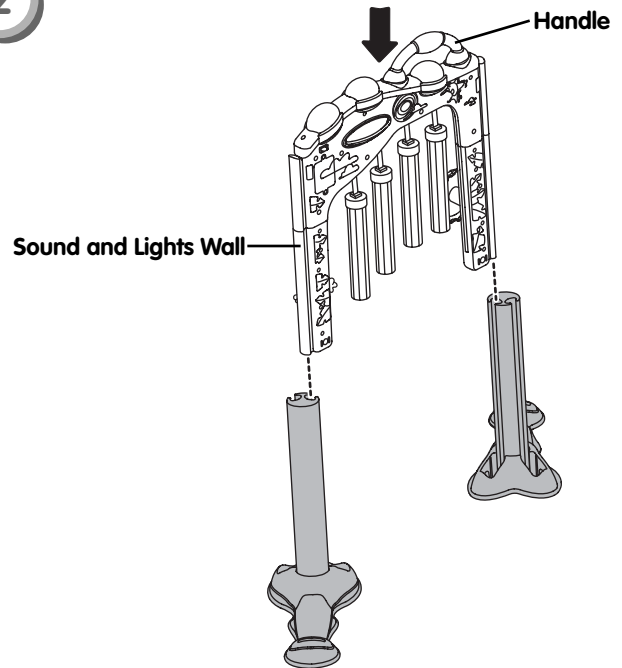

- Position the bases on a flat surface, as shown.
- With the handle to the right, slide the sounds and lights wall into the grooves in the connectors, as shown.
- Push the sounds and lights wall down to secure in place.

 
3

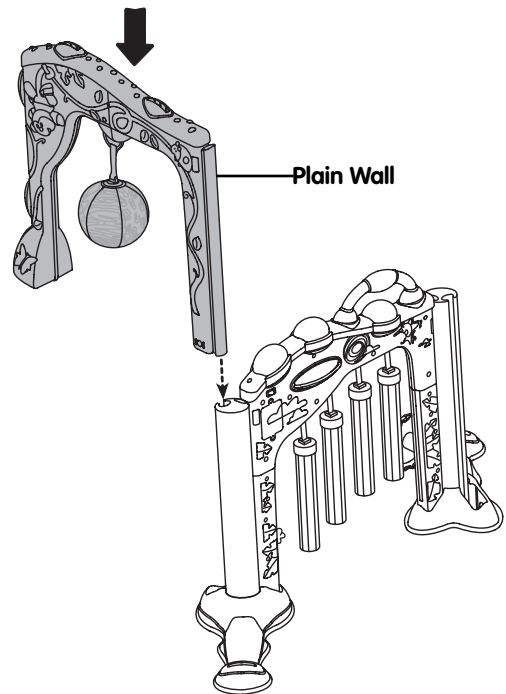

- Slide the plain wall into the groove in the connector, as shown.
- Push the plain wall down to secure in place.


Build a Zig-Zag Wall

 4

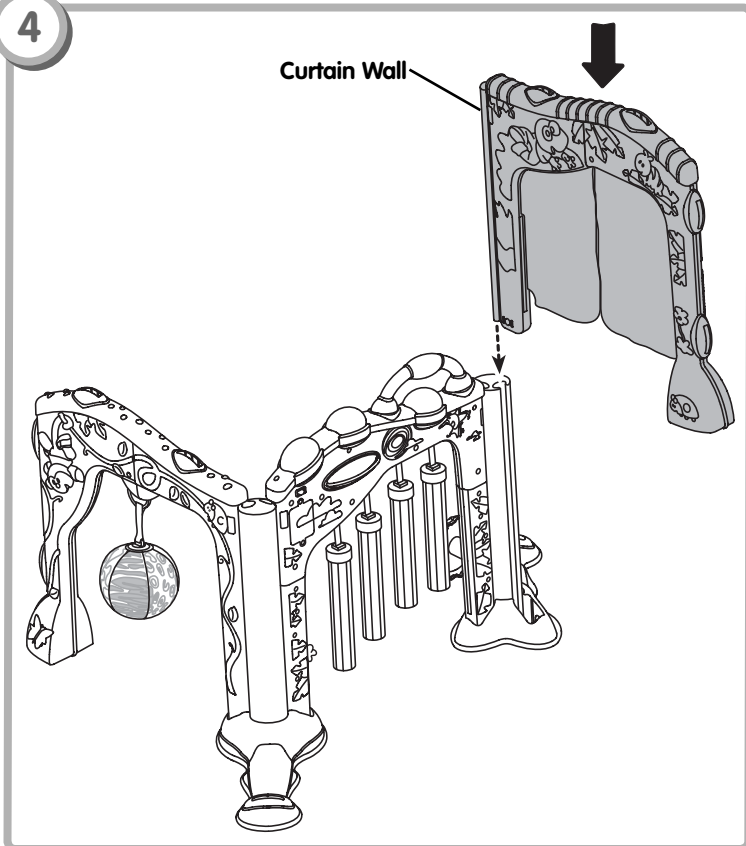


- Slide the curtain wall into the groove in the connector, as shown.
- Push the curtain wall down to secure in place.

 5

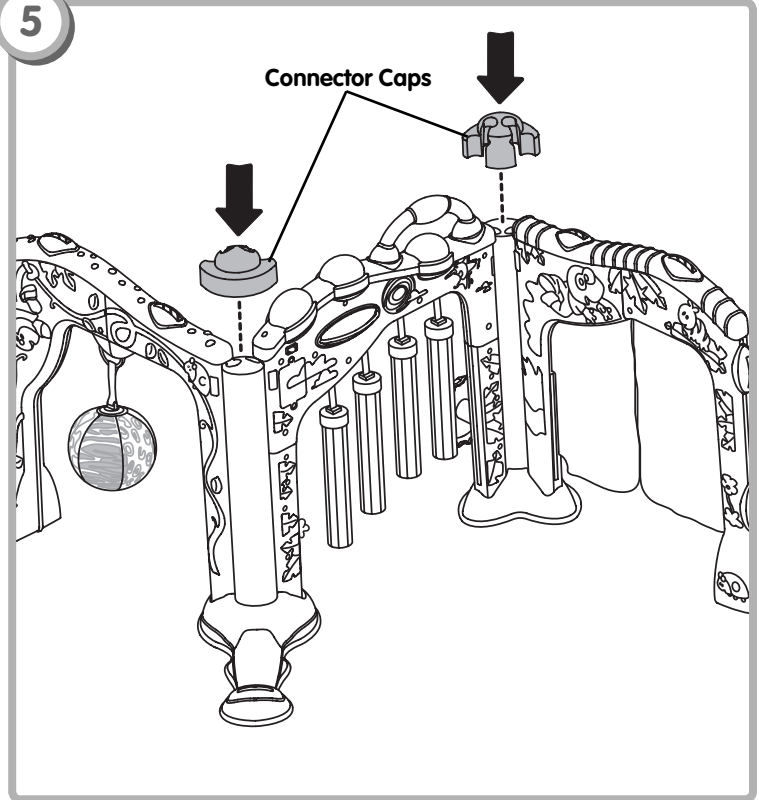


- Fit the connector caps to the connectors.

 
Convert to a U-Shape Wall

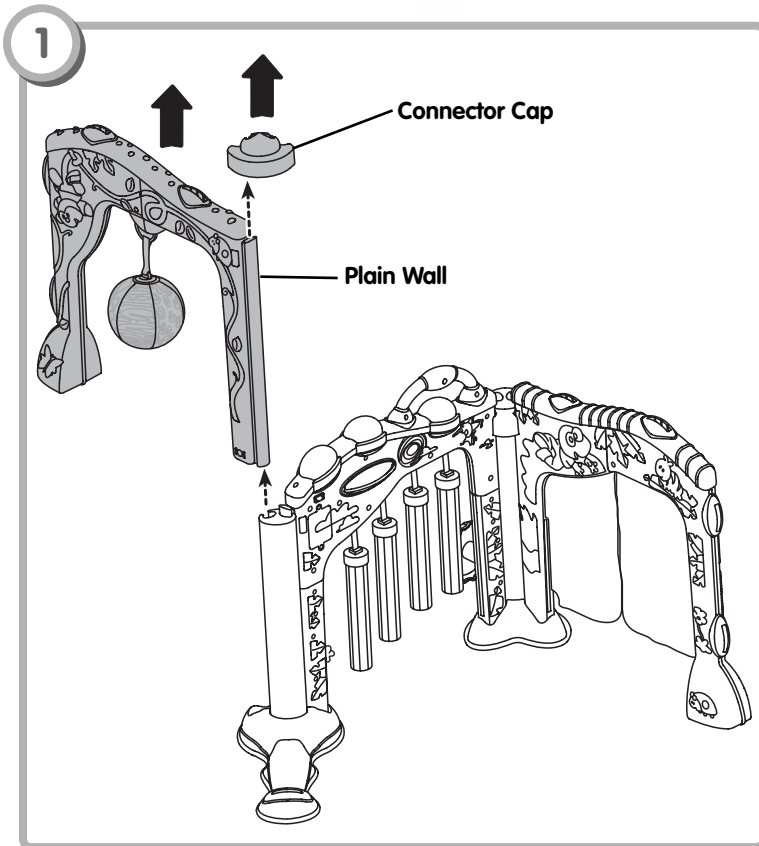

 - Remove the connector cap from the plain wall.
- Lift to remove the plain wall from the connector.
- Set the plain wall aside.

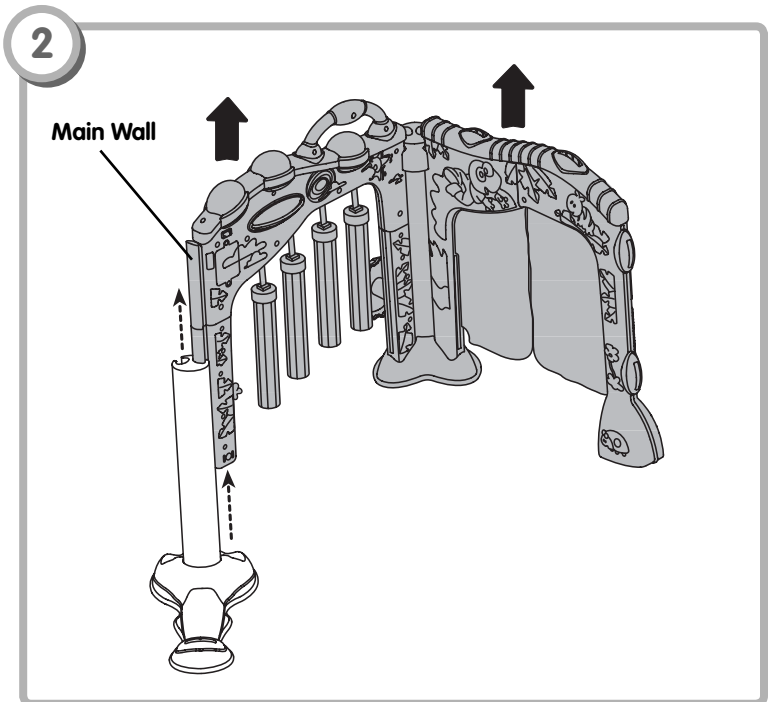

 
- Lift to remove the sounds and lights and curtain wall assembly from the connector.

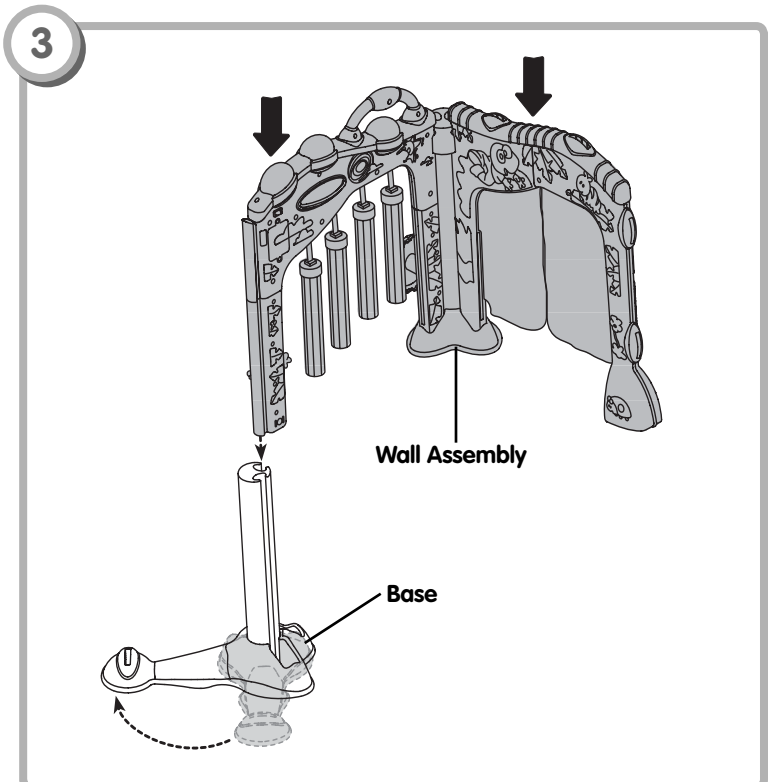

- Turn the base, as shown.
- Slide the sounds and lights and curtain assembly back into the groove in the connector.
- Push the wall assembly down to secure in place.


Convert to a U-Shape Wall

 4

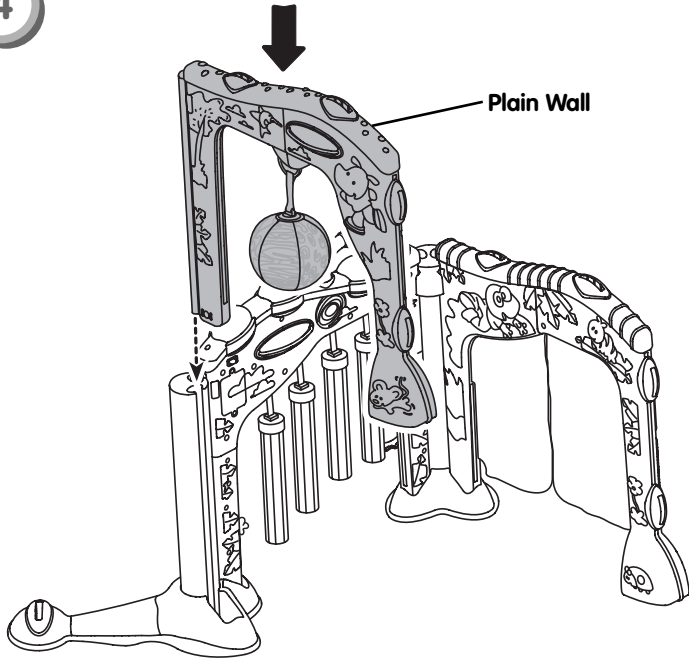

- Slide the plain wall into the groove in the connector.
- Push the plain wall down to secure in place.

 5

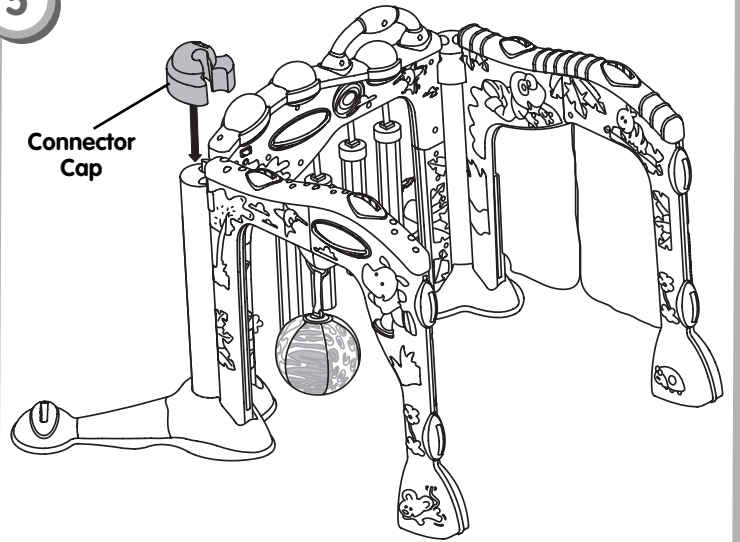

- Fit the connector cap to the connector.

Music, Lights and Lots of Activities!

Wiggle the tubes, spin the dial or move the frog for fun sounds, music and lights.



Fit a toy into any of the slots around the play wall.

- Slide the power/volume switch to the desired position: on with low volume (two speaker icons); on with high volume (three speaker icons); or Off (O).



Reposition the toys to encourage standing.

Storage



- For easy storage, remove the walls from the connectors. Remove the connectors from the bases.

Care

- Wipe this toy with a clean cloth dampened with a mild soap and water solution. Do not immerse this toy.
- This toy has no consumer serviceable parts. Do not take this toy apart.

FCC Note (United States Only)

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

Consumer Information

Visit us on line at www.service.fisher-price.com.

Call Fisher-Price® Consumer Relations, toll-free at **1-800-432-5437**, 8 AM - 6 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470.

Write to us at: Fisher-Price® Consumer Relations, 636 Girard Avenue, East Aurora, New York 14052.

For countries outside the United States:

CANADA: Questions? **1-800-432-5437**. Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2; www.service.mattel.com.

GREAT BRITAIN: Mattel UK Ltd, Vanwall Business Park, Maidenhead SL6 4UB. Helpline: 01628 500302; www.service.mattel.com/uk

AUSTRALIA: Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

NEW ZEALAND: 16-18 William Pickering Drive, Albany 1331, Auckland.

ASIA: Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>