



**Please keep this instruction sheet for future reference,
as it contains important information.**

Requires three "AAA" batteries (included) for operation.

Adult assembly is required for battery replacement.

 
Tool required for battery replacement: Phillips screwdriver (not included)

Wipe this toy with a clean cloth. Do not immerse.

This toy has no consumer serviceable parts. Please do not take this toy apart.

Battery Replacement

For best performance, we recommend replacing the batteries that came with this toy with three, new "AAA" (LR03) alkaline batteries.

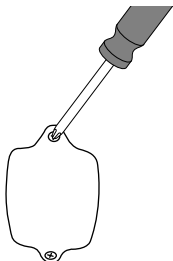

- Locate the battery compartment door on the back of the toy.
- Loosen the screws in the battery compartment door with a Phillips screwdriver. Remove the battery compartment door.
- Remove the exhausted batteries and dispose of them properly.
- Insert three, new "AAA" (LR03) **alkaline** batteries.

 
Hint: We recommend using **alkaline** batteries for longer battery life.

- Replace the battery compartment door and tighten the screws. Do not over-tighten.
- If this toy begins to operate erratically, you may need to reset the electronics. Slide the power switch off and then back on.
- When sounds or lights from this toy become faint or stop, it's time for an adult to change the batteries.



- Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities (Europe only).


Battery Safety Information



In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

 Role Play Fun!

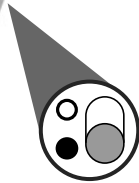

Power Switch

-
- Slide the power switch **ON** ●.
 - Press any of the buttons on the keypad for lights, realistic sounds, words, greetings, tunes and more!
 - Press the send call 📞 or end call 📞 button to hear phrases.
 - When finished playing with this toy, slide the power switch **OFF** ○.



Great Britain: Vanwall Business Park,
Maidenhead SL6 4UB. Helpline: 01628
500303. www.service.mattel.com/uk.

Australia: Mattel Australia Pty. Ltd.,
658 Church Street, Locked Bag #870,
Richmond, Victoria 3121 Australia.
Consumer Advisory Service 1300 135 312.

New Zealand: 16-18 William Pickering
Drive, Albany 1331, Auckland.

Asia: Mattel East Asia Ltd, Room 1106,
South Tower, World Finance Centre,
Harbour City, Tsimshatsui, HK, China.

Malaysia: Diimport & Diedarkan Oleh:
Mattel SEA Ptd Ltd. (993532-P) Lot 13.5,
13th Floor, Menara Lien Hoe, Persiaran
Tropicana Golf Country Resort, 47410 PJ.
Tel: +603-3341 9052.
Mattel Europa, B.V., Gondel 1, 1186 MJ
Amstelveen, Nederland.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>