

**Fisher-Price®**

**W6085**




**[www.fisher-price.com](http://www.fisher-price.com)**

Download from [Www.Somanuals.com](http://Www.Somanuals.com). All Manuals Search And Download

# Consumer Information

- Please keep these instructions for future reference, as they contain important information.
- Adult setup is required.
- This product is compatible with the iPhone®, iPhone 3G/S, iPhone 4 mobile digital device, iPod touch® device 2nd, 3rd and 4th generation. Device not included.
- Only use this product with your iPhone® or iPod® device properly inserted and locked in the case. Remove any other cases or bumpers from the device before inserting it in this case.
- Periodically check this product and your device for damage or cracks. Do not use if either is damaged or broken. Follow your device's instructions for use and care.
- Wipe this product with a clean, damp cloth. Do not immerse.

# Setup

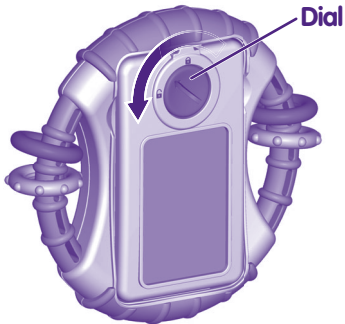


## BACK VIEW

---

- Turn the door dial to the  unlock position.

# Setup

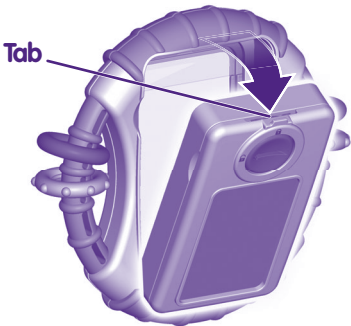

- 
- Pull the tab on the door to remove it.

# Setup




## FRONT VIEW

- Turn your device power ON.
- Position the case with the Fisher-Price® logo upright.
- Insert the device, with the home button down, inside the case.

**Hint:** This will prevent baby from pressing the home button!

## Setup

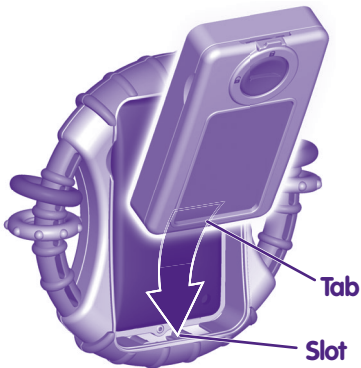


- At an angle, fit the tab on the door into the slot in the case.

# Setup



- 
- Turn the door dial to the  lock position.

# Free Laugh & Learn™ Apps

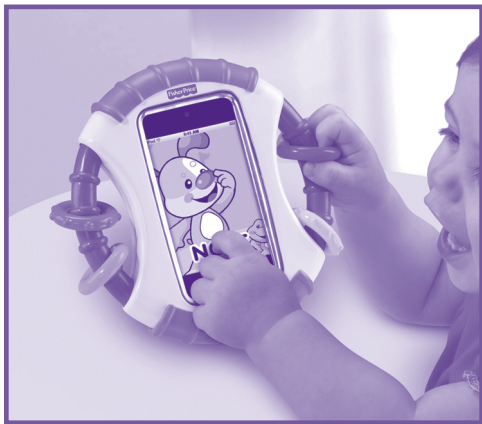

- You can download three, free Fisher-Price® learning apps from the App Store<sup>SM</sup> (no purchase necessary!).



## Baby Appropriate Play!



- Remove your device and baby can play with the busy beads and mirror!



## CONSUMER ASSISTANCE

1-800-432-5437 (US & Canada)

1300 135 312 (Australia)

 [service.fisher-price.com](http://service.fisher-price.com)

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.

Hearing-impaired consumers: 1-800-382-7470.

Outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd.,  
Mississauga, Ontario L5R 3W2; [www.service.mattel.com](http://www.service.mattel.com).

Great Britain: Mattel UK Ltd, Vanwall Business Park,  
Maidenhead SL6 4UB. Helpline: 01628 500303.  
[www.service.mattel.com/uk](http://www.service.mattel.com/uk)

Mattel Europa, B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.

Australia: Mattel Australia Pty. Ltd., 658 Church Street,  
Locked Bag #870, Richmond, Victoria 3121 Australia.

New Zealand: 16-18 William Pickering Drive,  
Albany 1331, Auckland.

Apple, iPad, iPhone and iPod touch are trademarks of Apple Inc.,  
registered in the U.S. and other countries.  
App Store is a service mark of Apple Inc.

Fisher Price, Inc., a subsidiary of Mattel, Inc., East Aurora, NY  
14052 U.S.A. ©2011 Mattel, Inc. All Rights Reserved. ® and ™ designate  
U.S. trademarks of Mattel, Inc., unless otherwise indicated

**PRINTED IN CHINA**

**W6085pr-0920**

Download from [Www.Somanuals.com](http://Www.Somanuals.com). All Manuals Search And Download

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>