



Please keep these instructions for future reference,
as they contain important information.

Requires three "AA" batteries (included).

Batteries included are for demonstration purposes only.

Adult assembly required for battery replacement and set-up. Tools required:
Phillips screwdriver and slotted screwdriver (or coin). Tools not included.

This toy is compatible with iPhone® 3GS,
iPhone 4/4S and iPod Touch® 4th Generation. Device not included.

This toy is **surface washable only**. Do not immerse.



CONSUMER ASSISTANCE

1-800-432-5437 (US & Canada)

1300 135 312 (Australia)



service.fisher-price.com

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.

Hearing-impaired consumers: 1-800-382-7470.

Outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd.,
Mississauga, Ontario L5R 3W2; www.service.mattel.com.

Great Britain: Mattel UK Ltd, Vanwall Business Park,
Maidenhead SL6 4UB. Helpline: 01628 500303.
www.service.mattel.com/uk

Mattel Europa B.V., Gonderl 1, 1186MJ Amstelveen, Nederland.

Australia: Mattel Australia Pty. Ltd., 658 Church Street,
Locked Bag #870, Richmond, Victoria 3121 Australia.

 
New Zealand: 16-18 William Pickering Drive,
Albany 1331, Auckland.

Apple, iPhone and iPod touch are trademarks of Apple Inc.,
registered in the U.S. and other countries. App Store is a service mark of Apple Inc.

©2012 Mattel. All Rights Reserved.

® and ™ designate U.S. trademarks of Mattel, except as noted.

Battery Replacement

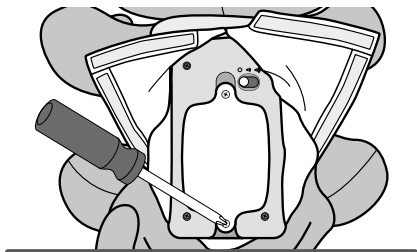


For best performance, we recommend replacing the batteries that came with this toy with three, new "AA" (LR6) alkaline batteries.

- Open the fasteners on the back of the toy.
- Loosen the screws in the sound box battery compartment door with a Phillips screwdriver. Remove the door. Remove the exhausted batteries and dispose of them properly.
- Insert three, new "AA" (LR6) **alkaline** batteries.
- Replace the battery compartment door and tighten the screws. Do not over-tighten.
- Close the fasteners on the back of the toy.
- If this toy begins to operate erratically, you may need to reset the electronics. Slide the power/volume switch off and back on.
- When sounds from this toy become faint or stop, it's time for an adult to change the batteries.



- Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities.

 Battery Safety Information

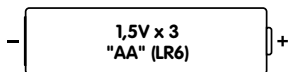



In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

 
10+ Songs, Tunes & Phrases



- Open the fasteners on the back of the toy.
- Slide the power/volume switch to ON with low volume  or ON with high volume . Close the fasteners on the back of the toy.
- Press the monkey's hands or feet to hear fun songs and phrases!

Insert Your Apple Device

- Download our free Fisher-Price® Monkey app from the App StoreSM (no purchase necessary!) for interactive fun!
- When used with your iPod or iPhone device, make sure it is properly inserted and locked in the toy. Remove any other case from the device before inserting it in this toy.
- Turn your device power ON and open the Fisher-Price® Monkey app.

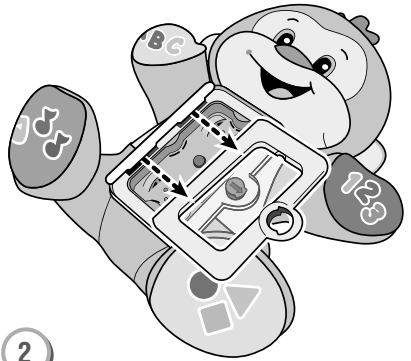


2

- Lift the door slightly and then slide to remove it from the device compartment.


*Hint: If you'd like to **block** your child from pressing the home button, follow the instructions in this step.*

 Home Button

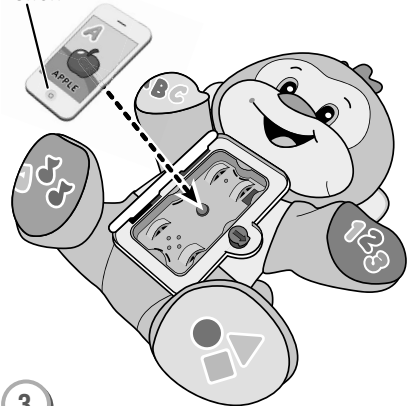

3

 - Insert the device with the home button towards the monkey's feet.

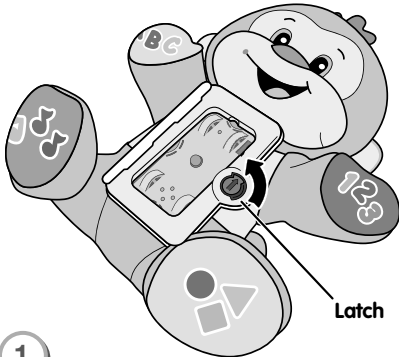


1

- Turn the latch to unlock the door.


Insert Your Apple Device

 Hint: If you'd like to **allow** your child to press the home button, follow the instructions in this step.

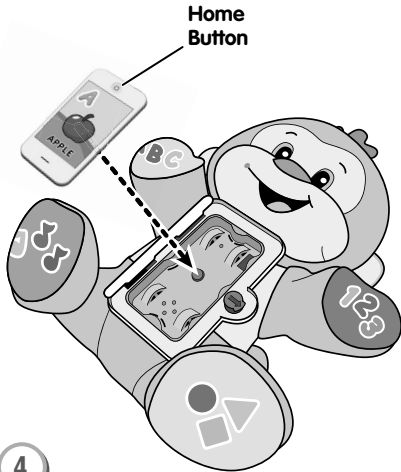


4

 - Insert the device with the home button toward the monkey's arms.

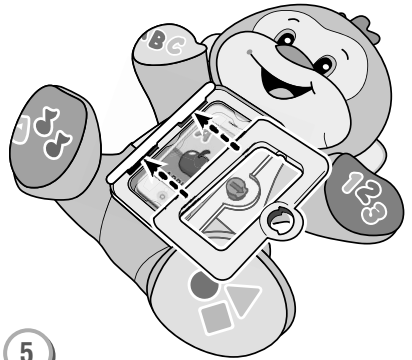

5

 - Fit the tabs on the door into the slots in the monkey.

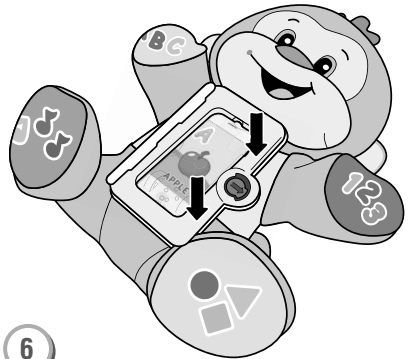

6


- Squeeze the door closed to lock in place.
- Check to be sure the door is closed and the latch is in the locked position.

Interactive Fun!



-
- Press the monkey's hands and feet to interact with the app!

Tips:

- Make sure toy power is ON to interact with the app on your device.
- When this toy is used with your Apple device, volume is controlled by your device. Adjust the volume level on your device.
- When you are finished playing with this toy, slide the power/volume switch OFF . The power/volume switch is on the sound box. Open the fasteners on the back of the toy to locate the switch.

Consumer Information

ICES-003

- This Class B digital apparatus complies with Canadian ICES-003.
- Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

NMB-003

- Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.
- L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes : (1) il ne doit pas produire de brouillage et (2) l'utilisateur du dispositif doit être prêt à accepter tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre le fonctionnement du dispositif.

FCC Statement (United States Only)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>