

Fisher-Price®

Classical Chorus™ Bouncer



Model Number: B0772

Please keep this instruction sheet for future reference,
as it contains important information.

Adult assembly is required. Tool required for assembly:
Phillips Screwdriver (not included).

Requires three "C" (LR14) **alkaline** batteries (not included).

Discover what's possible™... www.fisher-price.com

Warning and Caution



WARNING

To prevent serious injury and/or falls:


- Never use on any elevated surface, since child's movement may cause bouncer to slide or tip over.
- Never use as a carrier or lift while child is seated.
- Always use the restraint system.
- Never leave child unattended.
- Never use as a car seat.
- Never use with a child able to sit up unassisted.



CAUTION

This package contains small parts
in its unassembled state.
Adult assembly is required.

Parts

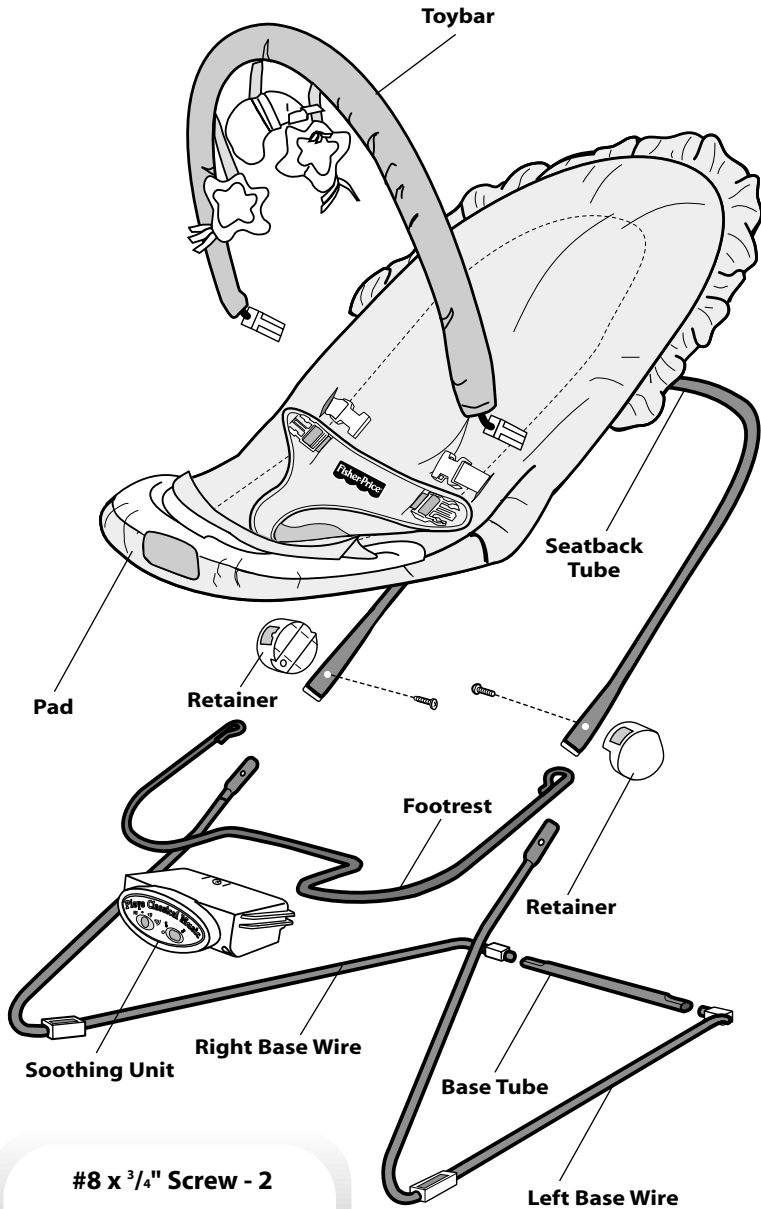


#8 x $\frac{3}{4}$ " Screw - 2




Shown Actual Size

Battery Installation

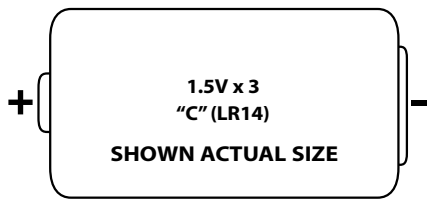

Battery Compartment Door

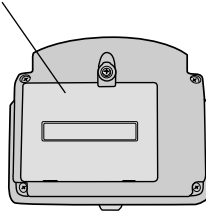



- Loosen the screw in the soothing unit battery compartment door with a Phillips screwdriver. Remove the battery compartment door.
- Insert three “C” (LR14) **alkaline** batteries, as indicated inside the battery compartment.
- Replace the battery compartment door and tighten the screw with a Phillips screwdriver. Do not over-tighten.

Hint: We recommend the use of **alkaline** batteries for longest battery life.


Battery Tips

- Do not mix old and new batteries.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Remove the batteries during long periods of non-use. Always remove exhausted batteries from the product. Battery leakage and corrosion can damage the product. Dispose of the batteries safely.
- Do not dispose of batteries in a fire. The batteries may explode or leak.
- Never short circuit the battery terminals.
- Non-rechargeable batteries are not to be recharged.
- Only batteries of the same or equivalent type as recommended in the “Battery Installation” instructions are to be used.
- If removable rechargeable batteries are used, they are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the product before they are charged.
- If you use a battery charger, it should be examined regularly for damage to the cord, plug, enclosure and other parts. Do not use a damaged battery charger until it has been properly repaired.

Assembly

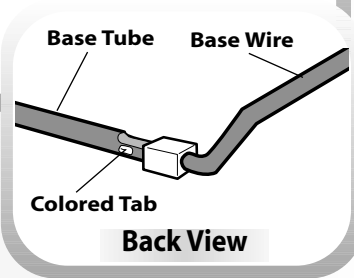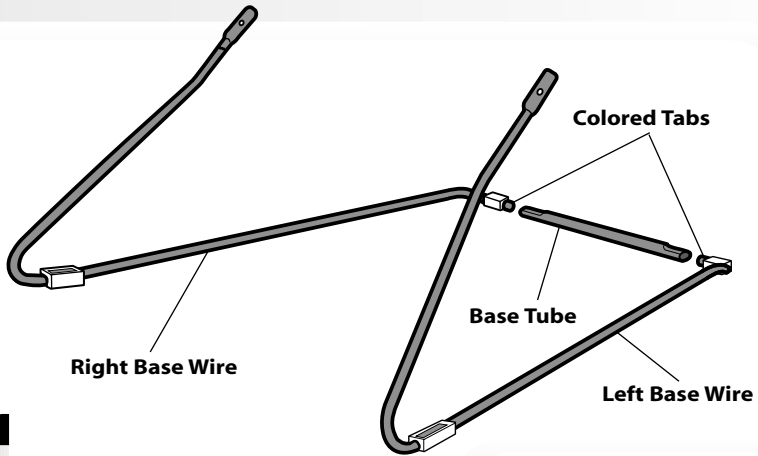


- Place the base tube on a flat surface as shown.
- Position the left and right base wires as shown. Note the location of the colored tabs on the left and right base wires.
- Fit the left base wire into the base tube.
- Fit the right base wire into the base tube.
- **Make sure both colored tabs on the base wires are visible through the holes in the base tube.**

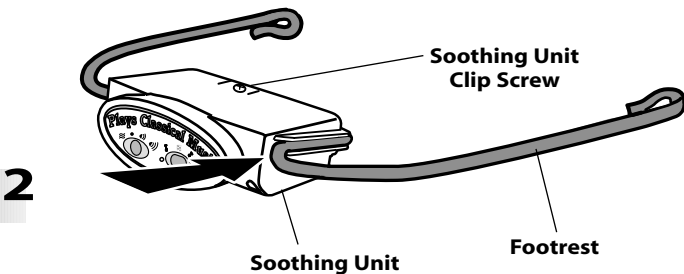


- Loosen the screw in the soothing unit clip with a Phillips screwdriver.
- Slide the soothing unit onto the footrest, as shown. **Make sure the footrest is completely in the grooves around the sides and back end of the soothing unit.**
- Tighten the screw in the soothing unit clip with a Phillips screwdriver. Do not over-tighten.

Assembly

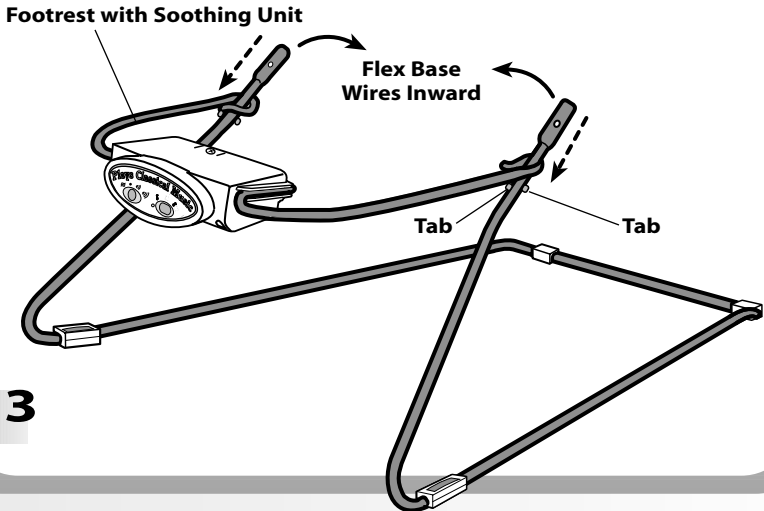


- Position the footrest so that the soothing unit is upright.
- While flexing the base wires toward each other, hook the footrest onto the ends of the base wires.
- Push the footrest **down completely to the tabs** on the base wires.

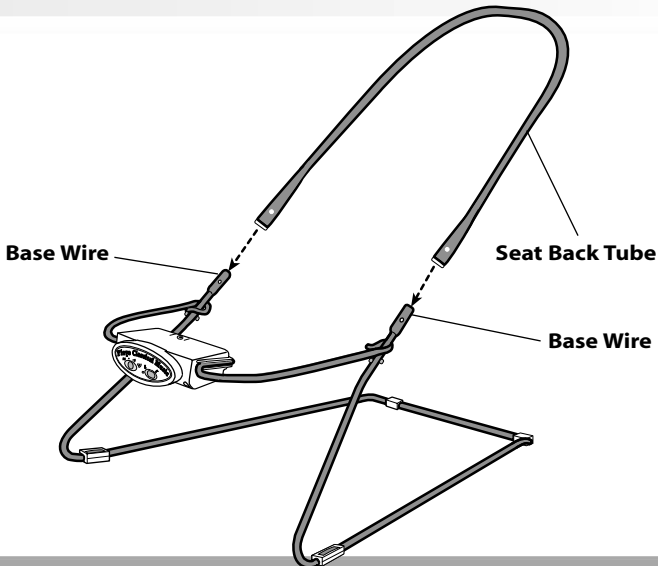


- Fit the seat back tube completely onto the base wires.

Assembly

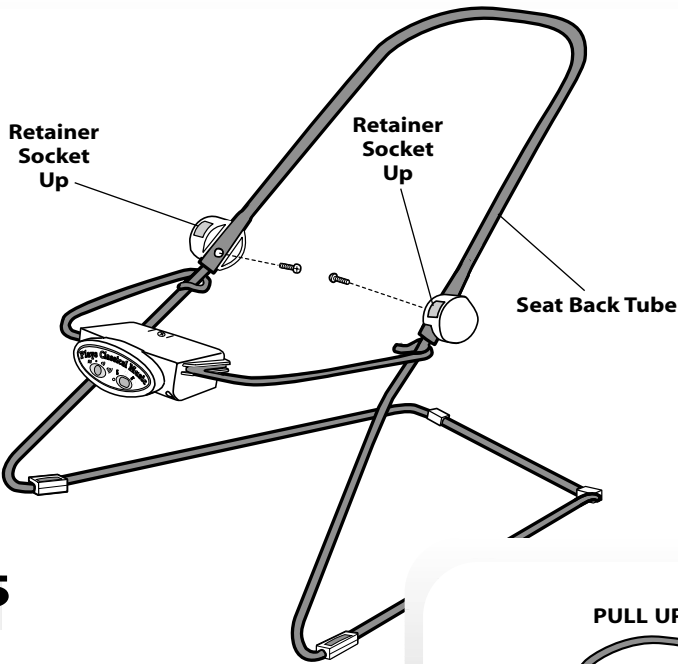


- Fit a retainer to the **outside** of the seat back tube, as shown. Make sure the socket in the retainer is upright.
- Insert a screw through the hole in the seat back tube, base wire and into the **inside** of the retainer.
- Tighten the screw with a Phillips screwdriver. Do not over-tighten.
- Repeat this procedure to assemble the other retainer to the other side of the seat back tube.

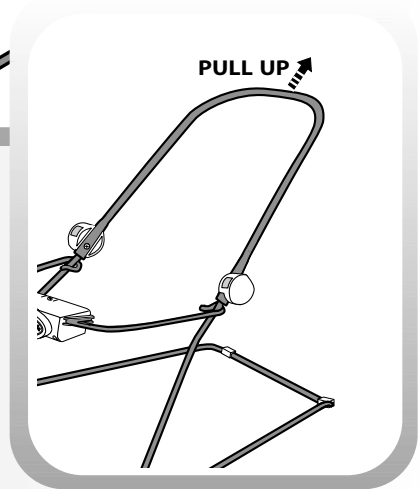


- Pull up on the seat back tube to be sure it is secure. If you can remove either end of the seat back tube, you have not assembled the retainers correctly. Remove the screws, re-read and repeat Assembly steps 4 and 5.

Assembly

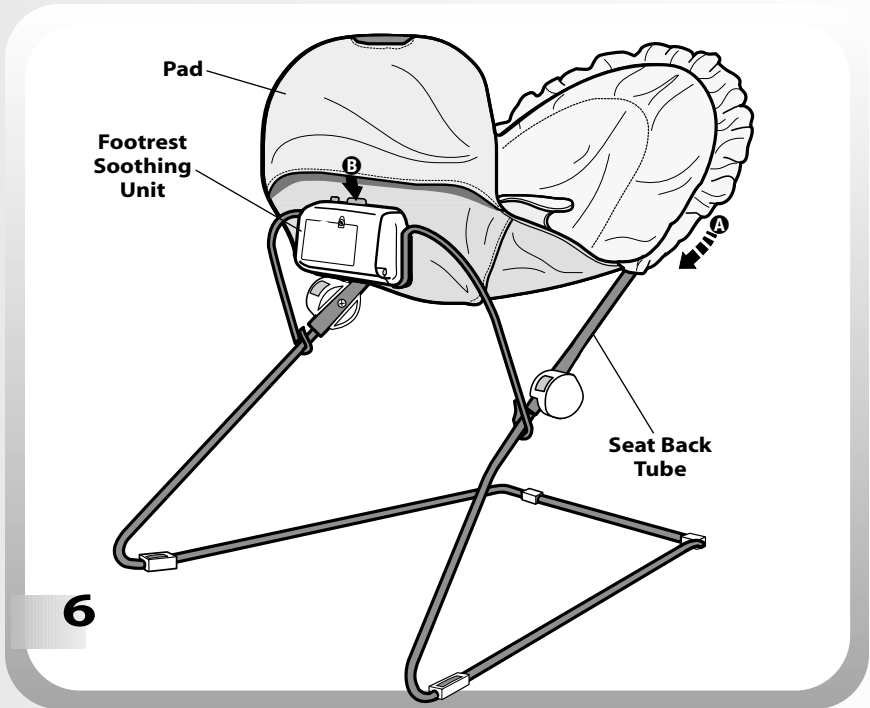

- Position the pad above the frame with the blanket toward the soothing unit.
- Fit the upper pocket on the back of the pad onto the seat back tube **A**.
- Lift the footrest. Fit the lower pocket on the back of the pad onto the footrest **B**. Lower the footrest.

Assembly

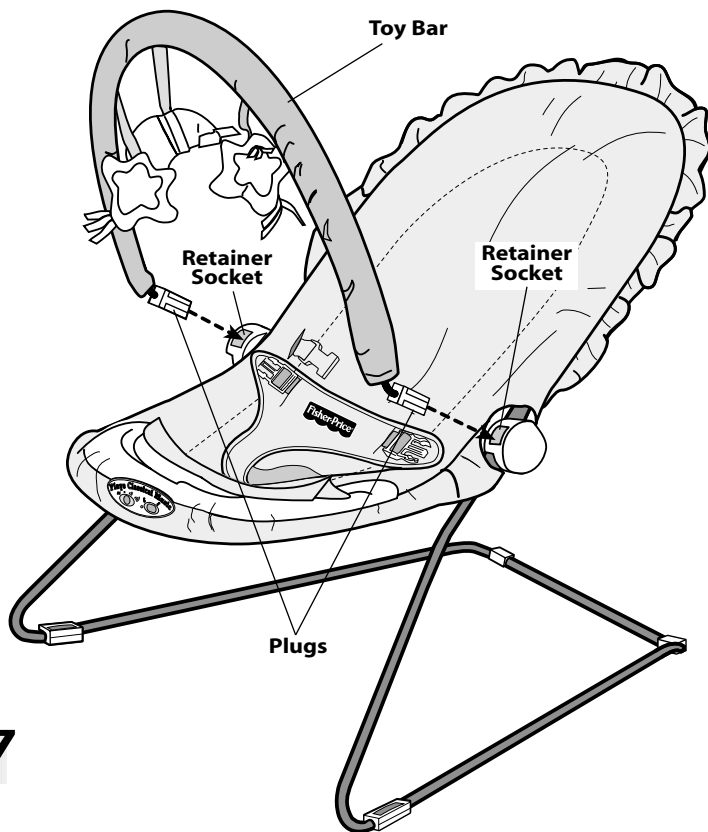

- Fit the toy bar plugs into each retainer socket.
- The toy bar is removable. Simply pull to remove.


Set-Up & Use



WARNING

To prevent serious injury and/or falls:


- Never use on any elevated surface, since child's movement may cause bouncer to slide or tip over.
- Never use as a carrier or lift while child is seated.
- Always use the restraint system.
- Never leave child unattended.
- Never use with a child able to sit up unassisted.

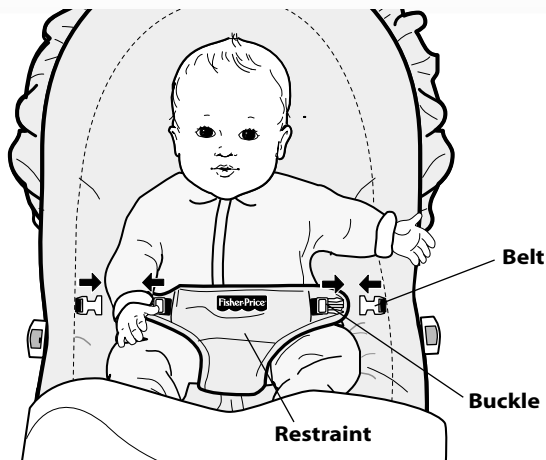

Securing Your Child

- If the toy bar is attached, remove it before placing your child in the seat.
- Place your child in the seat. Position the restraint between your child's legs.
- Fasten both belts to the buckles on each side of the restraint. **Make sure you hear a "click" on both sides.**
- Check to be sure the restraint is securely attached by pulling it away from your child. The restraint should remain attached.
- Attach the toy bar, if desired (see Assembly Step 7).

Set-Up & Use

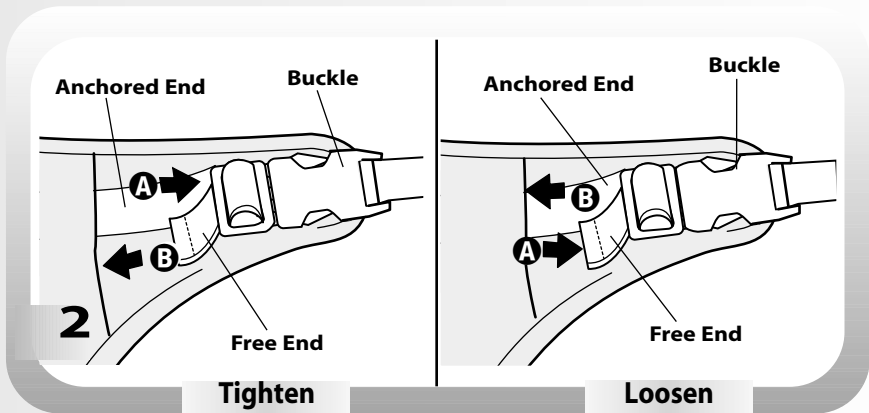

To tighten the restraint:

- Feed the anchored end of the belt up through the buckle to form a loop **A**.
- Pull the free end of the belt **B**.
- Repeat this procedure to tighten the other belt.

To loosen the restraint:

- Feed the free end of the belt up through the buckle to form a loop **A**.
Enlarge the loop by pulling on the end of the loop toward the buckle.
- Pull the anchored end of the belt to shorten the free end of the belt **B**.
- Repeat this procedure to loosen the other belt.

Please Note: After adjusting the belts to fit your child, make sure you pull on the restraint to be sure they are securely fastened.


 


Set-Up & Use



Music and Calming Vibrations

- Make sure your child is properly secured in the seat.
- Slide the mode switch on the soothing unit to select music, calming vibrations or both! Then press the power button to turn your selection on.


 


Music

- Slide the mode switch to .
- Press the power button    to turn music on with low volume; press again for on with high volume; press again to turn music off.


Vibrations

- Slide the mode switch to .
- Press the power button    to turn vibrations on; press again to turn vibrations off.

Music and Vibrations


- Slide the mode switch to .
- Press the power button    to turn vibrations on and music on with low volume; press again to turn vibrations on and music on with high volume; press again to turn music and vibrations off.

Hints:

- *Be sure to press the power button **AFTER** making your mode selection to turn the soothing unit on.*
- *Turn the soothing unit off after each use by sliding the mode switch to the off  position.*
- *Music and/or vibrations will shut off automatically after 10-15 minutes. To turn them back on, press the power button.*



IMPORTANT! Change the batteries when vibrations/music will not shut off or the soothing unit does not function properly as described in the instructions. You will also need to change the batteries if vibrations/music from the soothing unit become faint, or if there are no vibrations or music. Remove the batteries from the soothing unit and dispose of them properly. Replace the batteries with three, new "C" (LR14) **alkaline** batteries.

Set-Up & Use

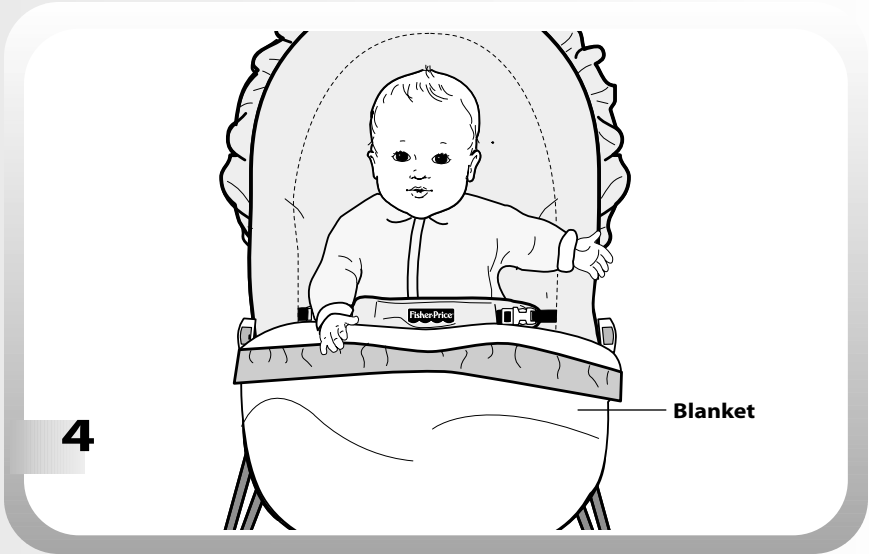

- Fold blanket up on baby's lap.

Storing the Blanket

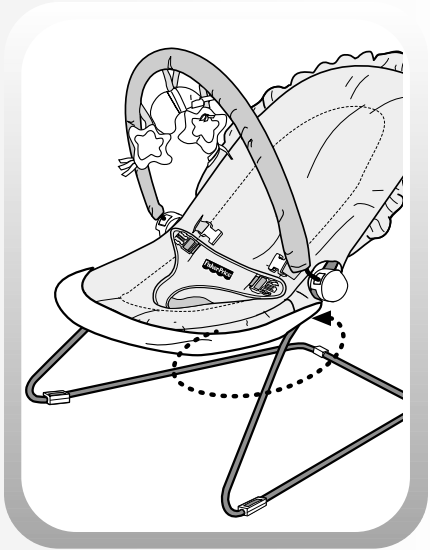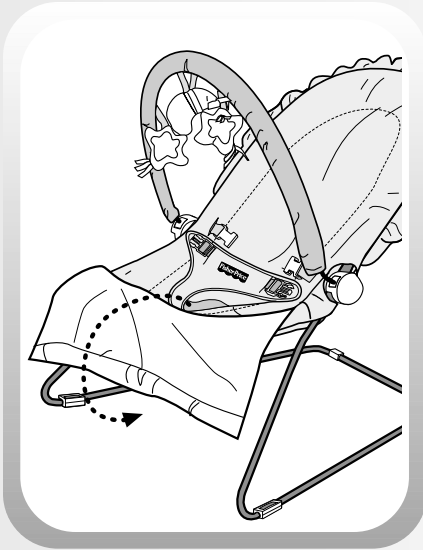

- Pull the blanket down completely.
- Fold the blanket under the footrest wire.
- Tuck the blanket into the pocket on the underside of the pad.

Care

The pad is machine washable. Wash it separately in cold water on the gentle cycle. Do not use bleach. Tumble dry separately on low heat and remove promptly. The frame, toy bar and toys may be wiped clean using a mild cleaning solution and a damp cloth. Do not immerse the soothing unit.

FCC Note (United States Only)

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

Consumer Information

Questions? We'd like to hear from you!

Call Fisher-Price® Consumer Relations, toll-free at **1-800-432-5437**, 8 AM – 6 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Or, write to:

Fisher-Price® Consumer Relations
636 Girard Avenue
East Aurora, New York 14052

For other countries, outside the United States:

Canada: call **1-800-567-7724**, or write to: Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2.

Great Britain: telephone 01628 500302.

Australia: Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

New Zealand: 16-18 William Pickering Drive, Albany 1331, Auckland.

Fisher-Price, Inc., a subsidiary of Mattel, Inc., East Aurora, NY 14052 U.S.A.

©2002 Mattel, Inc. All Rights Reserved. ® and ™ designate U.S. trademarks of Mattel, Inc.

Printed in China

B0772pr-0920

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>