

**Lay & Play****Tummy Time****Sit & Play**


Please keep this instruction sheet for future reference,  
as it contains important information.

Adult assembly is required.


Required three "AA" batteries (included) for operation.  
Batteries included are for demonstration purposes only.

Tool required for battery replacement: Phillips  
screwdriver (not included).


## Assembled Parts

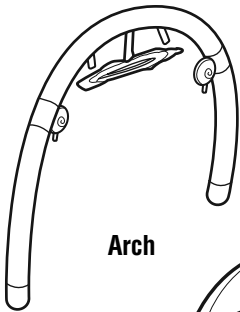

Arch

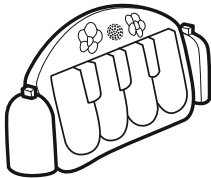


Piano

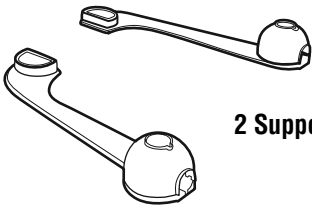

2 Supports




4 Hanging Toys

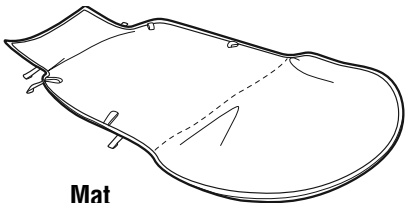


Mat

## Assembly

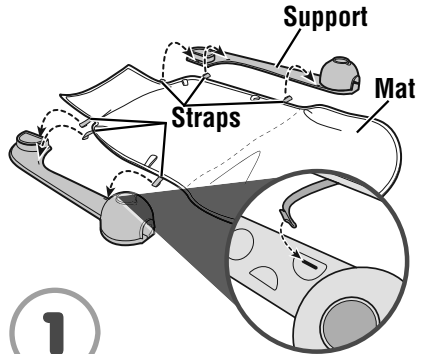


- Place the mat, print side up, on a flat surface.
- Fit all three straps on each side of the mat through the slots in the supports. Make sure the tab on the end of each strap forms a "T" under the support.
- Pull up on the mat to be sure it is secured to the supports.

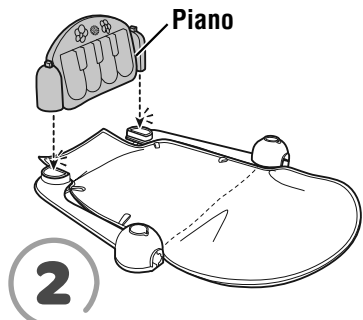


- Fit the posts on the piano into the openings in the supports, as shown.
- Push to "snap" in place.

# Assembly

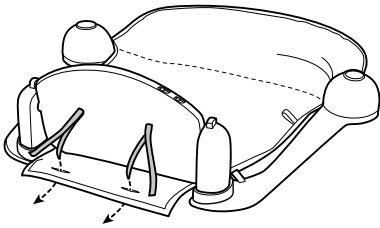


**3**

- From the back of the piano, fit one end of each strap through the slots in the mat.

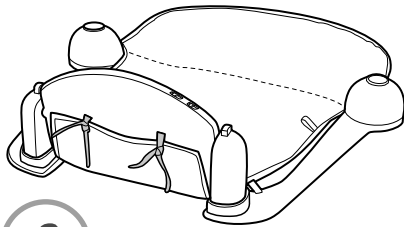



**4**

- Tie each strap to secure the mat to the piano.

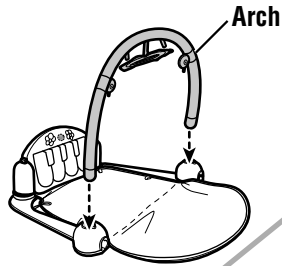

**5**

- Fit the ends of the arch into the top or side sockets in the supports.

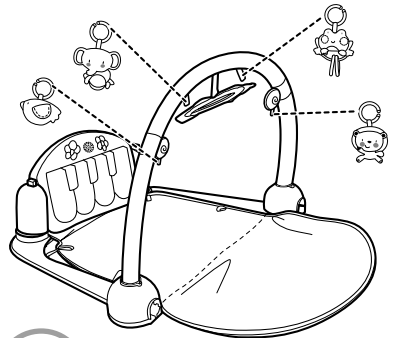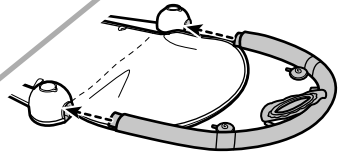

**6**

- Hang the toys from loops around the gym.

# Consumer Information



## CONSUMER ASSISTANCE

1-800-432-5437 (US & Canada)  
1300 135 312 (Australia)

**service.fisher-price.com**

---

**Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.**  
**Hearing-impaired consumers: 1-800-382-7470.**

---

**Outside the United States:**

Canada: Mattel Canada Inc., 6155 Freemont Blvd.,  
Mississauga, Ontario L5R 3W2; [www.service.mattel.com](http://www.service.mattel.com).

Great Britain: Mattel UK Ltd, Vanwall Business Park,  
Maidenhead SL6 4UB. Helpline: 01628 500303.  
[www.service.mattel.com/uk](http://www.service.mattel.com/uk)

Mattel Europa B.V., Gondel 1, 1186MJ Amstelveen, Nederland.

Australia: Mattel Australia Pty. Ltd., 658 Church Street,  
Locked Bag #870, Richmond, Victoria 3121 Australia.

New Zealand: 16-18 William Pickering Drive,  
Albany 1331, Auckland.

## ICES-003

This Class B digital apparatus complies with Canadian ICES-003. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

## NMB-003

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada. L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes: (1) il ne doit pas produire de brouillage et (2) l'utilisateur du dispositif doit être prêt à accepter tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre le fonctionnement du dispositif.


## FCC Statement (United States Only)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

## Battery Replacement

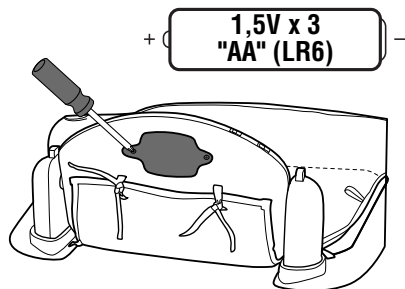

**For best performance, we recommend replacing the batteries that came with this toy with three, new "AA" (LR6) alkaline batteries.**

- Locate the battery compartment door on the back of the piano.
- Loosen the screws in the battery compartment door with a Phillips screwdriver and remove it.
- Remove the exhausted batteries and dispose of them properly. Insert three, new "AA" (LR6) **alkaline** batteries.
- Replace the battery compartment door and tighten the screws. Do not over-tighten.
- If this product begins to operate erratically, you may need to reset the electronics. Slide the power/volume switch off and then back on.
- When sounds become faint or stop, it's time for an adult to change the batteries.
-  Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities.

## Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

### Care




- The mat is machine washable. Wash separately in cold water on the gentle cycle. Do not use bleach. Tumble dry on low.
- The arch, toys, supports and piano can be wiped with a clean, damp cloth. Do not immerse the piano.

# Musical Fun!



## WARNING

To prevent entanglement injury, never place the gym in a crib or playpen. Never add strings, ties or other products to the gym.

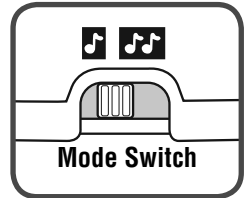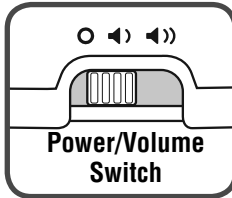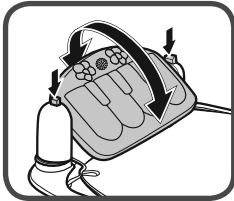

- Press the buttons on the side of the piano and rotate it for kick 'n play or sit-at play.
- Slide the power/volume switch to ON with low volume ◯◁) or ON with high volume ◯▷) .
- Slide the mode switch to 🎵🎵 long play or 🎵 short play mode.
- 🎵🎵 **Long Play** - press a button to play a song
- 🎵 **Short Play** - press a button to play a note and a short ditty
- When you are finished playing with this toy, slide the power/volume switch OFF ◯ .

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>