


H0779 Instructions

Battery Installation



 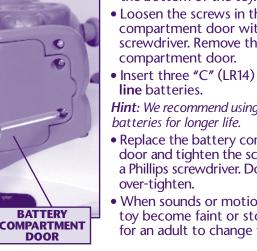


- Locate the battery compartment on the bottom of the toy.
- Loosen the screws in the battery compartment door with a Phillips screwdriver. Remove the battery
- Insert three "C" (LR14) alka-

Hint: We recommend using **alkaline**

- Replace the battery compartment door and tighten the screws with a Phillips screwdriver. Do not
- When sounds or motions from this toy become faint or stop, it's time for an adult to change the batteries!

Battery Safety Information



Batteries may leak fluids that can cause a chemical burn injury or ruin your toy. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.

- Remove batteries during long periods of non-use. Always remove exhausted batteries from the toy. Dispose of batteries safely. Do not dispose of batteries in a fire. The batteries may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.
- the tov.

 
Please keep this instruction sheet for future reference, as it contains important information. Requires three "C" (LR14) alkaline batteries (not included). Adult assembly is required for battery installation. Tool required for battery installation: Phillips screwdriver (not included).

Alth Mith DOG 11. 53 Porce Porce Seden Create Man



ABC

A Fun Learning Friend!






• Locate the power/volume switch on the front of

• Slide the switch to the desired position: **Off**; on with low volume \triangleleft or on with high volume \triangleleft .

Hint: If your child does not press any of Fetch's buttons for a while, Fetch says "see you later" and turns off automatically (sleep mode). Press any button to resume play.

• When your child is finished playing with this toy, slide the power/volume switch to the **Off** position.



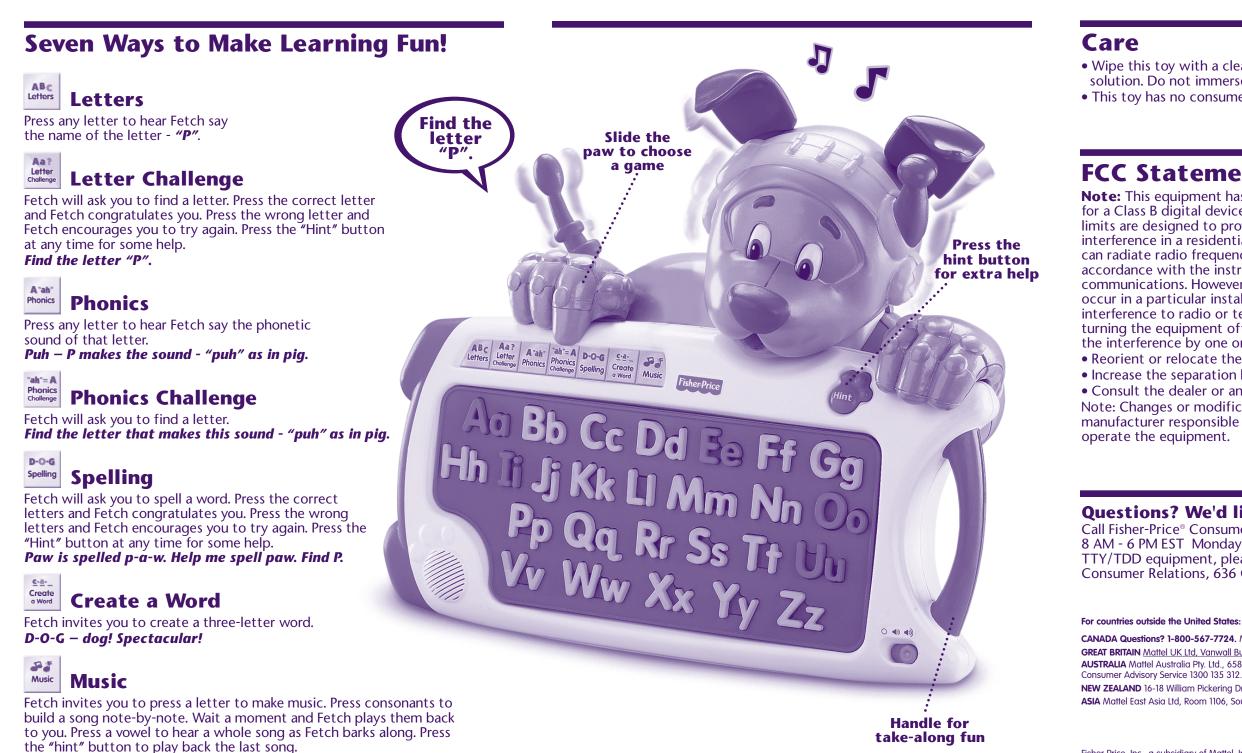

• Wipe this toy with a clean cloth dampened with a mild soap and water solution. Do not immerse this toy. • This toy has no consumer serviceable parts. Do not take this toy apart.

FCC Statement (United States Only)

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.
- Note: Changes or modifications not expressly approved by the
- manufacturer responsible for compliance could void the user's authority to

Questions? We'd like to hear from you!

Call Fisher-Price[®] Consumer Relations, toll-free at 1-800-432-KIDS (5437). 8 AM - 6 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Or, write to: Fisher-Price Consumer Relations, 636 Girard Avenue, East Aurora, New York 14052, U.S.A.

For countries outside the United States:

- CANADA Questions? 1-800-567-7724. Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2. GREAT BRITAIN Mattel UK Ltd, Vanwall Business Park, Maidenhead SL6 4UB. Helpline: 01628 500302.
- AUSTRALIA Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia.
- NEW ZEALAND 16-18 William Pickering Drive, Albany 1331, Auckland.
- ASIA Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.

Free Manuals Download Website <u>http://myh66.com</u> <u>http://usermanuals.us</u> <u>http://www.somanuals.com</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.com</u> <u>http://www.404manual.com</u> <u>http://www.luxmanual.com</u> <u>http://aubethermostatmanual.com</u> Golf course search by state

http://golfingnear.com Email search by domain

http://emailbydomain.com Auto manuals search

http://auto.somanuals.com TV manuals search

http://tv.somanuals.com