 
 


Battery Replacement



Shown Actual Size

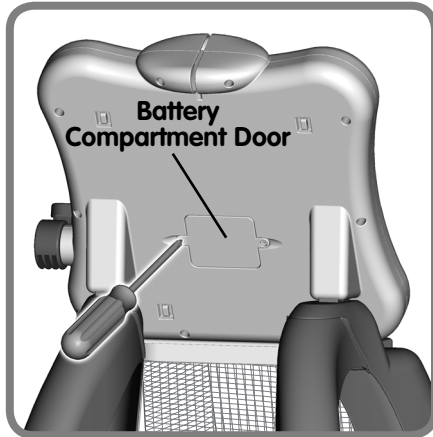

For best performance, we recommend replacing the batteries that came with this toy with three, new alkaline "AA" (LR6) batteries.

- Locate the battery compartment on the back of the easel.
- Loosen the screws in the battery compartment door and remove the battery compartment door.
- Remove the exhausted batteries and throw them away. Insert three "AA" (LR6) alkaline batteries.

Hint: We recommend using alkaline batteries for longer battery life.

- Replace the battery compartment door and tighten the screws.
- When sounds from this toy become faint or stop, it's time for an adult to change the batteries!

5

Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

Care

- Wipe this toy with a clean cloth dampened with a mild soap and water solution. Do not immerse this toy.
- This toy has no consumer serviceable parts. Do not take this toy apart.

Consumer Information

Visit us on line at www.service.fisher-price.com

Call Fisher-Price® Consumer Relations, toll-free at **1-800-432-5437**, 8 AM - 6 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470.

Write to us at:
Fisher-Price®
Consumer Relations,
636 Girard Avenue,
East Aurora, New York 14052.

For countries outside the United States:

CANADA: Questions? **1-800-432-5437**. Mattel Canada Inc., 6155 Fremont Blvd., Mississauga, Ontario L5R 3W2; www.service.mattel.com.

GREAT BRITAIN: Mattel.UK.Ltd.Vanwall.Business.Park.Maidenhead.SL6.4UB. Helpline: 01628.500303; www.service.mattel.com/uk

AUSTRALIA: Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

NEW ZEALAND: 16-18 William Pickering Drive, Albany 1331, Auckland.

ASIA: Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.

6

FCC Statement

(United States Only)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

Fisher-Price®

Musical Magnetic Easel



Please keep this instruction sheet for future reference, as it contains important information.

Requires three "AA" batteries (included).

Adult assembly is required.

Tool required for assembly:
Phillips screwdriver (not included).



www.fisher-price.com

Parts

 
⚠ CAUTION

This product contains small parts in its unassembled state. Adult assembly is required.


Note: This product contains a magnet. Do not use around items that are sensitive to or affected by magnetic fields.



Easel

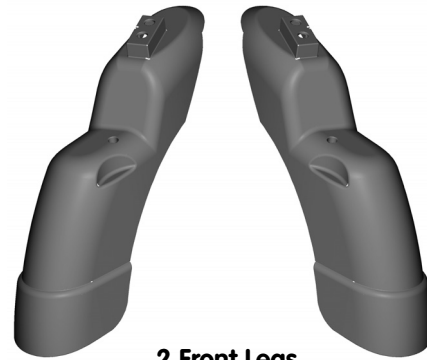


2 Front Legs

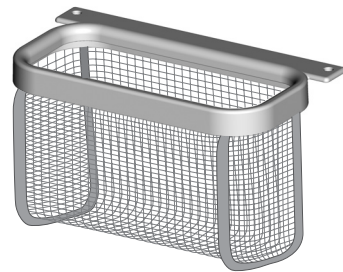 

Basket



 2 Back Legs



3.5mm x 12mm Screw – 6
SHOWN ACTUAL SIZE

Note: Tighten or loosen all screws with a Phillips screwdriver. Do not over-tighten the screws.

 
Parts not shown: 8 Magnets

Fisher-Price, Inc., a subsidiary of Mattel, Inc. East Aurora, New York 14052 U.S.A.
©2005 Mattel, Inc. All Rights Reserved. ® and ™ designate U.S. trademarks of Mattel, Inc.

2


PRINTED IN CHINA
J7343a-0920

Assembly

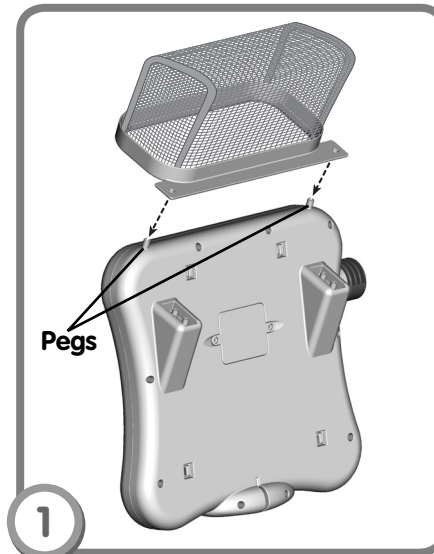


1

 • Fit the basket onto the pegs on the bottom of the easel, as shown.

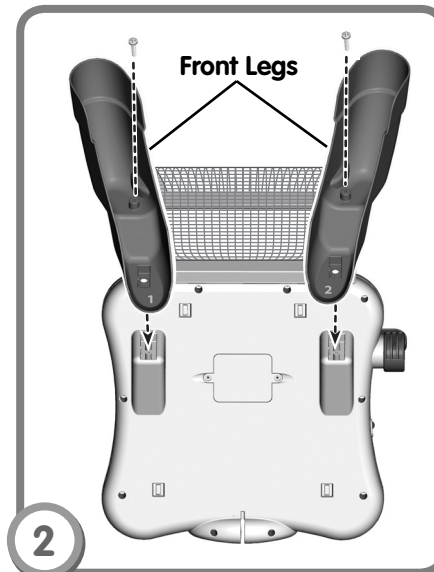


2

 • Fit the front legs into the sockets in the back of the easel.
• Insert two screws into the legs to secure to the assembly. Tighten the screws.

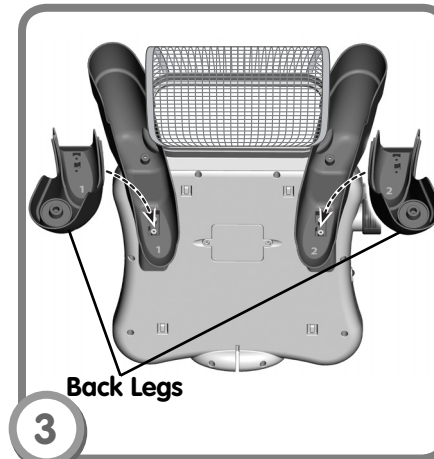

3

 • Fit the back legs onto the front legs, as shown.

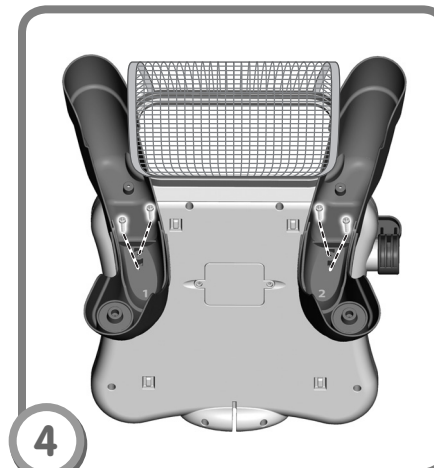


4


• Insert four screws into the back legs. Tighten the screws.

3

 Matching Shapes and Musical Fun!

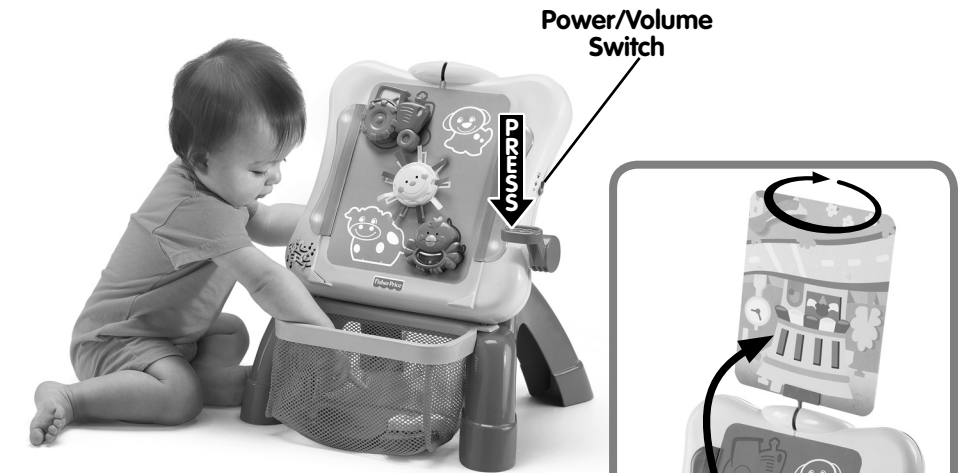

Power/Volume Switch

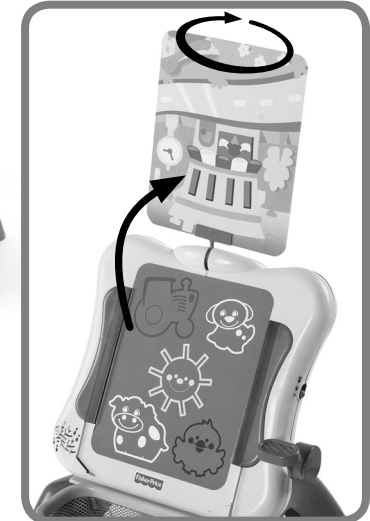 

- Slide the power/volume switch on the side of the toy to either on with low volume or on with high volume .
- Choose a scene on either side of the attached page. The page also flips back, out of the way.
- Add magnets to the easel. Press the magnets for sounds and music.
- Press the lever to release the magnets into the basket and start over.
- Use your own paper to create original drawings.
- When you are finished playing with this toy, slide the power/volume switch off .



4

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>