

Fisher-Price®

K2566



WARNING

**IMPORTANT! KEEP INSTRUCTIONS
FOR FUTURE REFERENCE.**



www.fisher-price.co.uk



WARNING

To prevent serious injury or death:

- **Fall Hazard** – It is dangerous to use this reclined cradle on an elevated surface, since child's movement may cause product to slide or tip over. Use only on a floor.
- **Suffocation Hazard** – Never use on a soft surface (bed, sofa, cushion), since product can tip over and cause suffocation in soft surfaces.
- Always use the restraint system.
- Never leave child unattended.
- Never use as a car seat.
- Never use as a carrier or lift while child is seated. Never use the toy bar as a handle.
- Not recommended for children who can sit up by themselves (6 months approximately, until 9 kg/ 20 lbs).

- Please read these instructions before assembly and use of this product.
- Adult assembly is required.
- Tool required for assembly: Phillips screwdriver (not included).
- Requires four "D" (LR20) alkaline batteries (not included) for operation.
- Product features and decorations may vary from photographs.
- **GREAT BRITAIN:** Helpline: 01628 500303. Mattel UK Ltd, Vanwall Business Park, Maidenhead SL6 4UB.
www.service.mattel.com/uk.
- **AUSTRALIA:** Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia.
Consumer Advisory Service 1300 135 312.
- **ASIA:** Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.
- **MALAYSIA:** Diimport & Diedarkan Oleh: Mattel SEA Ptd Ltd. (993532-P) Lot 13.5, 13th Floor, Menara Lien Hoe, Persiaran Tropicana Golf Country Resort, 47410 PJ.
Tel: 03-78803817, Fax: 03-78803867.

 


CAUTION

This package contains small parts in its unassembled state. Adult assembly is required.

Parts

IMPORTANT! Please remove all parts from the package and identify them before assembly.
Some parts may be packed in the pad.

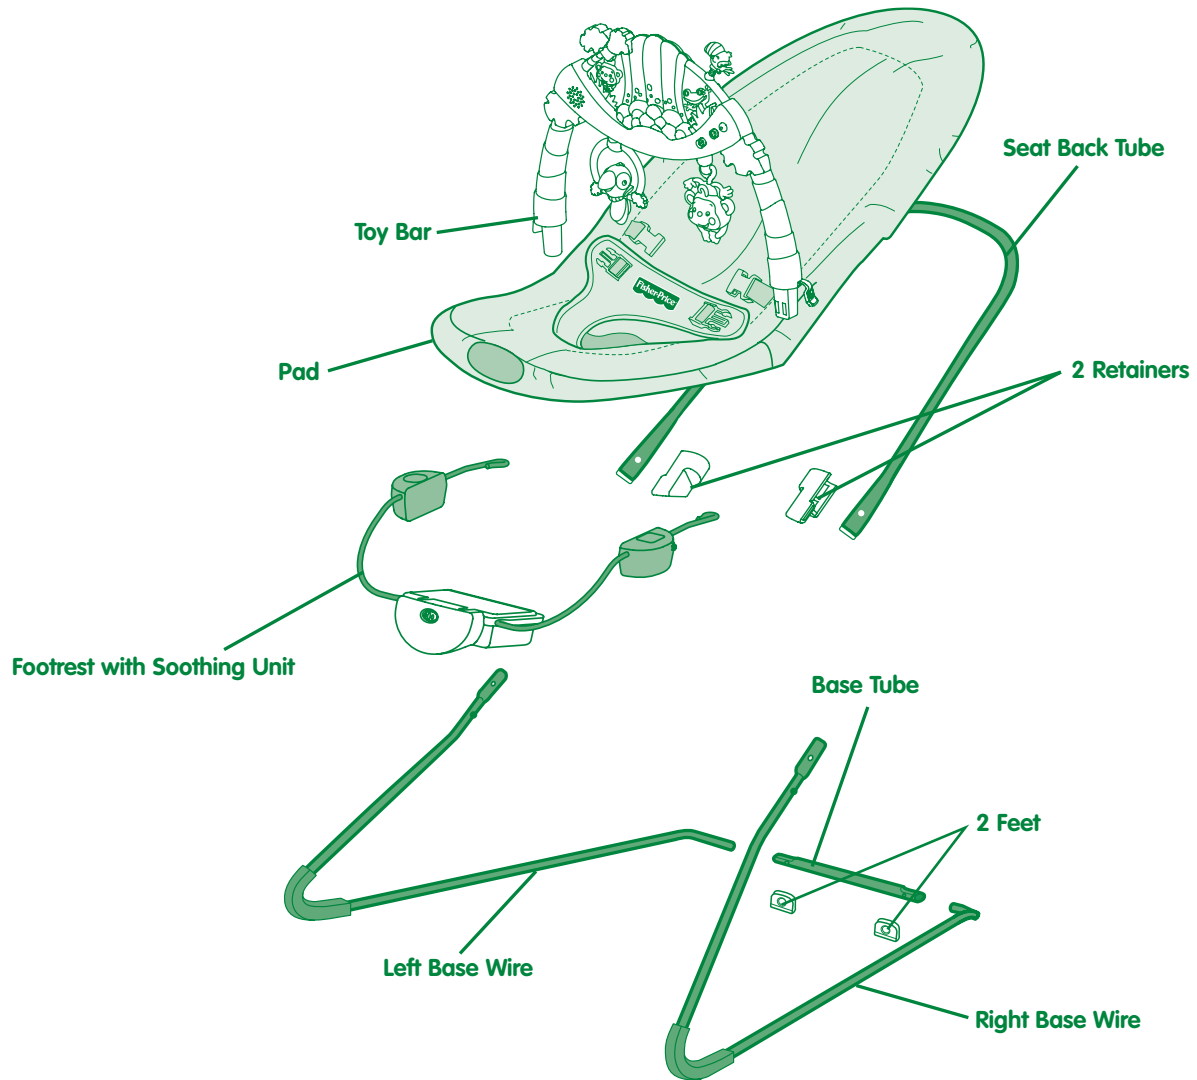

M5 x 20 mm Screw - 2





#8 x 1,9 cm Screw - 2

  Note: Tighten or loosen all screws with a Phillips screwdriver. Do not over-tighten the screws.

Battery Installation

Hint: We recommend using *alkaline* batteries for longer battery life.

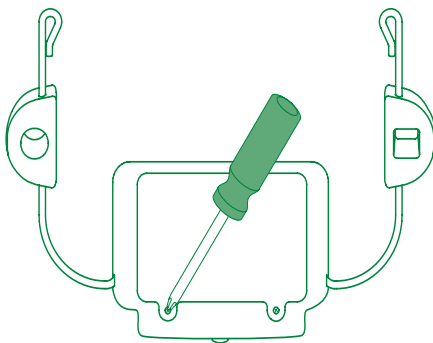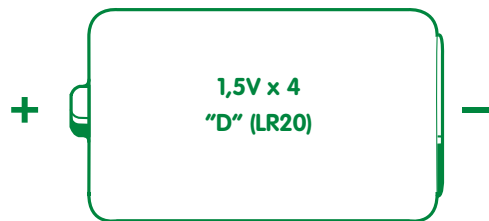

- Loosen the screws in the soothing unit battery compartment door. Remove the battery compartment door.
- Insert four "D" (LR20) alkaline batteries.
- Replace the battery compartment door. Tighten the screws.



- Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities (Europe only).

 
Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:


- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

Assembly

IMPORTANT! Before assembly and each use, inspect this product for damaged hardware, loose joints, missing parts or sharp edges. DO NOT use if any parts are missing or broken. Contact Mattel for replacement parts and instructions if needed. Never substitute parts.

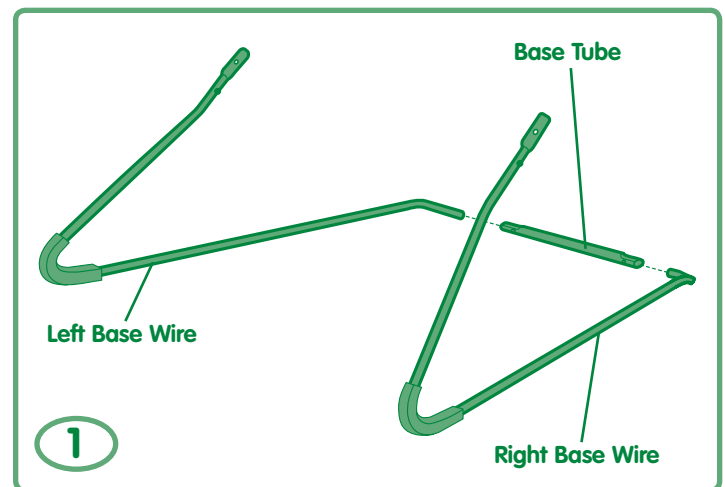


 - Place the base tube on a flat surface.
- Position the left and right base wires as shown.
- Fit the left base wire and right base wire into the base tube.

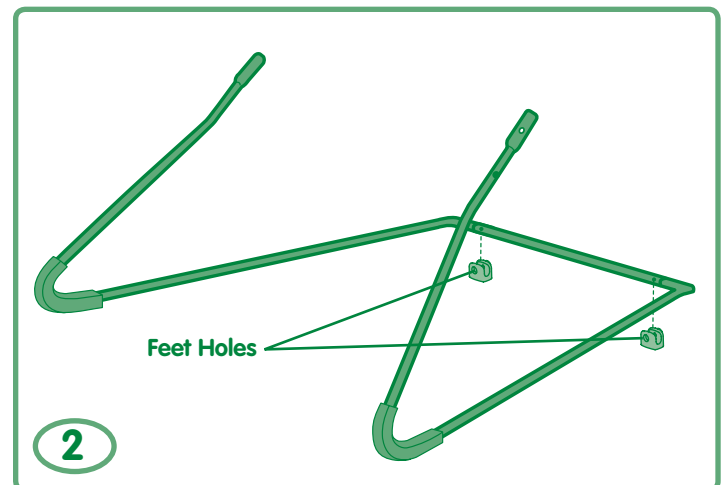


- Position the feet so the holes are toward you and the non-skid surface is down.
- Fit the feet on the base tube, as shown.

 Assembly

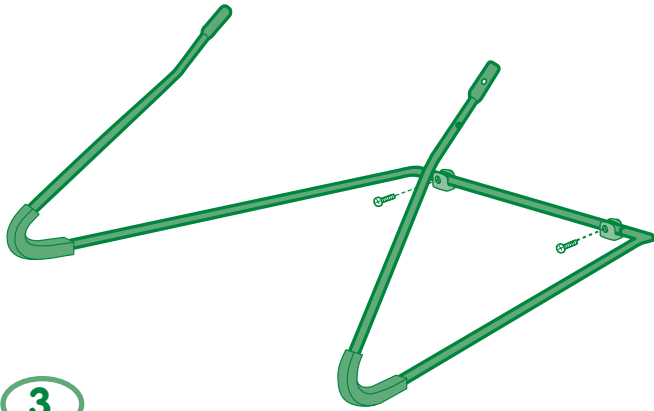


- Insert an M5 x 20 mm screw through each foot and tighten.

 
Flex Base Wires Inward

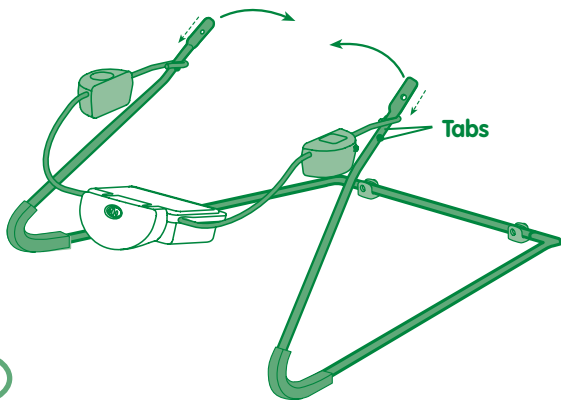

 - While flexing the base wires toward each other, hook the footrest onto the ends of the base wires.
- Push the footrest down completely to the tabs on the base wires.

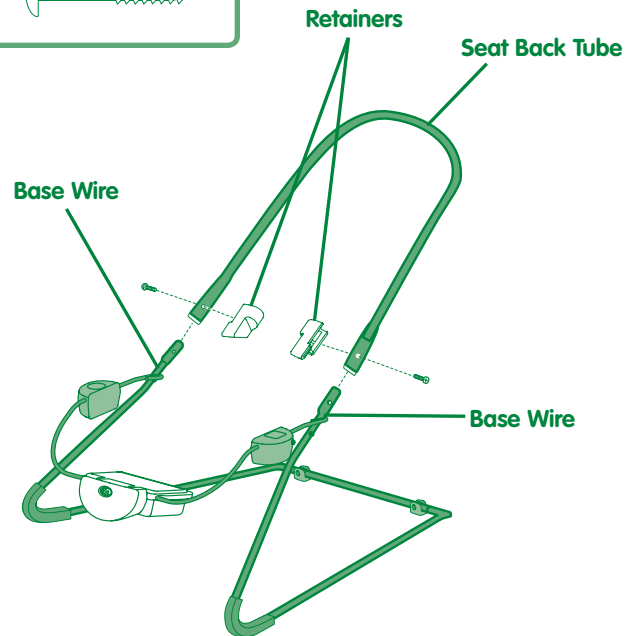


Pull Up

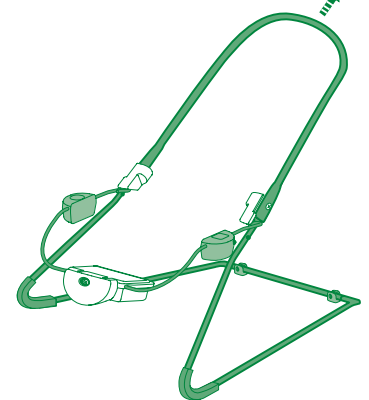 


- Position the seat back tube above the base assembly.
- Fit the seat back tube completely onto the base wires.
- Fit a retainer (rounded side inward) to one end of the seat back tube.
- Insert a #8 x 1,9 cm screw through the outside hole in the seat back tube and into the retainer.
- While holding the retainer in place, tighten the screw.
- Repeat this procedure to secure the other side of the seat back tube to the base assembly using the remaining retainer and #8 x 1,9 cm screw.
- Pull up on the seat back tube to be sure it is secure. If you can remove either end of the seat back tube, you have not assembled it correctly. Remove the screws and retainers. Re-read and repeat Assembly step 5.

 Assembly

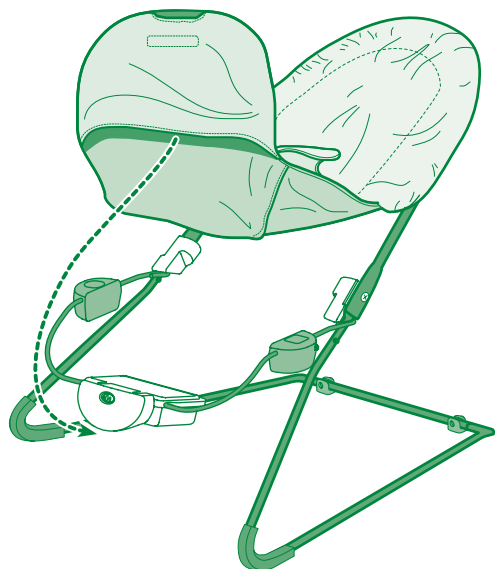

 - Fit the pad upper pocket onto the seat back tube.
- Fit the pad lower pocket onto the footrest.

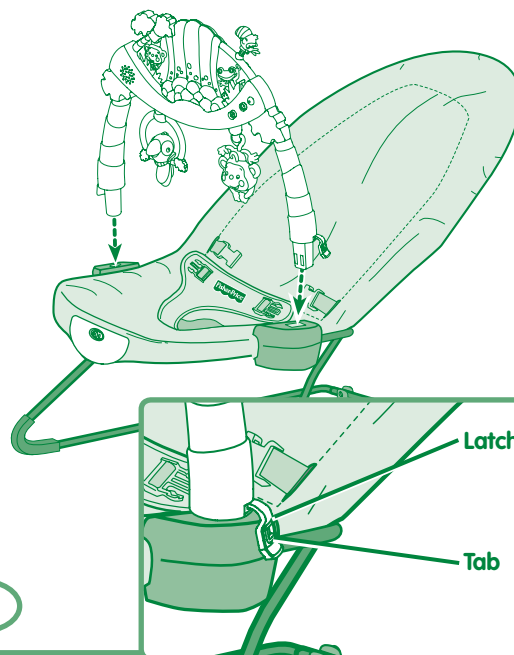

- Fit the toy bar ends into the sockets in the footrest.

 
Hint: The square end of the toy bar fits into the square socket and the circular end of the toy bar fits into the circular socket.

- Make sure the toy bar latches are secure. The small tabs on the sockets should be visible in the opening in the latches. Assembly is now complete.

WARNING


To prevent serious injury or death:

- **Fall Hazard** – It is dangerous to use this reclined cradle on an elevated surface, since child's movement may cause product to slide or tip over. Use only on a floor.
- **Suffocation Hazard** – Never use on a soft surface (bed, sofa, cushion), since product can tip over and cause suffocation in soft surfaces.
- Always use the restraint system.
- Never leave child unattended.
- Never use as a car seat.
- Never use as a carrier or lift while child is seated. Never use the toy bar as a handle.
- Not recommended for children who can sit up by themselves (6 months approximately, until 9 kg/ 20 lbs).

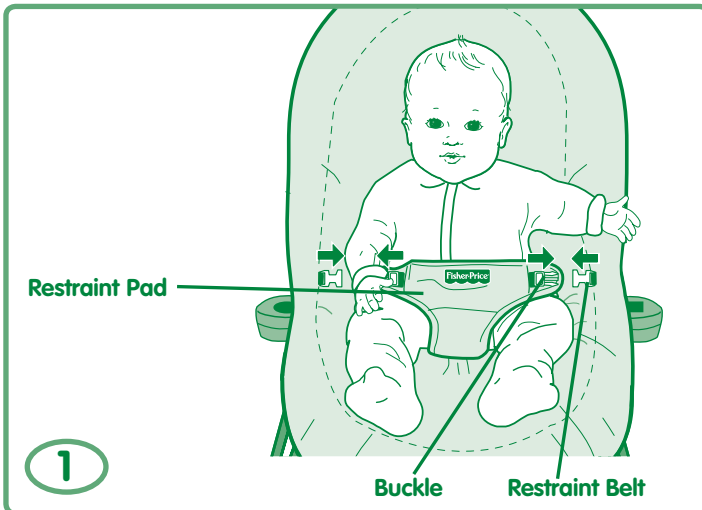

Securing your Child

 - If the toy bar is attached, remove it before placing your child in the seat. Place your child in the seat. Position the restraint pad between your child's legs.
- Fasten both restraint belts to the buckles on each side of the restraint pad. Make sure you hear a "click" on both sides.
- Check to be sure the restraint is securely attached by pulling it away from your child. The restraint should remain attached.
- Attach the toy bar, if desired (see Assembly step 7).

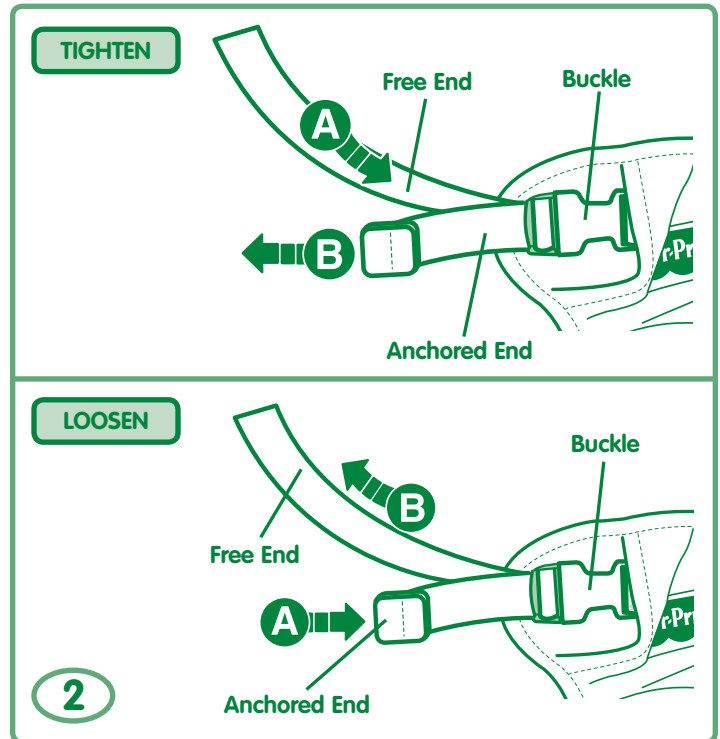

To tighten the belts:

- Feed the anchored end of the belt up through the buckle to form a loop **A**.
- Pull the free end of the belt **B**.
- Repeat this procedure to tighten the other belt.

To loosen the belts:

- Feed the free end of the belt up through the buckle to form a loop **A**. Enlarge the loop by pulling on the end of the loop toward the buckle.
- Pull the anchored end of the belt to shorten the free end of the belt **B**.
- Repeat this procedure to loosen the other belt.

Note: After adjusting the belts to fit your child, make sure you pull on them to be sure they are securely fastened.

 


Calming Vibrations

- Make sure your child is properly secured in the seat.
- To turn vibrations on, slide the power switch on the soothing unit to the on position \approx .
- To turn vibrations off, slide the power switch on the soothing unit to the off position \circ .

IMPORTANT! If vibrations become faint, or if there are no vibrations, remove the "D" (LR20) batteries from the soothing unit and dispose of them properly. Replace the batteries with four, new "D" (LR20) alkaline batteries.

Setup and Use

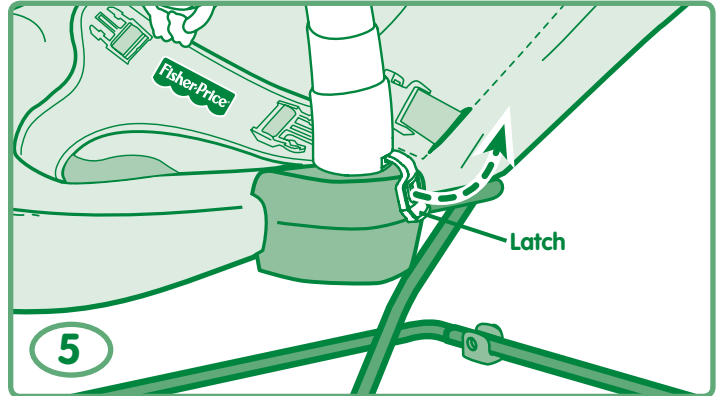

Remove the Toy Bar

- Pull the ends of the latches and lift the toy bar.

Care

The pad is machine washable. Wash the pad separately in cold water on the gentle cycle. Do not use bleach. Tumble dry separately on low heat and remove promptly. The frame, toy bar can be wiped clean using a mild cleaning solution and damp cloth. Do not use bleach. Do not immerse the soothing unit or toy bar.



Mode Switch



Rainforest Sounds
or Music Switch



Volume Button

Rainforest Sounds or Music

- Slide the switch to rainforest sounds 🌳 or music 🎵.

Child-activated (Short Play)

- Slide the mode switch to 🐒 for child activated mode.
- When baby bats the monkey or the toucan, baby is rewarded with rainforest sounds or music along with motion and lights.

Parent-activated (Long Play)

- Slide the mode switch to 🔄 for parent activated mode. Baby enjoys 10 minutes of rainforest sounds or music, a light show and motion.

Off

- Slide the mode switch to ○ to turn off sounds, lights, and motion.

Volume

- Push the volume button once for low volume 🔊; press again for high volume 🔊; press again for off ○.

IMPORTANT! If lights dim or sound or movement become faint or stop all together, remove the "D" (LR20) batteries from the soothing unit and dispose of them properly. Replace the batteries with four, new "D" (LR20) alkaline batteries.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>