



# Fisher-Price®

Instructions

# Toots the Train™

Product Number 74878



Please keep this instruction sheet for future reference, as it contains important information.

 
Adult assembly is required.

Requires three "AAA" (LR03) and four "AA" (LR6) alkaline batteries for operation (all batteries not included).


Tool required for battery installation: Phillips Screwdriver (not included).

[www.fisher-price.com](http://www.fisher-price.com)


# PARTS

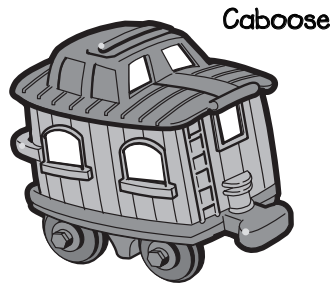

Caboose

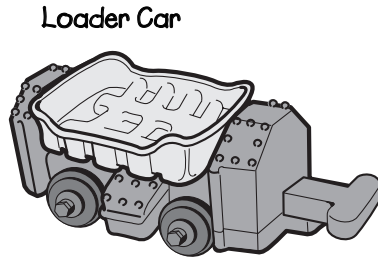 


Loader Car

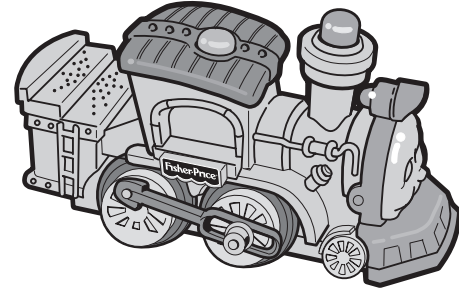 


Engine



 Railroad Crossing

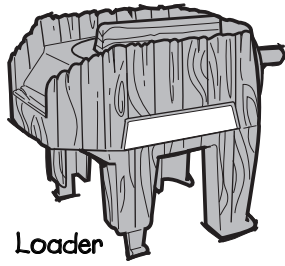

Loader

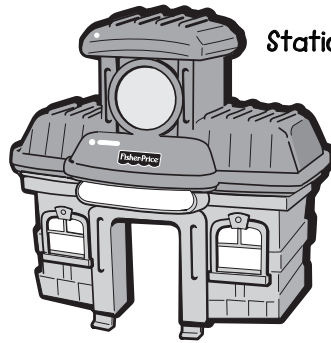 


Station




Barn



 
Coal Boulder

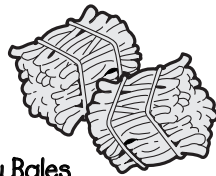


2 Hay Bales

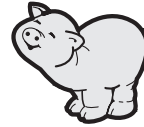 


Pig

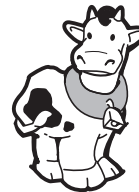 


Cow

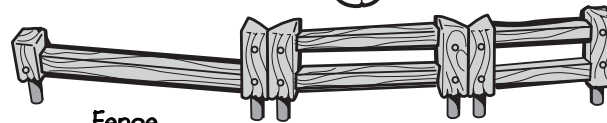 


Fence

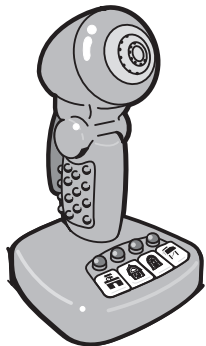 

Microphone

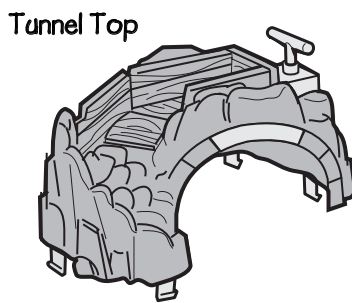 

Tunnel Top

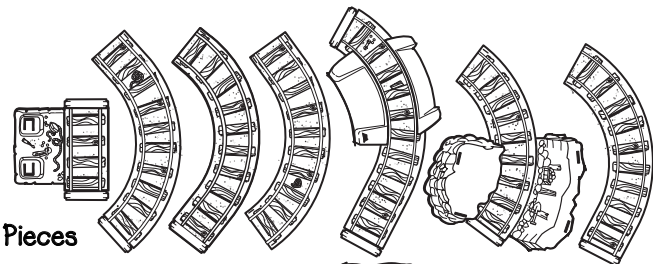 


10 Track Pieces



Decorative Label Sheet (Not Shown)

# Battery Installation
 
## Microphone

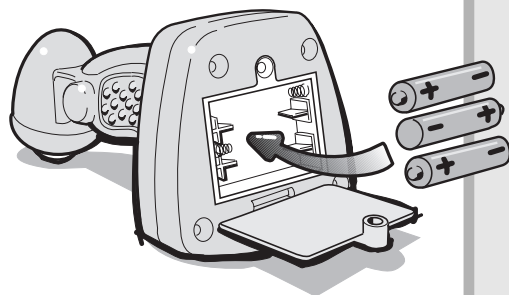


— "AAA" (LR03)  
1.5V x 3 +

SHOWN ACTUAL SIZE

- Locate the battery compartment on the underside of the microphone.
- Loosen the screw in the battery compartment door with a Phillips screwdriver and open the door.
- Insert three "AAA" (LR03) **alkaline** batteries, as indicated in the battery compartment.
- Replace the battery compartment door and tighten the screw with a Phillips screwdriver. Do not over-tighten.

## Engine

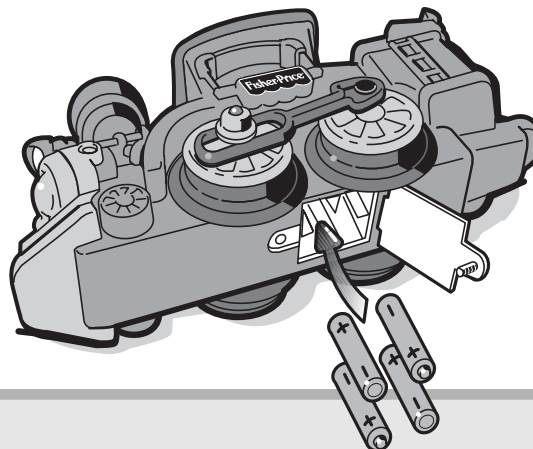 

— "AA" (LR6)  
1.5V x 4 +



SHOWN ACTUAL SIZE

- Locate the battery compartment on the underside of the engine.
- Loosen the screw in the battery compartment door with a Phillips screwdriver and open the door.
- Insert four "AA" (LR6) **alkaline** batteries, as indicated in the battery compartment.
- Replace the battery compartment door and tighten the screw with a Phillips screwdriver. Do not over-tighten.

## Battery Tips

  - Do not mix old and new batteries.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Remove the batteries during long periods of non-use. Always remove exhausted batteries from the toy. Battery leakage and corrosion can damage this toy. Dispose of batteries safely.
- Do not dispose of batteries in a fire. The batteries may explode or leak.
- Never short circuit the battery terminals.
- Non-rechargeable batteries are not to be recharged.
- Only batteries of the same or equivalent type as recommended in the "Battery Installation" instructions are to be used.
- If removable rechargeable batteries are used, they are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the toy before they are charged.
- If you use a battery charger, it should be examined regularly for damage to the cord, plug, enclosure and other parts. Do not use a damaged battery charger until it has been properly repaired.

# Track Layout and Assembly

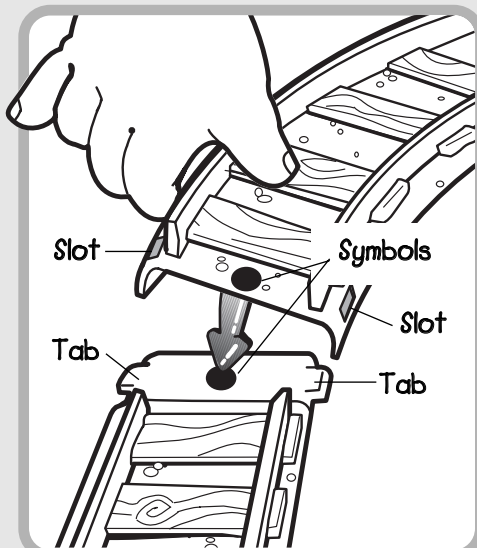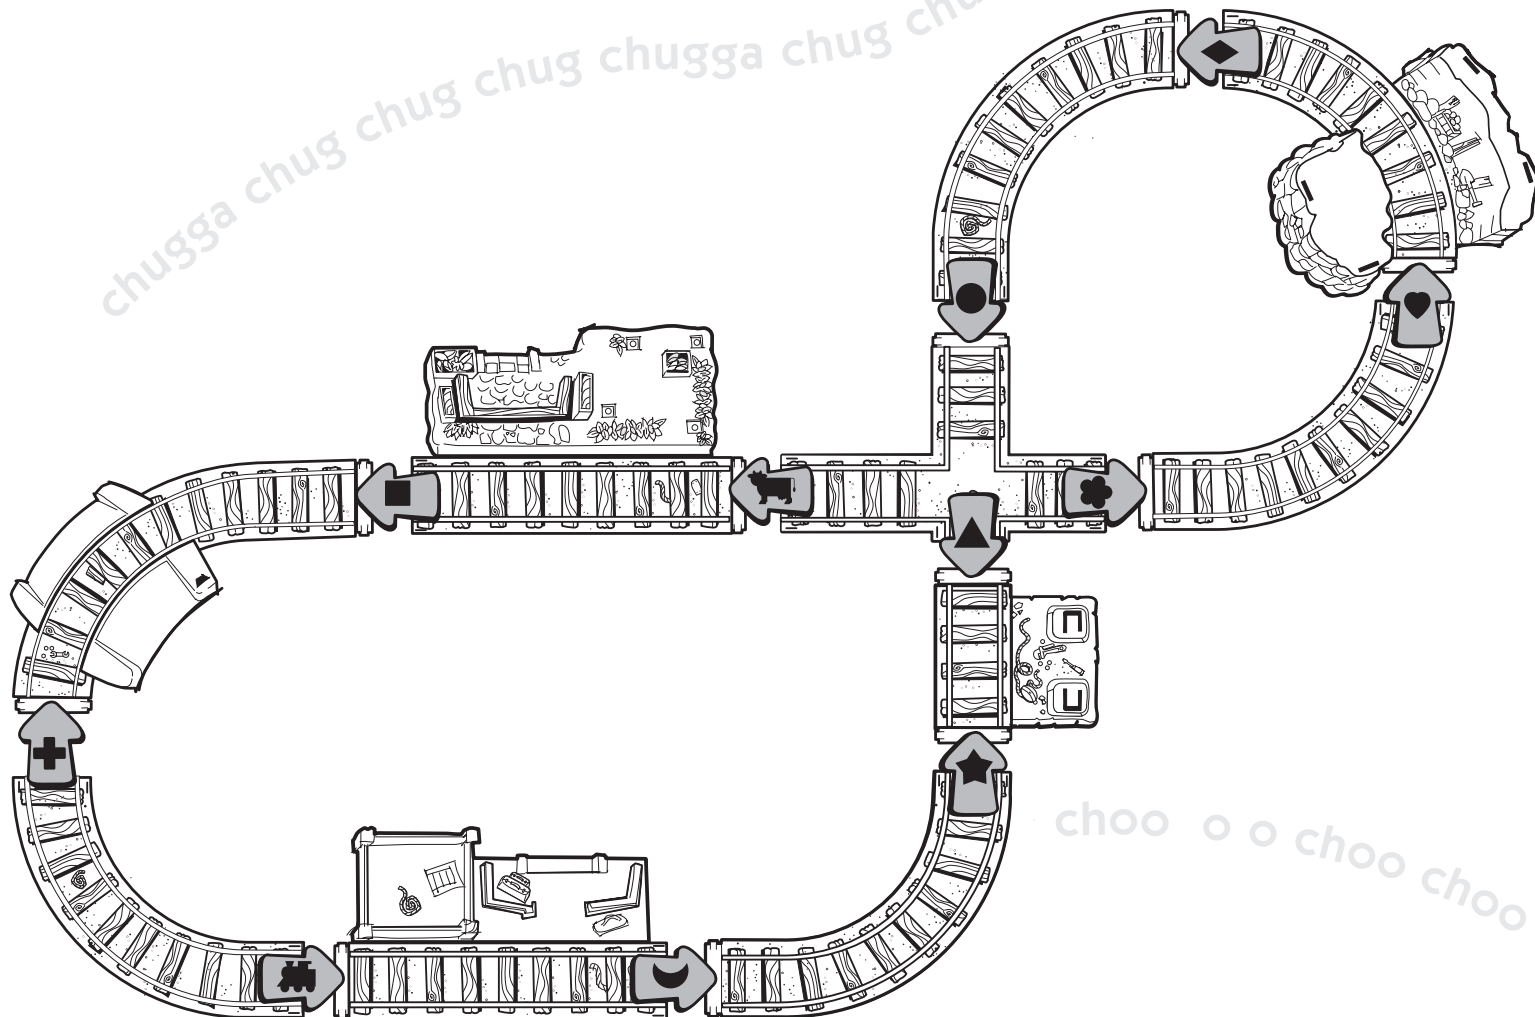


## Track Assembly

### Hints:


- Each track piece has a molded symbol +●■▼▲★◆♥. Simply match the symbols for easy track assembly!
  - For best performance, we suggest assembling the track on a hard, flat surface away from direct sunlight.
  - Locate the symbols on the ends of each track piece.
  - After matching the symbols, place the track pieces on a hard, flat surface.
  - Cover the tongue on one track piece with the matching track piece. Push down on the top track piece to snap the tabs on the tongue into the slots in the top track piece.
  - Repeat this procedure to assemble the other eight track pieces.
- Hint:** Assembling the track is not a one-time assembly. The track has been designed for easy disassembly for storage (see Storage and Care section).

# Accessory Assembly

 
**Hint:** Apply the labels as shown in the following illustrations. For best results, wash your hands before applying the labels and make sure the areas to which the labels will be applied are clean and dry. Avoid repositioning a label once it has been applied.

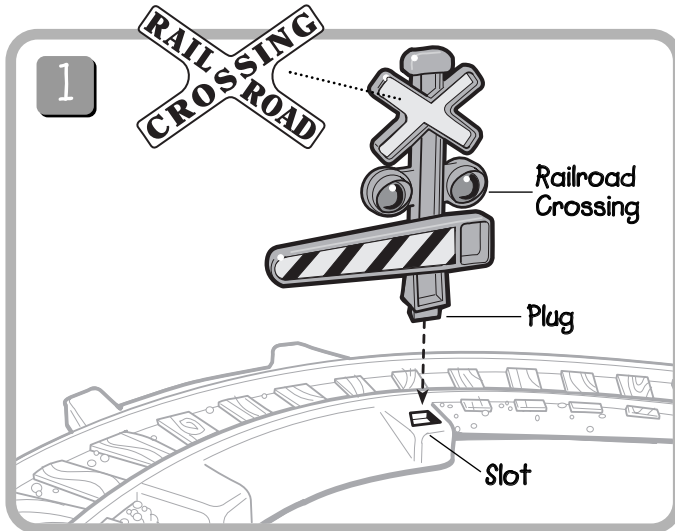

 
- Apply the labels to the railroad crossing, as indicated in the illustration.
- Fit the railroad crossing plug into the slot in the track.

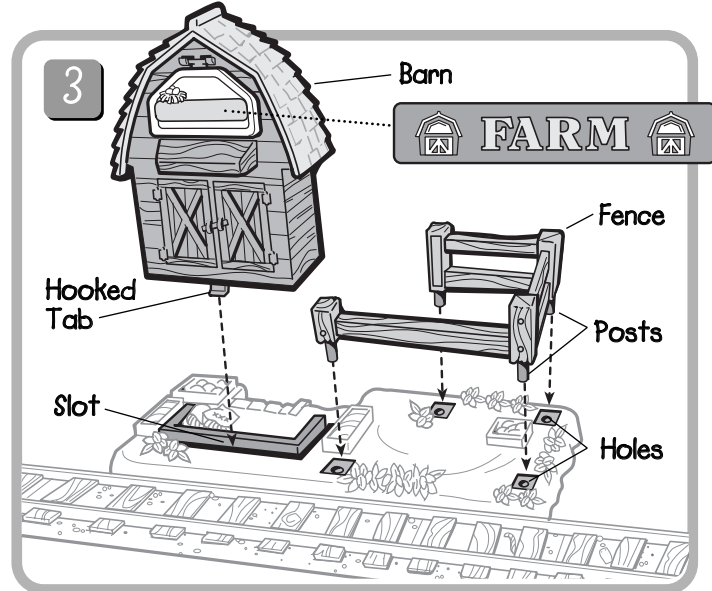

 - Apply the label to the barn, as indicated in the illustration.
- Insert and **"snap"** the hooked tab on the barn into the slot in the track.
- Fit the posts on the fence into the holes in the track.

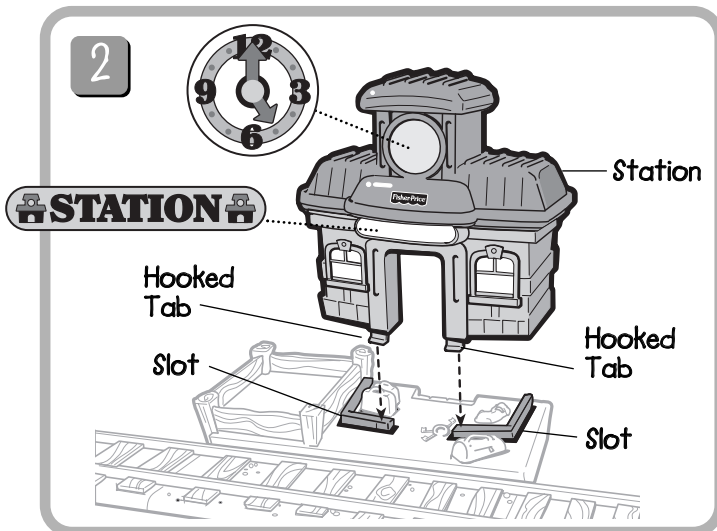

 
- Apply the labels to the station, as indicated in the illustration.
- Insert and **"snap"** the hooked tabs on the station into the slots in the track.

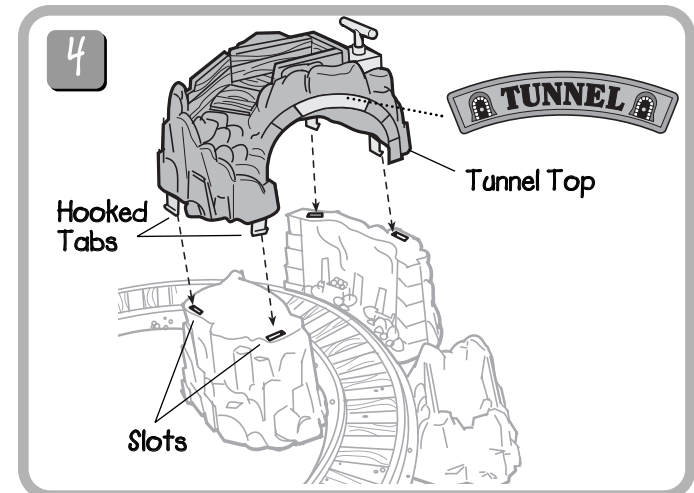

- Apply the label to the tunnel, as indicated in the illustration.
- Insert and **"snap"** the four hooked tabs on the tunnel top into the four slots in the tunnel track. Pull up on the tunnel top to be sure it is secure.

**Note:** This is a one-time assembly.

## Accessory Assembly


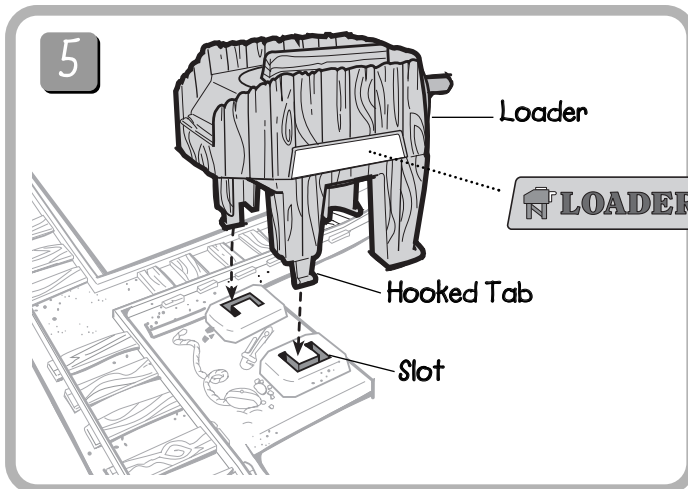 


- Apply the label to the loader, as indicated in the illustration.
- Insert and **“snap”** the two hooked tabs on the loader into the two slots in the track. Pull up on the loader to be sure it is secure.

chug chugga chug chug chug • toot toot • toot toot


## Ready when you are!

  **IMPORTANT!** For best performance, always point the microphone toward the engine. Make sure the microphone is no more than eight feet from the engine.

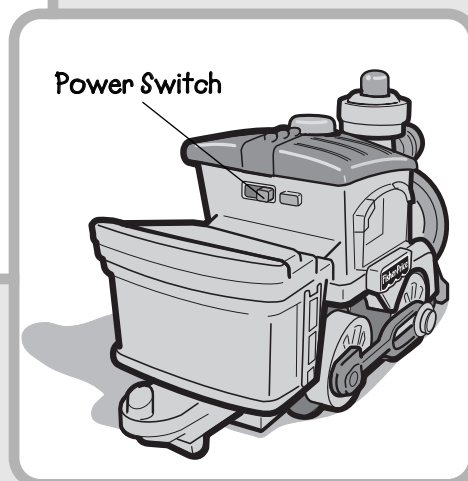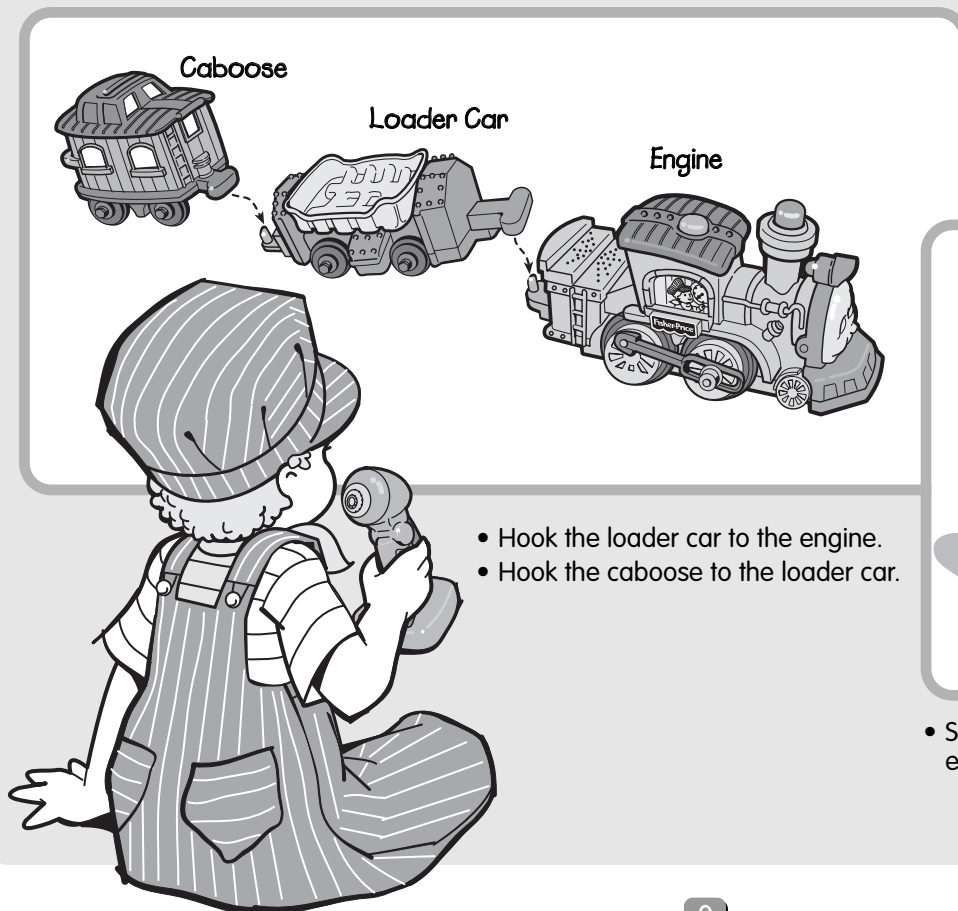

- Slide the power switch on the engine to the **“on”** position.

# All Aboard!

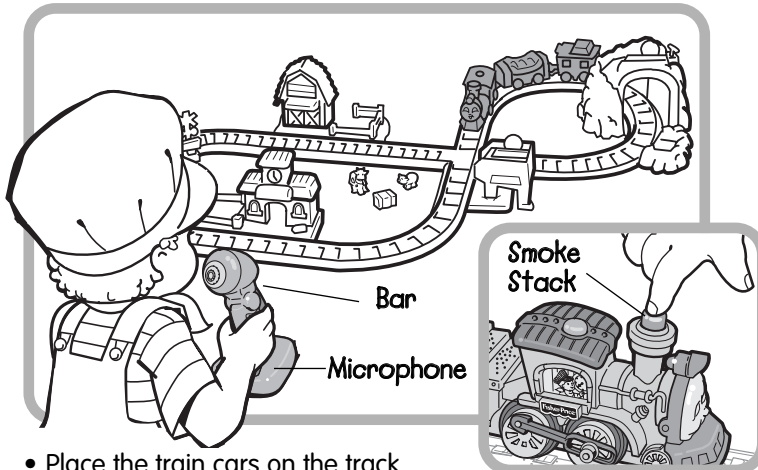 

- Place the train cars on the track.

**Hint:** You can also place the train cars off the track, on another hard, flat surface for more "off-road" fun!

 
- Press the smoke stack for ready mode. Toots the Train™ is waiting for your command!
- While pressing the bar on the microphone, tell Toots the Train™ to go. You say, "Go!"

**Hint:** If you do not tell the train to go, Toots the Train™ will remind you three times!

- Toots the Train™ will go around the track approximately three times and then stop.
- You can either:
  - Press the bar on the microphone and say, "Go!"
  - Or, press a destination on the microphone base. Then, press the bar on the microphone and say, "Go!"


**Hint:** If you do not tell the train to go after the last reminder, Toots the Train™ will automatically shut off after 30 seconds. To put Toots the Train™ back to ready mode, simply press the smoke stack again.

- To stop the train at any time, simply press the bar on the microphone and tell Toots the Train™ to stop. You say, "Stop!"
- To shut power completely off, slide the power switch on the engine to the "off" position.

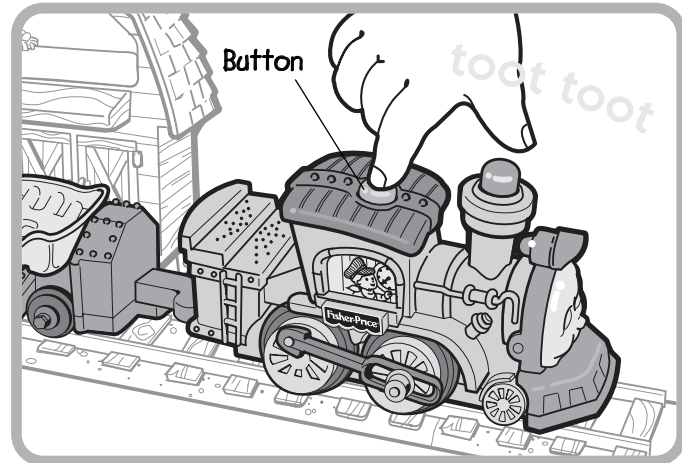

- Press the button on top of the engine for different sound effects or music – "Toot - Toot!"

 **Hint:** See pages 10 and 11 for some words to the music!

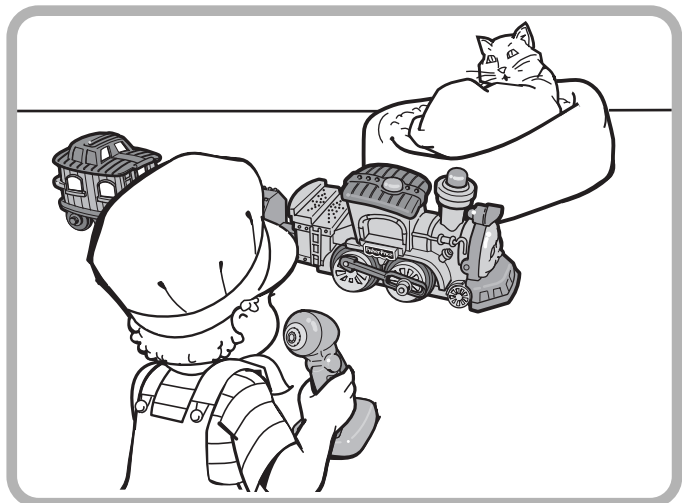

- For off-road fun, take Toots the Train™ off the track and place onto a hard, flat surface.


**Hint:** For best performance, do not use outdoors.

- Press the bar on the microphone and tell Toots the Train™ to go. You say, "Go!"

**Hint:** Toots the Train™ only moves straight ahead. There is no remote steering.


chugga chugga chugga • chugga chugga  
toot toot • toot toot toot toot • toot toot toot toot • toot toot to

## We're Going to the Station

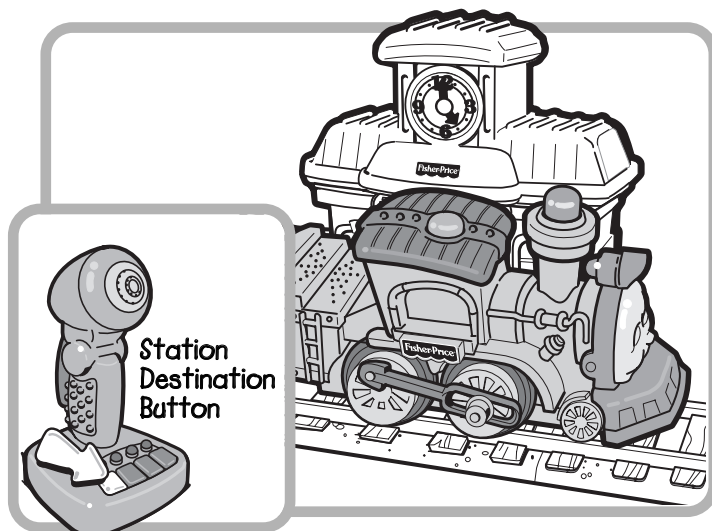 


- Press the Station destination button on the microphone base.
- While pressing the bar on the microphone, tell Toots the Train™ to go. You say, "Go!"

## Hello Tunnel

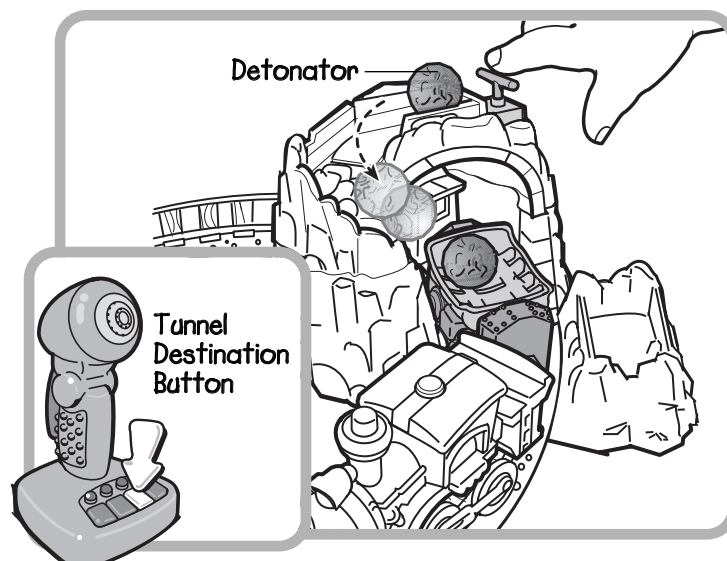 


- Press the Tunnel destination button on the microphone base.
- While pressing the bar on the microphone, tell Toots the Train™ to go. You say, "Go!"
- Place the coal boulder on top of the tunnel. Press the detonator to blast the boulder into the loader car.

## Yahoo - Lots to do at the Farm

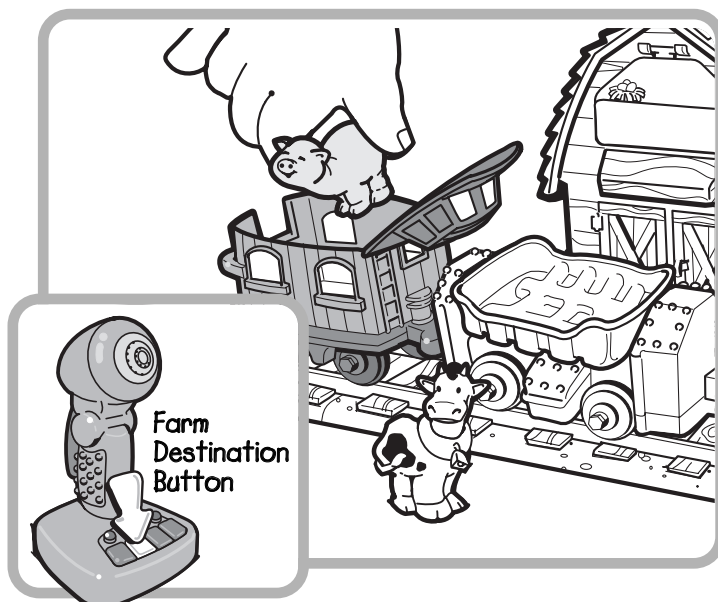 

- Press the Farm destination button on the microphone base.
- While pressing the bar on the microphone, tell Toots the Train™ to go. You say, "Go!"
- Place the pig or the cow in the caboose.

## Here's the Loader

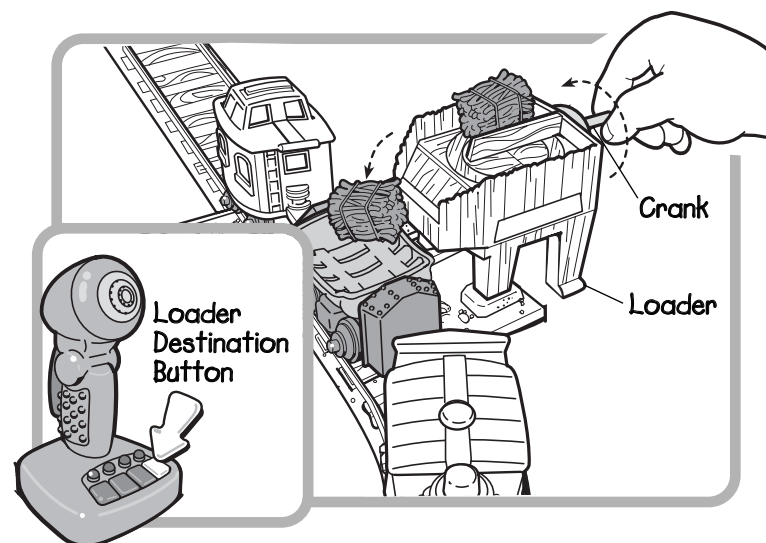 


- Press the Loader destination button on the microphone base.
- While pressing the bar on the microphone, tell Toots the Train™ to go. You say, "Go!"
- Place a bale of hay on top of the loader. Turn the crank on the side of the loader to drop the bale of hay into the loader car.

baaa baaa baaa • cluck cluck cluck cluck • moo o o moo moo o o • mo




# Storage, Care and Tips
 
## To disassemble the track pieces:

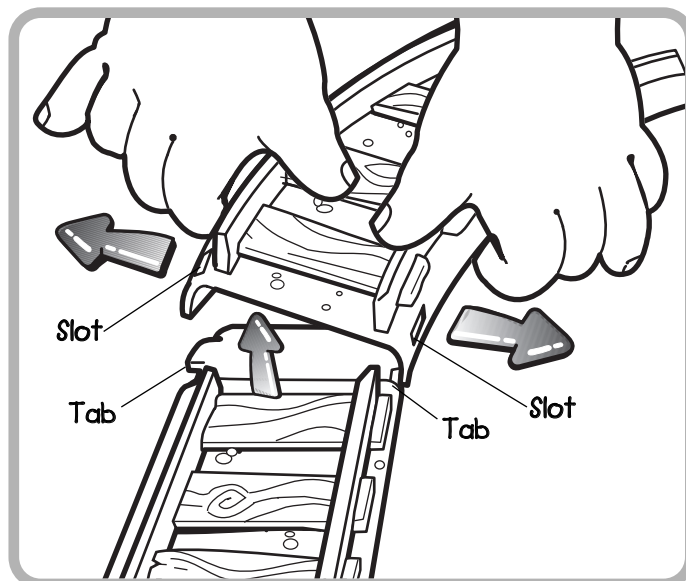


- Pull the edges of the track out near the slots/tabs.

## Storage:

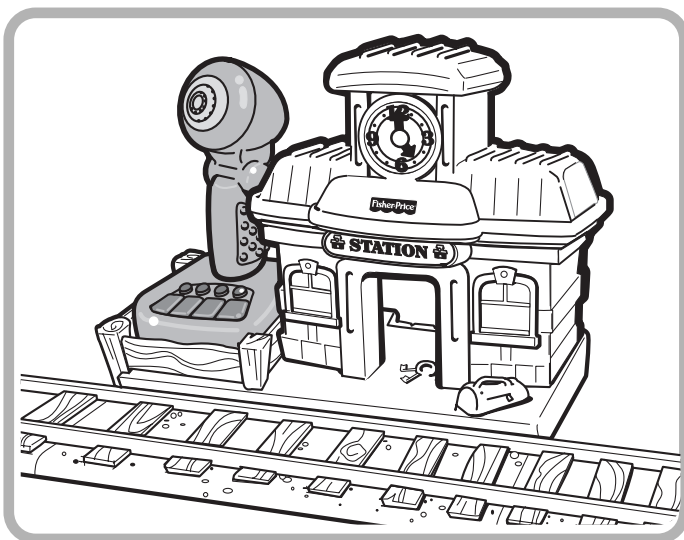 

- Fit the microphone into the Station track.
- For long-term storage, slide the power switch on the engine to the "off" position.

## Cleaning:

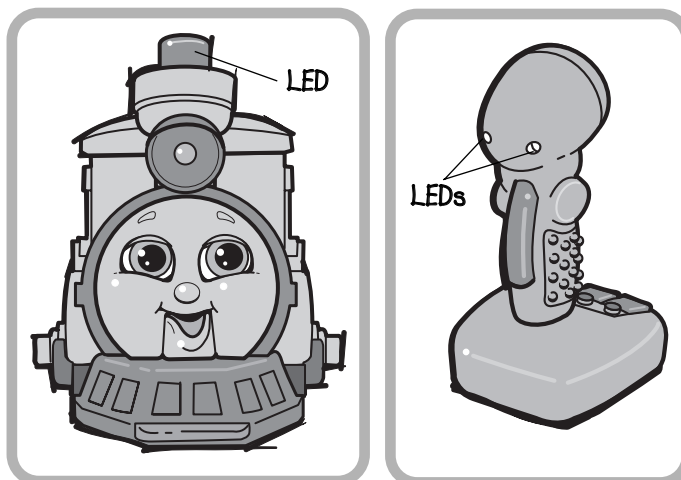 


**For best performance, we recommend that you periodically clean:**

- the front rubber wheels on the engine.
- the LEDs on the engine and microphone.
- each track piece.

Wipe this toy with a clean cloth dampened with a mild soap and water solution. Do not immerse this toy.

 
## Tips:

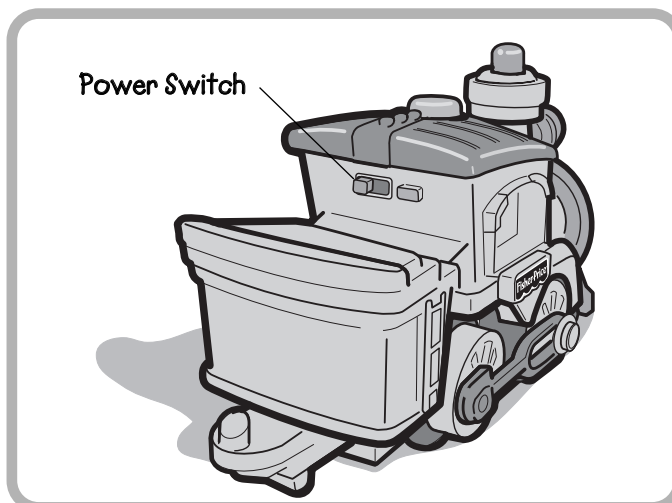

- If the train continues to run and does not respond to any commands, slide the power switch on the engine to the "off" position and then back to the "on" position. This will reset the electronic function of the train. If this problem continues, replace the batteries in both the microphone and the engine.
- This toy has no consumer serviceable parts. Do not take this toy apart.
- If movement, sound or lights become faint or stop, or if the train does not respond to a voice command, it's time for an adult to replace the batteries.

# Let's Listen and Sing Along

 Press the button on the engine to listen and sing along to a song!

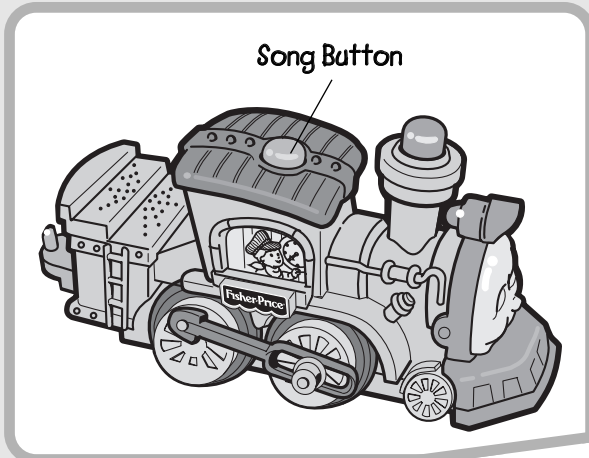


Song Button

## Old MacDonald

 Old MacDonald had a farm,  
Ee i ee i oh!  
And on his farm he had some cows,  
Ee i ee i oh!  
With a moo-moo here,  
And a moo-moo there  
Here a moo, there a moo,  
Everywhere a moo-moo  
Old MacDonald had a farm,  
Ee i ee i oh!

Old MacDonald had a farm,  
Ee i ee i oh!  
And on his farm he had some pigs,  
Ee i ee i oh!  
With an oink-oink here,  
And an oink-oink there  
Here an oink, there an oink,  
Everywhere an oink-oink  
Old MacDonald had a farm  
Ee i ee i oh!

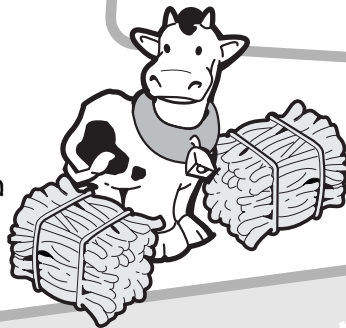

## I've Been Workin' on the Railroad

 
I've been workin' on the railroad,  
All the live long day.  
I've been workin' on the railroad,  
Just to pass the time away.  
Don't you hear the whistle blowing?  
Rise up so early in the morn.  
Don't you hear the captain shouting  
"Dinah, blow your horn?"

Dinah, won't you blow,  
Dinah, won't you blow,  
Dinah, won't you blow your horn?  
Dinah, won't you blow,  
Dinah, won't you blow,  
Dinah, won't you blow your horn?

Someone's in the kitchen with Dinah.  
Someone's in the kitchen, I know.  
Someone's in the kitchen with Dinah  
Strumming on the old banjo.

Fee, fie, fiddle-e-i-o.  
Fee, fie, fiddle-e-i-o-o-o-o-o.  
Fee, fie, fiddle-e-i-o.  
Strumming on the old banjo.

choo choo choo choo ch



# She'll Be Comin' 'Round the Mountain

She'll be coming 'round the mountain  
When she comes.

She'll be coming 'round the mountain  
When she comes.

She'll be coming 'round the mountain.

She'll be coming 'round the mountain.  
When she comes.

She'll be driving six white horses  
When she comes.

She'll be driving six white horses  
When she comes.

She'll be driving six white horses.  
She'll be driving six white horses.  
She'll be driving six white horses  
When she comes.

 
Oh, we'll all go out to meet her  
When she comes.

Oh, we'll all go out to meet her  
When she comes.


Oh, we'll all go out to meet her.  
We'll all go out to meet her.  
We'll all go out to meet her  
When she comes.

choo

choo choo choo choo

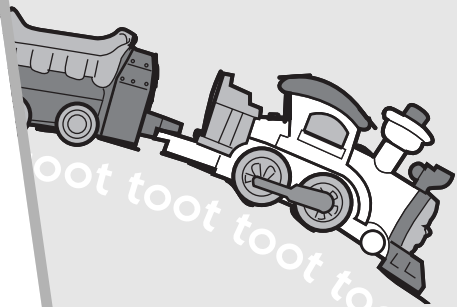

oot toot toot toot

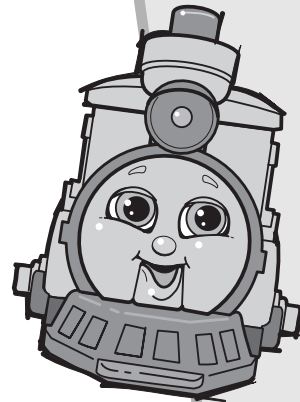 

choo choo choo

choo choo choo choo choo choo

# Consumer Information

## FCC Note (United States Only)

Toots the Train™

Model Number: 74878

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Toots the Train™

Consumer Relations Department

636 Girard Avenue

East Aurora, New York 14052

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

**CAUTION:** Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

## One (1) Year Limited Warranty

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, New York 14052 warrants Toots the Train™ is free from all defects in material and workmanship when used under normal conditions for a period of one (1) year from the date of purchase.

Should the product fail to perform properly, we will repair or replace it at our option, free of charge. Purchaser is responsible for shipping the product to Consumer Relations at the address indicated above and for all associated freight and insurance cost. Fisher-Price, Inc. will bear the cost of shipping the repaired or replaced item to you. This warranty is void if the owner repairs or modifies the product. This warranty excludes any liability other than that expressly stated above including but not limited to any incidental or consequential damages.

**SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.**

**THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH MAY VARY FROM STATE TO STATE.**



### Questions? We'd like to hear from you!

Call Fisher-Price® Consumer Relations, toll-free at **1-800-432-KIDS**, 8 AM - 6 PM EST Monday through Friday.

Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Or, write to: Fisher-Price®

Consumer Relations, 636 Girard Avenue, East Aurora, New York 14052.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>