

Fisher-Price®

Chatter Radio™

Instructions

Product Number: 72777




Please save these instructions for future reference.

Adult assembly is required to install batteries.

Tool needed to install batteries: Phillips Screwdriver

**This product requires three, size “AA”
batteries (included).**

Let's Listen and Sing-Along!

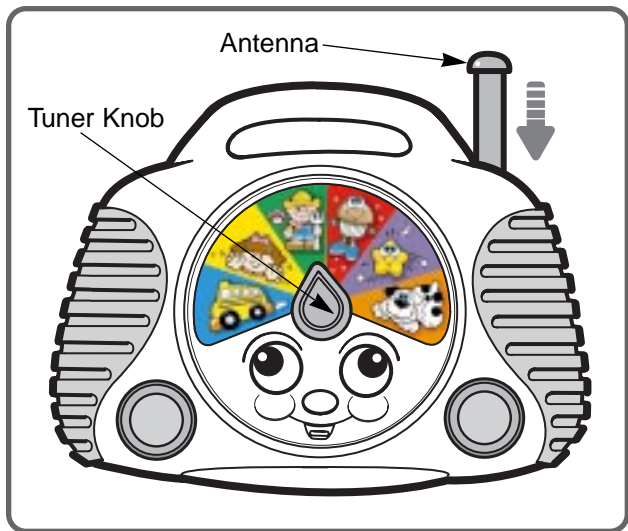

- Turn the tuner knob to select a tune.
- Press the antenna down to hear the tune. Watch the friendly face come to life!

Wheels on the Bus

The wheels on the bus go 'round and 'round.
'Round and 'round.
'Round and 'round.
The wheels on the bus go 'round and 'round.
All through the town.



If You're Happy and You Know It

If you're happy and you know it
Clap your hands.
If you're happy and you know it
Clap your hands.
If you're happy and you know it
And you really want to show it
If you're happy and you know it
Clap your hands.



Muffin Man

Oh, do you know the muffin man,
the muffin man, the muffin man?
Oh, do you know the muffin man
who lives in Drury Lane.



Old MacDonald

Old MacDonald had a farm.

E-I-E-I-O

And on that farm he had a pig.

E-I-E-I-O

With an oink, oink here,

And an oink, oink there,

Here an oink, there an oink, everywhere an oink, oink.

Old MacDonald had a farm.

E-I-E-I-O



Bingo Was His Name

Johnny had a little dog,

And Bingo was his name-o,

B-i-n-g-o

B-i-n-g-o

B-i-n-g-o

Bingo was his name-o.

Twinkle Twinkle

Twinkle, twinkle, little star

How I wonder what you are.

Up above the world so high

Like a diamond in the sky.

Twinkle, twinkle, little star

How I wonder what you are.




Fisher-Price, Inc., a subsidiary of Mattel, Inc., East Aurora, NY 14052 U.S.A.

©1999 Mattel, Inc. All Rights Reserved. © and ™ designate U.S. trademarks of Mattel, Inc.

Printed in Hong Kong

Battery Replacement

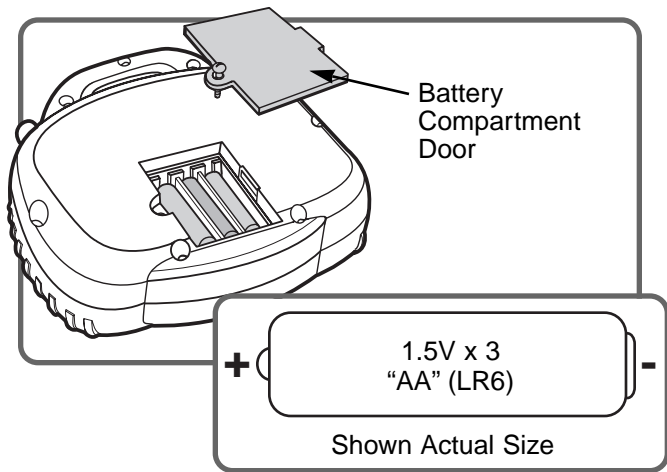

- Loosen the screw in the battery compartment door with a Phillips screwdriver.
- Lift to open the battery compartment door. Remove the dead batteries and dispose of them properly.
- Insert three, size "AA" (LR6) alkaline batteries as indicated inside the battery compartment.
- Replace the battery compartment door and tighten the screw with a Phillips screwdriver. Do not over-tighten.

Battery Tips

- Do not mix old and new batteries.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Remove the batteries during long periods of non-use. Always remove exhausted batteries from this toy. Battery leakage and corrosion can damage the toy.
- Never short circuit the battery terminals.
- Non-rechargeable batteries are not to be recharged.
- Only batteries of the same or equivalent type as recommended in the "Battery Replacement" instructions are to be used.
- If removable rechargeable batteries are used, they are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the toy before they are charged.
- If you use a battery charger, it should be examined regularly for damage to the cord, plug, enclosure and other parts. Do not use a damaged battery charger until it has been properly repaired.

Care

- Keep this toy free from dust. Clean this toy with a cloth lightly dampened with a mild cleaning solution. Do not immerse this toy.
- If sound from this toy becomes faint, or if there is no sound, remove the batteries and dispose of them properly. Replace the batteries with three, size “AA” (LR6) alkaline batteries.

FCC Note (United States Only)

Chatter Radio™

Model Number: 72777

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

Chatter Radio™

Fisher-Price, Inc.

Consumer Affairs Department

636 Girard Avenue

East Aurora, New York 14052

Consumer Information



Questions?

We'd like to hear from you!

Call Fisher-Price® Consumer Affairs, toll-free at **1-800-432-KIDS**, 8 AM - 5 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Or, write to: Fisher-Price® Consumer Affairs, 636 Girard Avenue, East Aurora, New York 14052.

If you have any questions about this product:

In Canada, call **1-800-567-7724**, or write to: Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2

In Great Britain, telephone 01628 500303.

In Australia, call the Consumer Advisory Service at 1-800-800-812 (valid only in Australia), or write to: Mattel Australia Pty., Ltd., 658 Church Street, Locked Bag #870, Richmond Victoria 3121 Australia.

www.fisher-price.com

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>