



G5912



Product features and decorations may vary from picture above.

WARNING

IMPORTANT! KEEP INSTRUCTIONS FOR FUTURE REFERENCE.

Please read these instructions before assembly and use of this product.

Adult assembly is required.

Tool needed for battery installation: Phillips Screwdriver (not included).

Requires four LR14 **alkaline** batteries for operation (not included).

Weight Limit: 9 kg (20 lbs).

www.fisher-price.com



WARNING

To prevent serious injury or death from falls and being strangled in the restraint system:

- Always use the restraint system.
- Not recommended for children who can sit up by themselves (6 months approximately, until 9 kg, 20 lbs).
- Never leave child unattended.
- It is dangerous to use this product on an elevated surface.



CAUTION

This package contains small parts in its unassembled state.
Adult assembly is required.

Mattel UK Ltd, Vanwall Business Park, Maidenhead SL6 4UB.
Helpline: 01628 500302.

AUSTRALIA

Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

 
 
 
 
 
 
NEW ZEALAND

16-18 William Pickering Drive, Albany 1331, Auckland.

ASIA

Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.

Parts

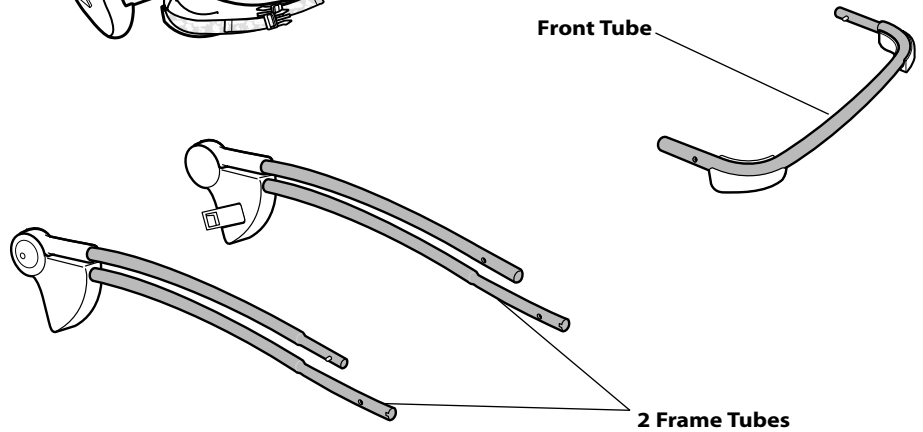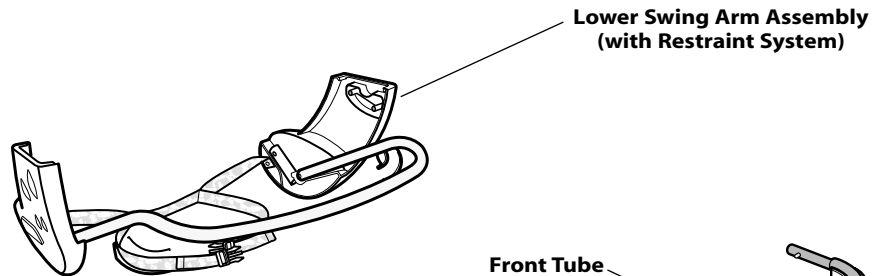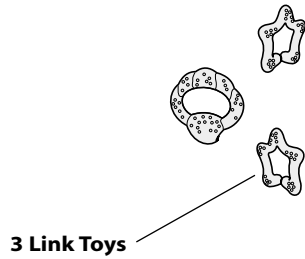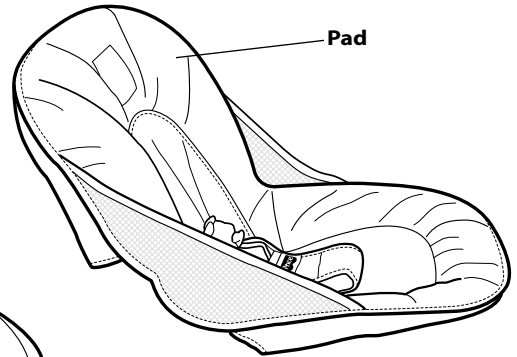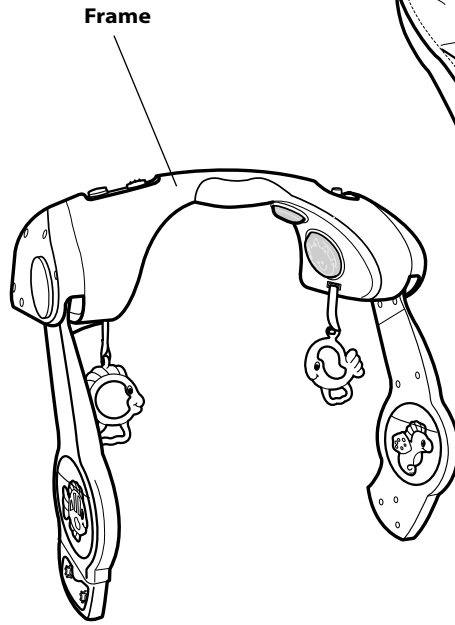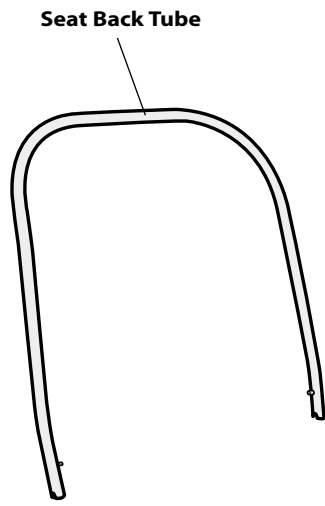

#6 x 1.9 cm Screws - 4

 


Shown Actual Size


NOTE: Tighten and loosen all screws with a Phillips screwdriver. Do not over-tighten the screws.

Assembly

IMPORTANT! Before assembly, inspect this product for damaged hardware, loose joints, missing parts or sharp edges. DO NOT use if any parts are missing or broken. Contact Mattel for replacement parts and instructions if needed. Never substitute parts.

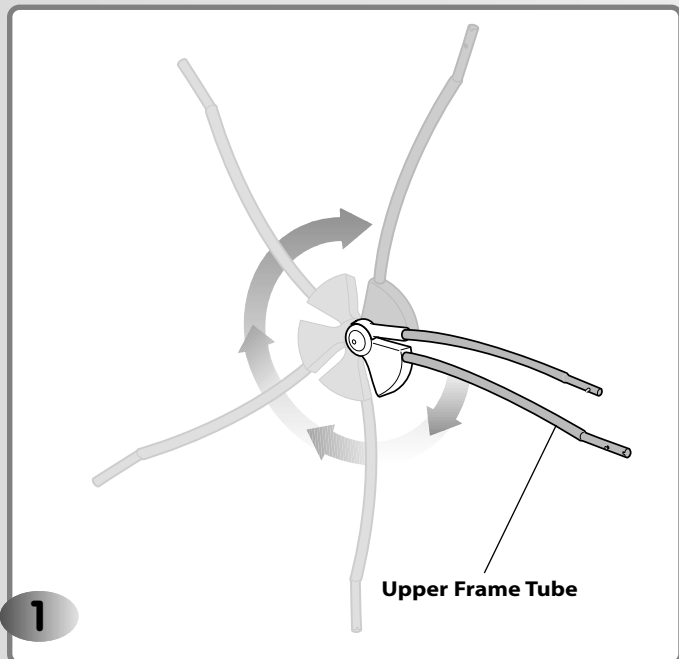


 - Rotate the upper frame tube until it **"snaps"** into an upright position, as shown.

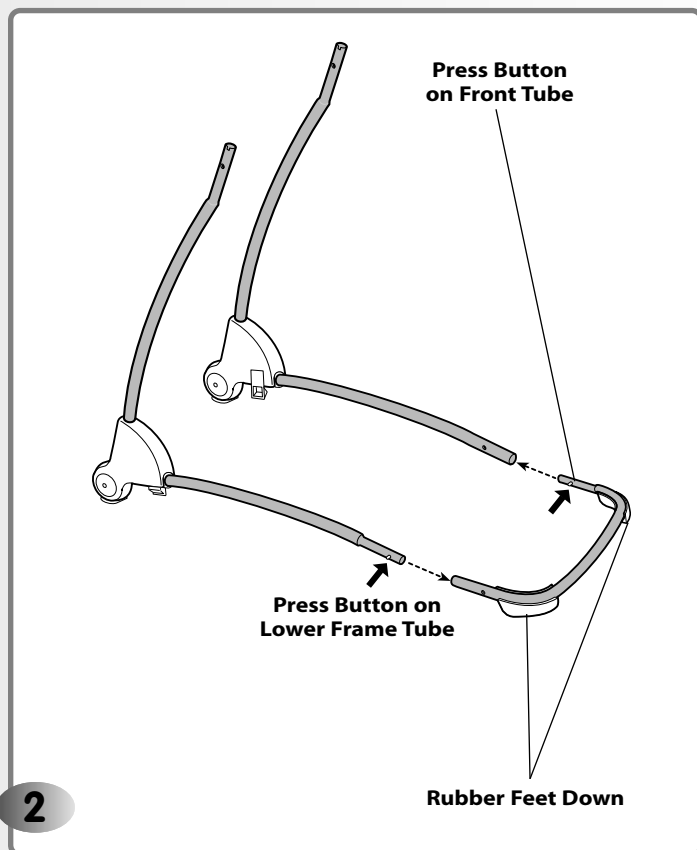


- Position the front tube so that the rubber feet are flat on the surface.
- While pressing the button on the lower frame tube, insert it into an end of the front tube. Continue to insert the lower frame tube into the front tube until you hear a **"click"**.
- While pressing the button on the front tube, insert it into the end of the lower frame tube. Continue to insert the front tube into the lower frame tube until you hear a **"click"**.

 Assembly

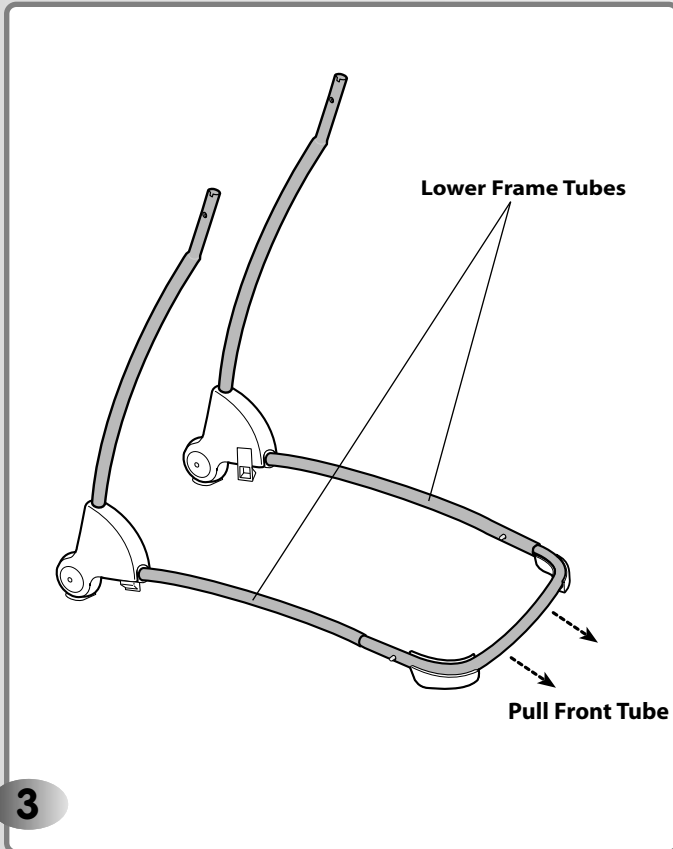

3

 
- Pull the front tube to be sure it is secure to each lower frame tube.

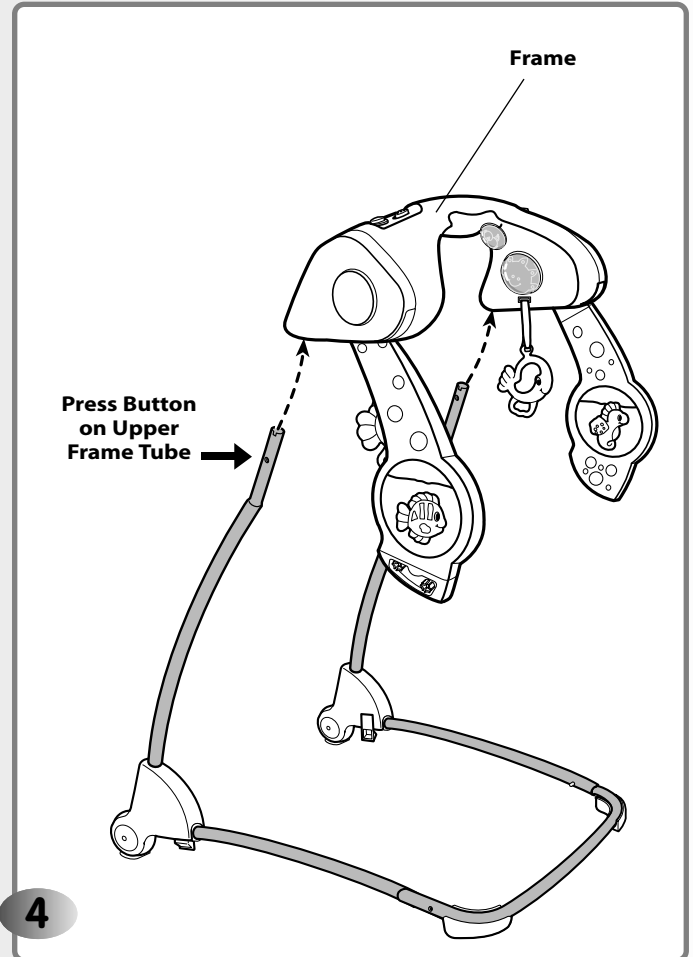


4

- While pressing the buttons on the upper frame tubes, insert them into the holes in the underside of the frame.
- Continue to insert the upper frame tubes into the frame until you hear a **"click"** on both sides.

 Assembly

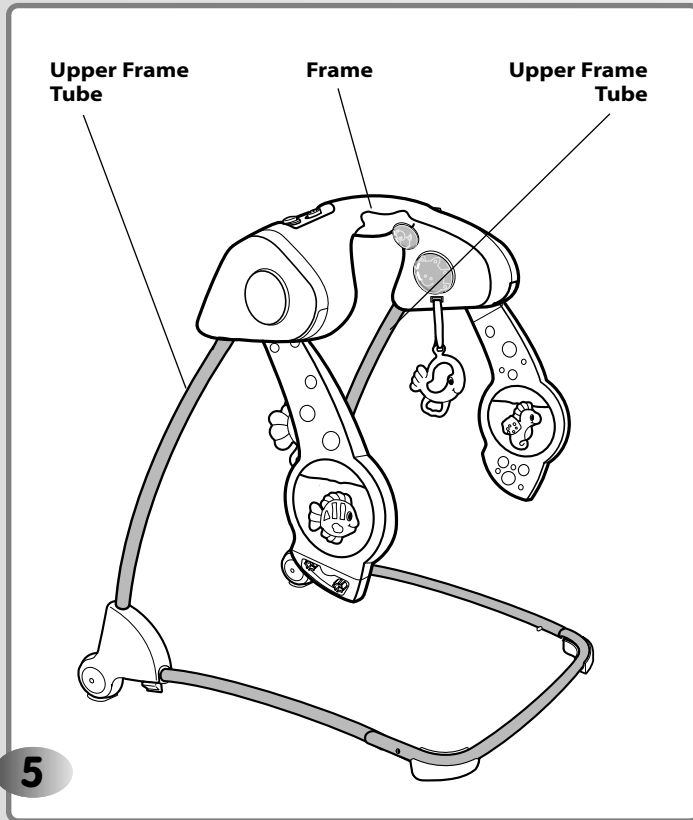


 - Check to be sure the upper frame tubes are secure in the frame. If you can remove the upper frame tubes from the frame, you have not properly inserted the tubes into the frame. Remove the upper frame tubes from the frame and repeat Assembly step 4.

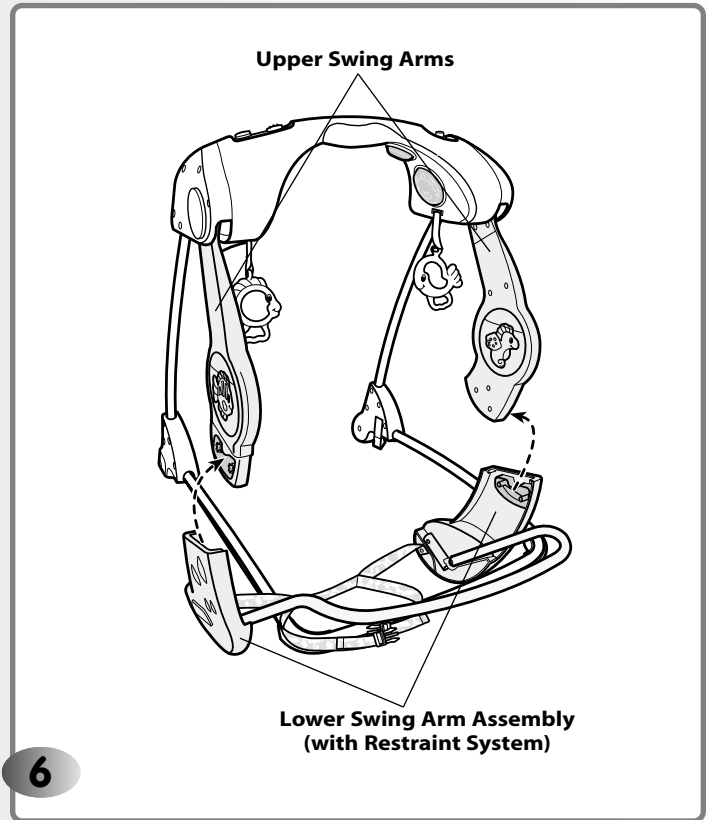


- Fit the lower swing arm assembly to the outer side of the upper swing arms.

 Assembly

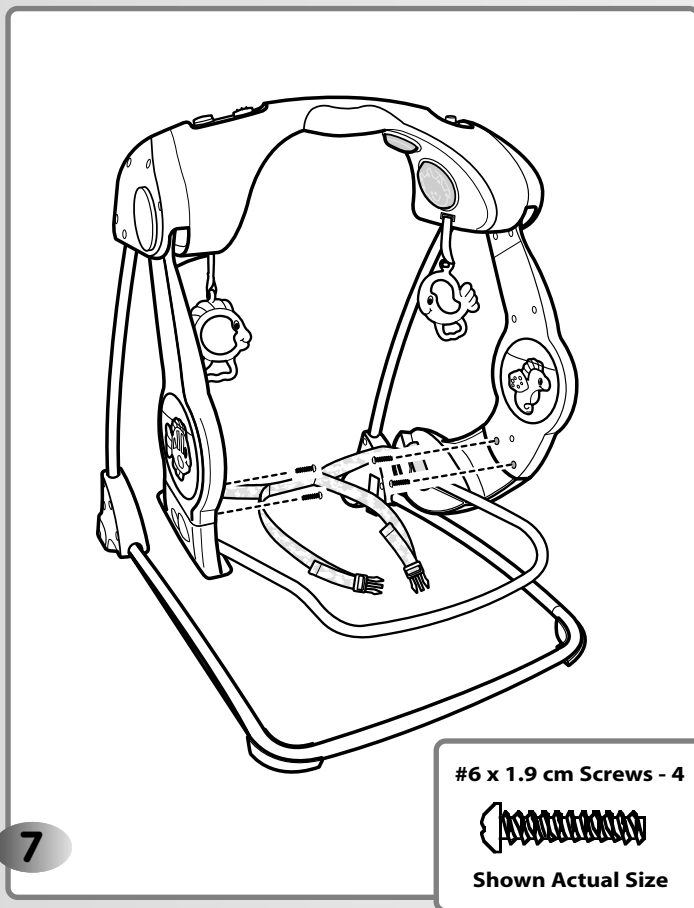


 - Insert two #6 x 1.9 cm screws through the upper swing arm and into the lower swing arm. Tighten the screws.

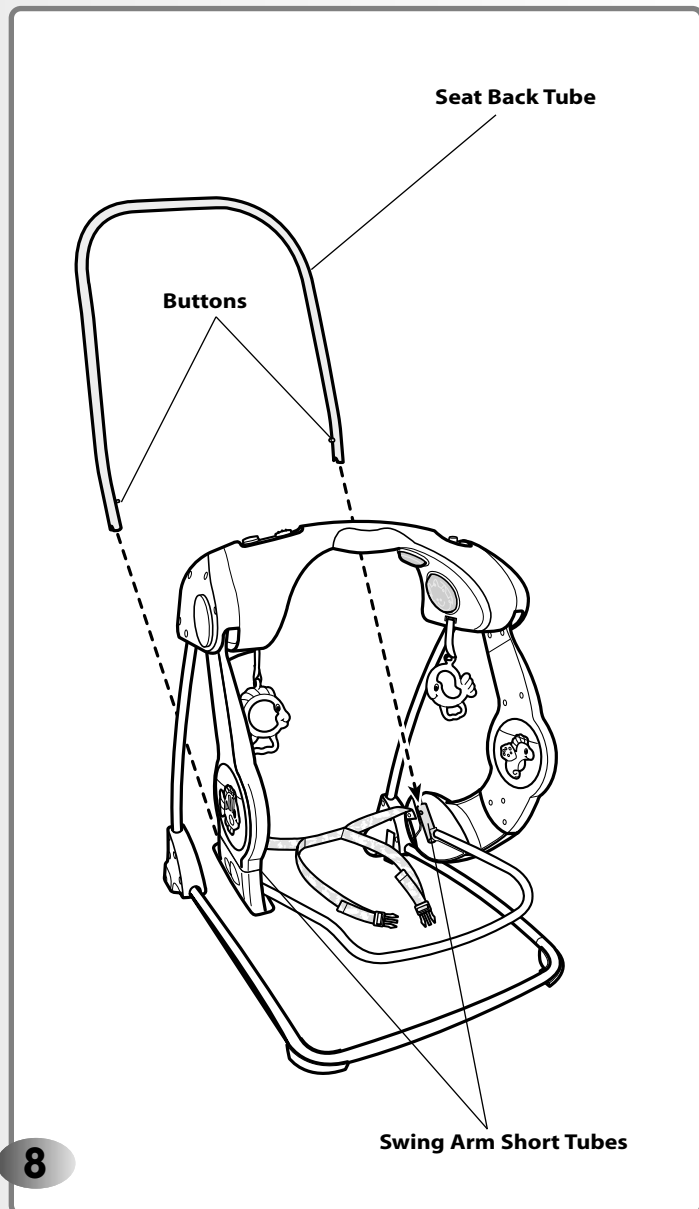


- Position the seat back tube so that it curves toward the back of the swing.
- While pressing the buttons on the seat back tube, fit the seat back tube into the short tubes on the swing arms.
- Push the seat back tube until it **"clicks"** into place.
- Pull up on the seat back tube to be sure it is secure to the swing arms.

 Assembly

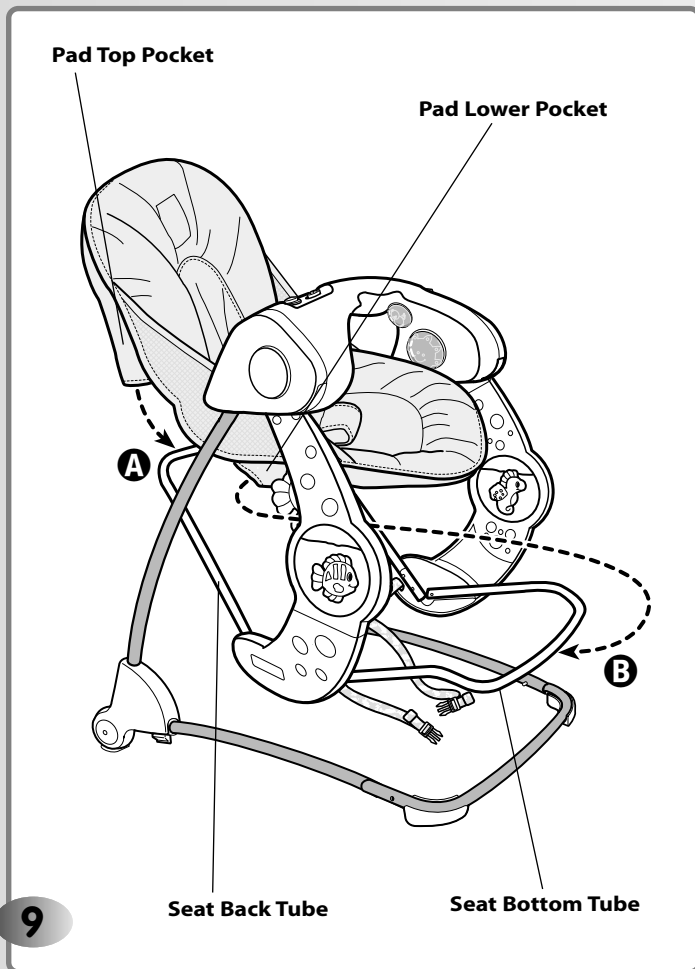

 - Fit the top pocket on the pad over the seat back tube **A**.
- Lift the seat bottom tube and fit the lower pocket on the pad over the seat bottom tube **B**.

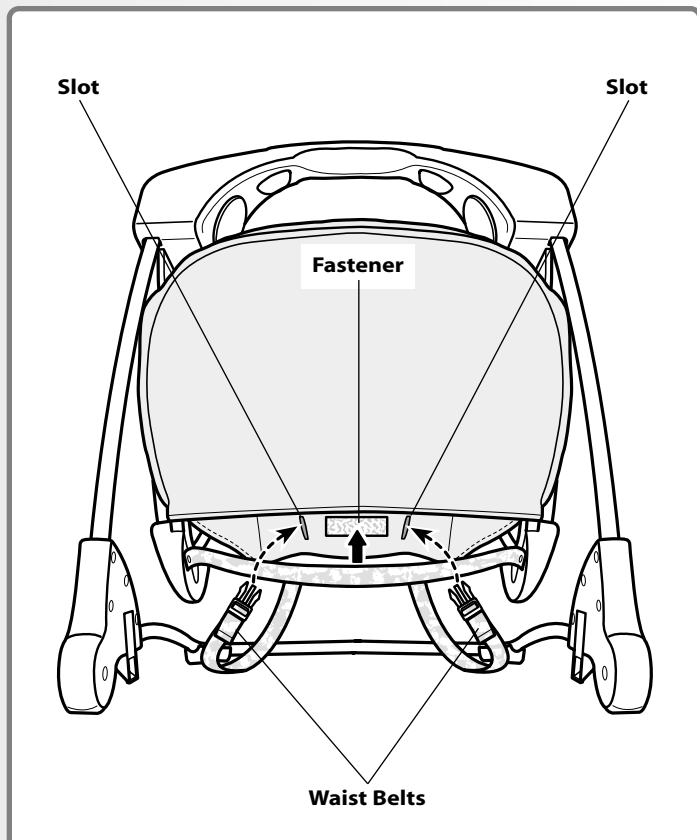


- From behind the seat, insert the waist belts into the slots in the pad.
- Push to fasten the restraint system to the pad.


Assembly is now complete.

Battery Installation

 Hint: We recommend using **alkaline** batteries for longer battery life.

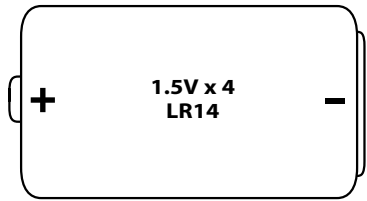


SHOWN ACTUAL SIZE

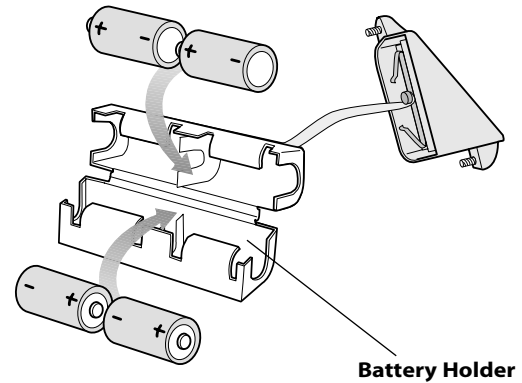 

2


- Open the battery holder.
- Insert four LR14 **alkaline** batteries as indicated inside the battery holder.
- Close the battery holder.

 Battery Compartment Door

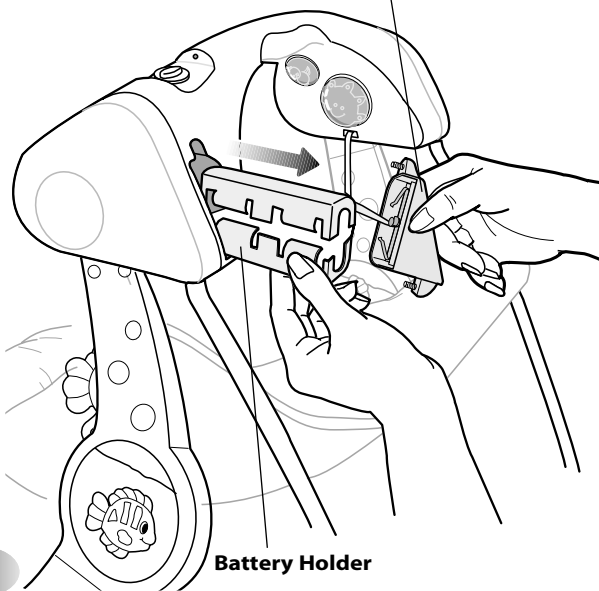

1

 - Locate the battery compartment door on the frame.
- Loosen the screws in the battery compartment door.
- Remove the battery compartment door and the battery holder from the battery compartment.

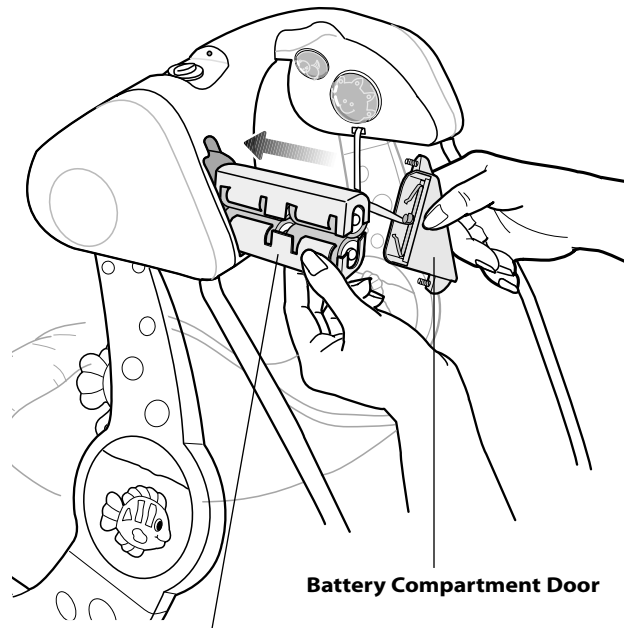

3

- Align the ridge on the battery holder with the groove in the battery compartment.
- Slide the battery holder back into the battery compartment.
- Replace the battery compartment door and tighten the screws.

Battery Safety Information

Batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of batteries in a fire. The batteries may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removeable, rechargeable batteries are used, they are only to be charged under adult supervision.

Set-Up & Use

WARNING

To prevent serious injury or death from falls and being strangled in the restraint system:

 
- Always use the restraint system.
- Not recommended for children who can sit up by themselves (6 months approximately, until 9 kg, 20 lbs).
- Never leave child unattended.
- It is dangerous to use this product on an elevated surface.

IMPORTANT! Before each use, inspect this product for damaged hardware, loose joints, missing parts or sharp edges. DO NOT use if any parts are missing or broken. Contact Mattel for replacement parts and instructions if needed. Never substitute parts.

Securing Your Child



- Place your child in the seat. Position the crotch belt between your child's legs.
- Fasten the waist belts to the crotch belt. **Make sure you hear a "click" on both sides.**
- Check to be sure the restraint system is securely attached by pulling it away from your child. The restraint system should remain attached.

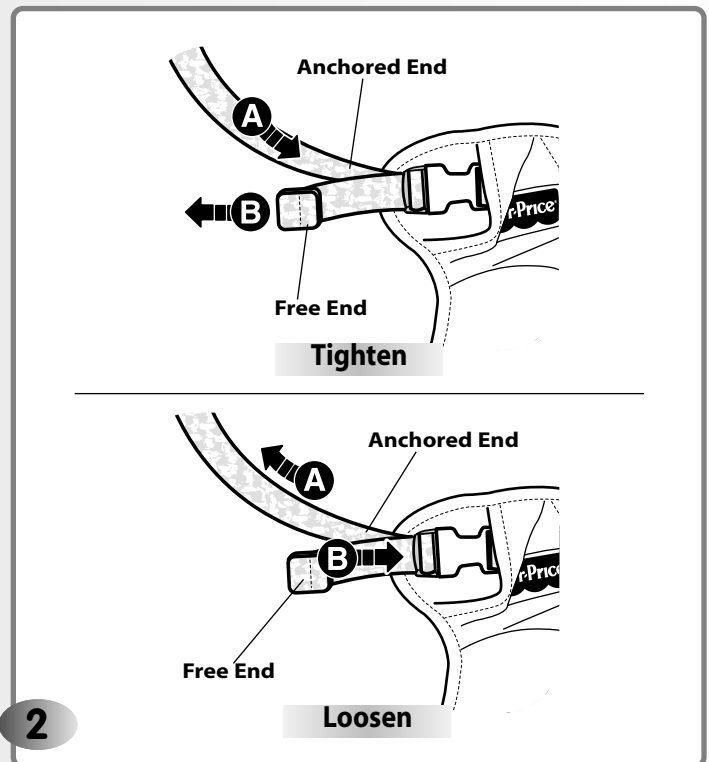

To tighten the restraint straps:

 
 
- Feed the anchored end of the restraint strap up through the buckle to form a loop **A**. Pull the free end of the restraint strap **B**.


To loosen the restraint straps:

- Feed the free end of the restraint strap up through the buckle to form a loop **A**. Enlarge the loop by pulling on the end of the loop toward the buckle. Pull the anchored end of the restraint strap to shorten the free end of the restraint strap **B**.

Set-Up & Use

Starting the Swing

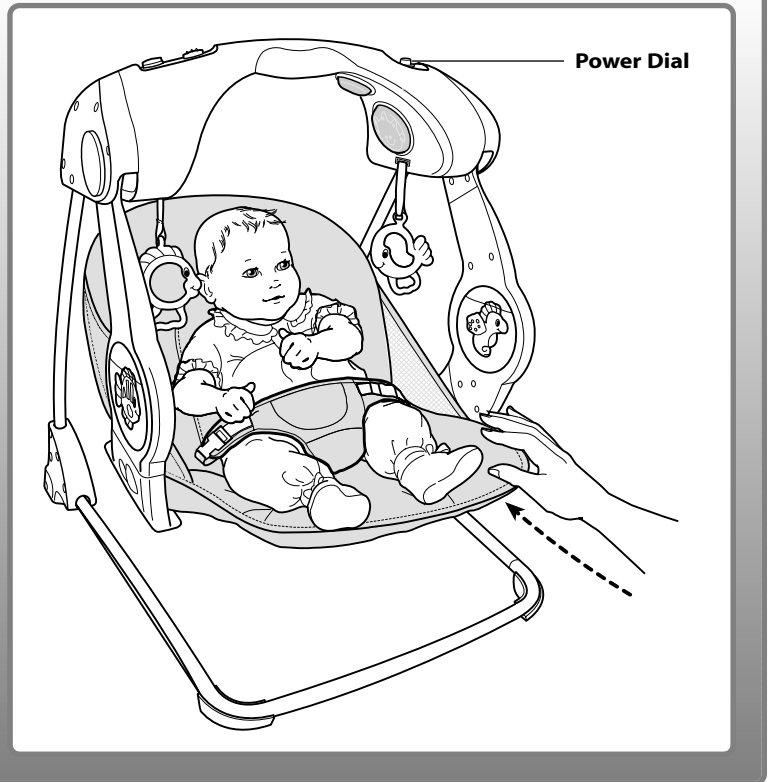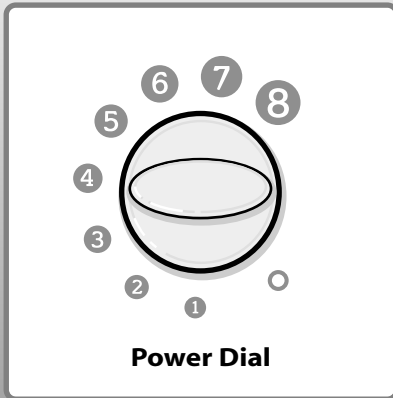

- Turn the power dial to any of eight settings.
 - Give the seat a light push to start the swinging motion. Adjust the swing power dial to the desired swing motion setting.
- Hint:** As with most battery-powered swings, a heavier child will reduce the amount of swinging motion on all settings. In most cases, the low setting works best for a smaller child while the high setting works best for a larger child.
- If swinging stops while using a lower setting, try a higher setting. Give the seat a light push to start the swinging motion again.
 - Be sure to turn this product off when not in use. Turn the power dial to the off setting .

Set-Up & Use

Hint: Your baby can enjoy lights and music with or without swinging.

Baby Activated



Parent Activated



Lights and Music Switch







Volume Dial



Lights and Music Switch

 
- Slide the lights and music switch to:

-  When baby pulls either toy on the arch, one tune plays along with twinkling lights.
-  On this setting, six tunes (approximately 10 minutes) play along with dancing lights.
-  On this setting, music plays for about 10 minutes.
-  Turns lights and music off.

- Turn the volume dial to a comfortable listening level.

IMPORTANT! Low battery power may cause this product to operate erratically (no sounds/movement) and the product may not turn off. Remove and throw away all four batteries and replace with four, new LR14 **alkaline** batteries.

Set-Up & Use

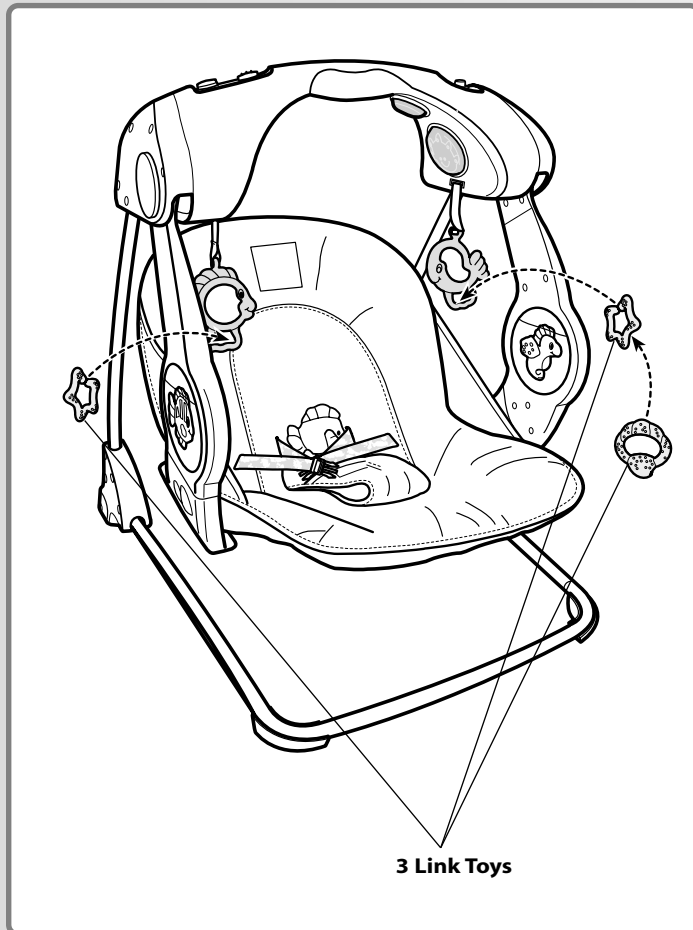


3 Link Toys

- Fit the link toys to either of the hanging toys on the swing.

Room-to-Room Portability


⚠ WARNING

 - To prevent serious injury or death from falls and being strangled in the restraint system, always use the restraint system.
- It is dangerous to use this product on an elevated surface.

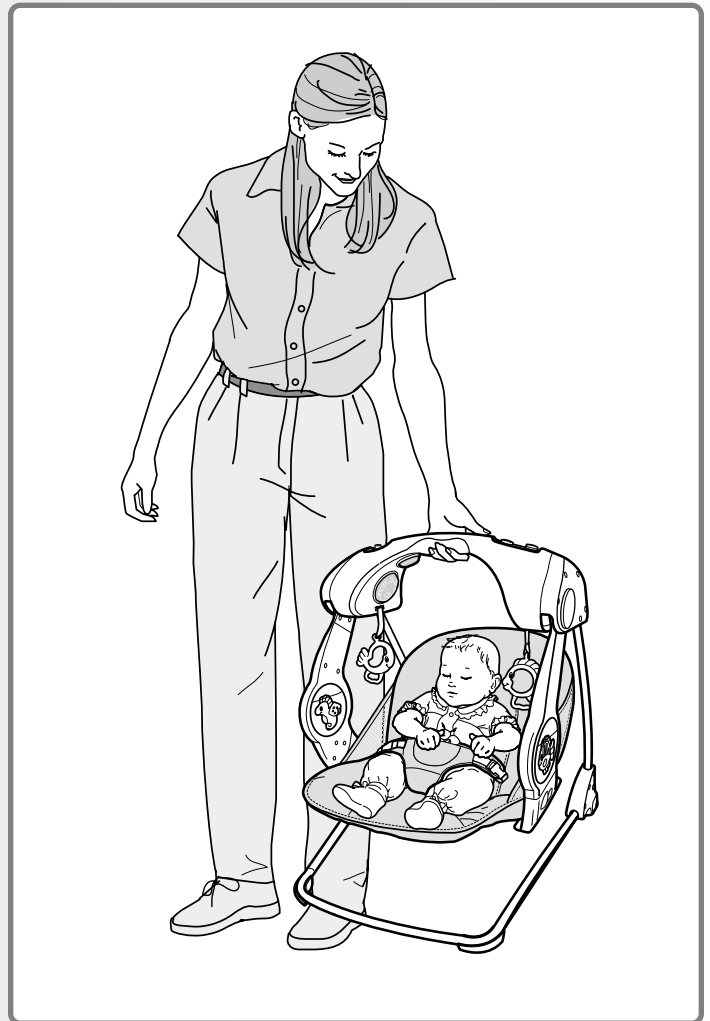


- Make sure your child is properly secured in the swing seat.
- With baby facing forward and outward, lift the swing using the handle.
- Carefully carry the swing to another room. Be sure to set the swing down on a **non-elevated, flat surface**.

 Take Along

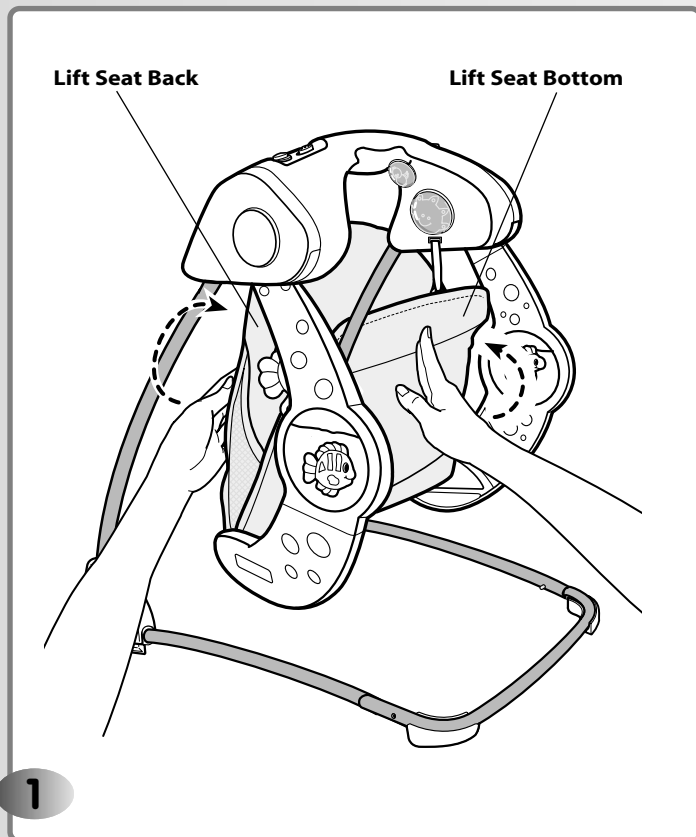

 
- Lift the seat back and seat bottom together.

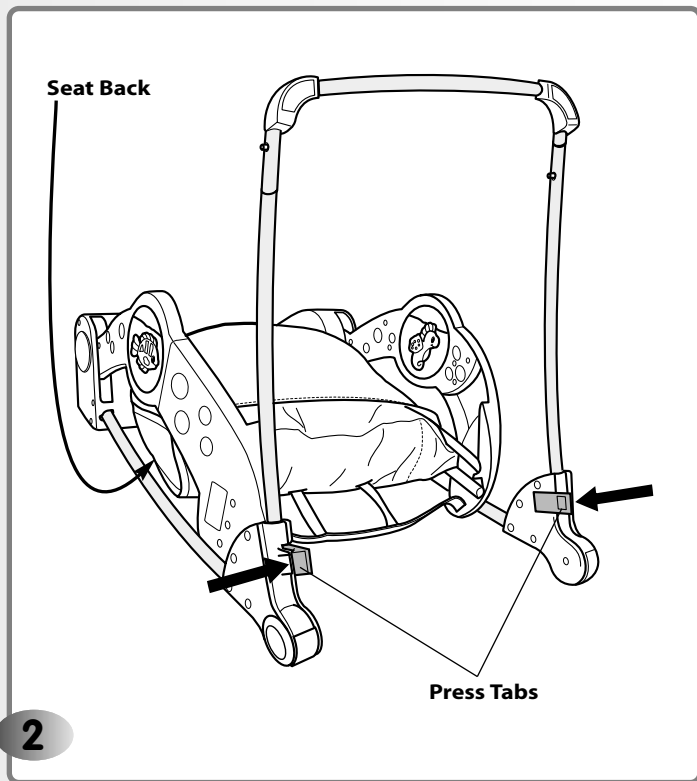

- Tip the swing backwards with the seat back down.
- Press both tabs on the frame at the same time to release the frame base.

Take Along

 Care

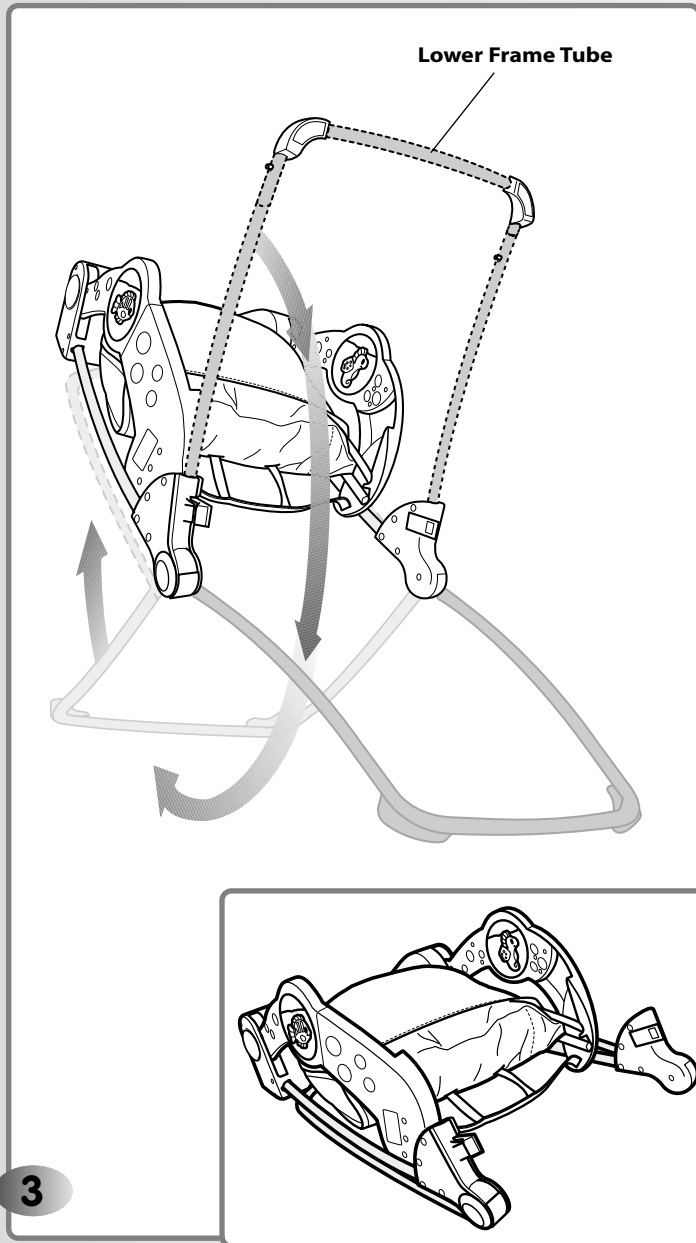

- The frame, pad, liner and toys may be wiped clean using a mild cleaning solution and a damp cloth. Do not immerse the frame.
- This product has no consumer serviceable parts. Do not take this product apart.

IMPORTANT! Never use this product without the provided pad.

- Rotate the lower frame tube around to the top of frame, as shown.

To set the swing back up for use:

- Rotate the lower frame tube around until it snaps into place.
- Place the swing on a non-elevated, flat surface.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>