

Fisher-Price®

● L E A R N I N G ▲ P A T T E R N S ™

Musical Monkey Clutch Ball™

Product Number: B0005



Please keep this instruction sheet for future reference, as it contains important information.

Requires three **alkaline** button cell batteries (LR44) for operation (included).

Adult assembly is required for battery replacement.

Tool required for battery replacement:
Phillips screwdriver (not included).

Discover what's possible™...www.fisher-price.com

Before Use



CAUTION

Please keep small parts
such as plastic tabs
out of children's reach.
Throw the plastic tab away.

Note: A plastic tab is attached to this toy for in-store demonstration purposes.

While the tab may have already been removed, check the bottom of the toy to be sure. If the plastic tab is still attached, pull and remove the tab from the toy. Throw the plastic tab away.

Battery Replacement



1.5V x 3
LR44 or Equivalent
Shown Actual Size

Fisher-Price, Inc., a subsidiary of Mattel, Inc.,
East Aurora, NY 14052 U.S.A.

 
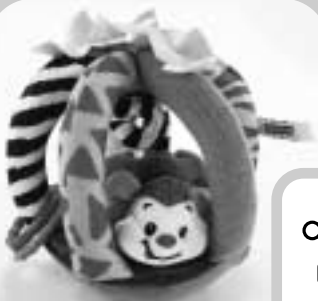 
©2002 Mattel, Inc. All Rights Reserved.

® and ™ designate U.S. trademarks of Mattel, Inc.




Printed in China

B0005pr-0920


Fun Music and Sound Effects



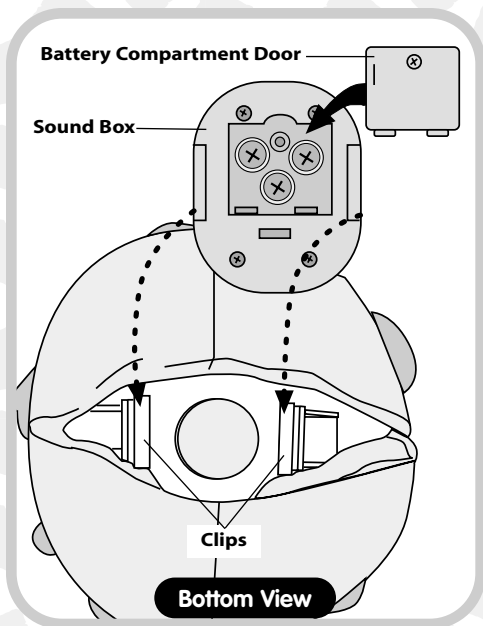 
Power/Volume Switch

- Open the fasteners on the bottom of the toy. Locate the power/volume switch on the sound box.
- The switch has three positions: off  ; on with low volume  and on with high volume  .
- Close the fasteners on the bottom of the toy.
- Shake the ball for music and sound effects.

Hint: *If your child is not actively playing with this toy, it turns off automatically (sleep mode).*

- Slide the power/volume switch to the off position  when not in use.

Battery Replacement



- Open the fasteners on the bottom of the toy.
- Remove the sound box from the clips inside the toy.
- Loosen the screw in the battery compartment door with a Phillips screwdriver. Remove the battery compartment door.
- Insert three alkaline "button cell" batteries (LR44 or equivalent) as indicated inside the battery compartment.

Hint: We recommend using **alkaline** batteries for longer life.

- Close the battery compartment door and tighten the screw with a Phillips screwdriver. Do not over-tighten.
- Fit the sound box back between the clips.
- Close the fasteners on the toy.

Battery Tips

- Do not mix old and new batteries.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Remove the batteries during long periods of non-use. Always remove exhausted batteries from the toy. Battery leakage and corrosion can damage this toy. Dispose of batteries safely.
- Do not dispose of batteries in a fire. The batteries may explode or leak.
- Never short circuit the battery terminals.
- Non-rechargeable batteries are not to be recharged.
- Only batteries of the same or equivalent type as recommended in the "Battery Replacement" instructions are to be used.
- If removable rechargeable batteries are used, they are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the toy before they are charged.
- If you use a battery charger, it should be examined regularly for damage to the cord, plug, enclosure and other parts. Do not use a damaged battery charger until it has been properly repaired.
- When sounds from this toy become faint or stop, it's time for an adult to change the batteries!

Care

- Open the fasteners on the bottom of the toy and remove the sound box from the clips inside the toy.
- Machine wash the toy in cold water on a gentle cycle. Do not use bleach. Line dry the toy.
- Fit the sound box back between the tabs and close the fasteners on the toy.
- Do not immerse the sound box.

Consumer Information

Questions? We'd like to hear from you!

Call Fisher-Price® Consumer Relations,
toll-free at **1-800-432-KIDS**,
8 AM - 6 PM EST Monday through Friday.
Hearing-impaired consumers using TTY/TDD
equipment, please call 1-800-382-7470.

Or, write to:
Fisher-Price® Consumer Relations
636 Girard Avenue
East Aurora, New York 14052

FCC Note (United States Only)

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

For other countries, outside the United States:

Canada: call **1-800-567-7724**, or write to: Mattel Canada Inc.,
6155 Freemont Blvd., Mississauga, Ontario L5R 3W2.

Great Britain: telephone 01628 500302.

Australia: Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag
#870, Richmond, Victoria 3121 Australia. Consumer Advisory Service
1300 135 312.

New Zealand: 16-18 William Pickering Drive, Albany 1331, Auckland.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>