 
 


Stretch your mind with
other software titles for your Smart Cycle®!

Each sold separately and subject to availability.

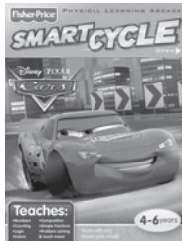

© 2010 Viacom International Inc. All Rights Reserved. Nickelodeon, SpongeBob SquarePants and all related titles, logos and characters are trademarks of Viacom International Inc. Created by Stephen Hillenburg.

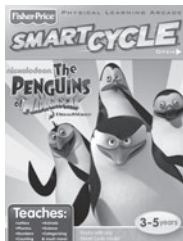

DC SUPER FRIENDS and all related characters and elements are trademarks of and © DC Comics.



WB SHIELD: TM & © Warner Bros. Entertainment Inc. (s10)

© 2010 Viacom International Inc. Madagascar® DWA L.L.C. All Rights Reserved.

Disney • Pixar elements © 2010 Disney • Pixar

Fisher-Price, Inc., a subsidiary of Mattel, Inc., East Aurora, NY 14052 U.S.A. ©2010 Mattel, Inc. All Rights Reserved. ®and™ designate U.S. trademarks of Mattel, Inc., unless otherwise indicated.

www.fisher-price.com

PRINTED IN CHINA

Download from Www.Somanuals.com. T3856pr-0920. All Manuals Search And Download.

Fisher-Price®

T3856

SMART CYCLE
RACER

PHYSICAL LEARNING ARCADE SYSTEM



NOTICE ABOUT EPILEPSY AND SEIZURES

PLEASE READ THIS NOTICE BEFORE YOU OR YOUR CHILD USE ANY VIDEO GAME.

A very small portion of the population have a condition which may cause a momentary loss of consciousness when viewing certain kinds of flashing lights or patterns that are commonly present in our daily environment. This condition may cause seizures while watching some kinds of television pictures or playing certain video games. Players who have not had any previous seizures may nonetheless have an undetected epileptic condition.

 
If you or anyone in your family has experienced symptoms linked to an epileptic condition (e.g. a seizure or loss of awareness), consult your physician before playing video games. We recommend that parents observe their children while they play video games. If you or your child experience any of the following symptoms such as dizziness, altered vision, eye or muscle twitching, involuntary movements, loss of awareness, disorientation or convulsions, DISCONTINUE USE IMMEDIATELY and consult your physician.

Additionally, please follow these precautions whenever playing a video game:

- Do not sit or stand too close to the television screen. Play as far back from the screen as possible.
- Do not play if you are tired or need sleep.
- Always play in a well lit room.
- Be sure to take a 10-15 minute break every hour while playing.

GETTING STARTED


- Please keep these instructions for future reference, as they contain important information.

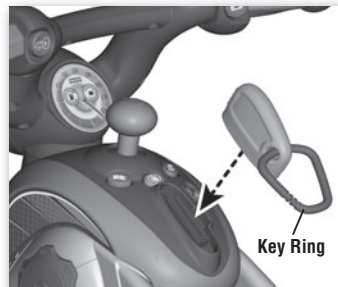

- Insert the game cartridge into the socket on top of the cycle console. Push to be sure it's fully inserted.
- Turn your TV or DVD player/VCR power **ON**.
- Slide the power switch on the cycle to **ON I**.
- To find the picture on your TV screen, set your TV's or DVD player/VCR's mode selector to INPUT or VIDEO IN.

Note: You can use this Smart Cycle® software with any Smart Cycle® model.

 CYCLE CONTROLS

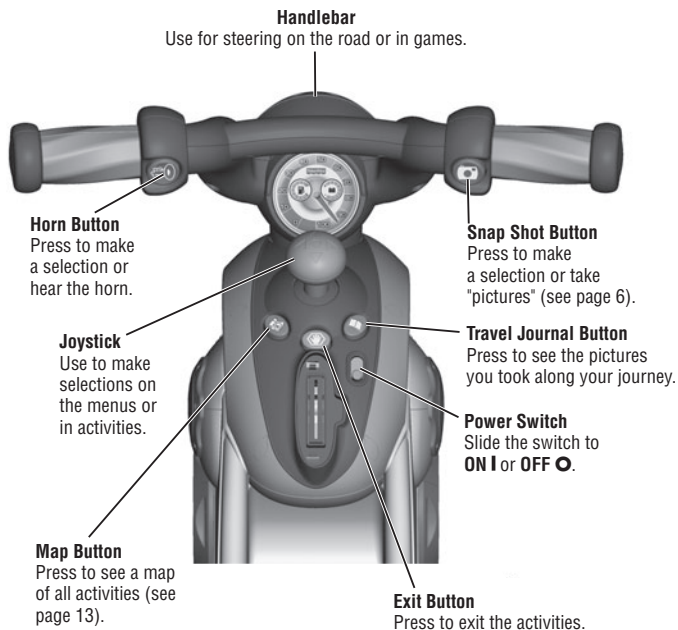


CHOOSE A RIDE



Choose a way to ride!

- Use the joystick to scroll through choices.
- Press either handlebar button to make your selection.
- Repeat this process to choose a color and horn sound.

 BACK TO THE ROAD

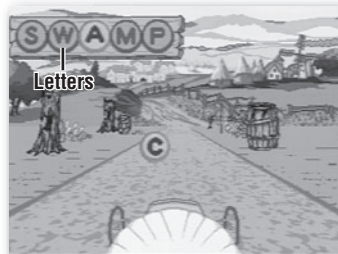

Find the letters!

 
- Pedal the cycle to drive down the road. *The faster you pedal the faster you go!*
- Use the handlebar to steer.
- Collect the letters shown in the upper left corner of the screen to spell Shrek's favorite words! Simply drive into them. Don't bump into the other objects.



Taking Snap Shots.

- Press the right handlebar button  to take snap shots.

Hint: You can only take snap shots in this activity.

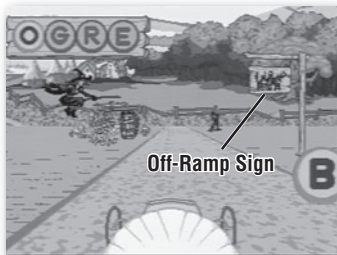

Off ramps

- Keep traveling down the road or head towards an off-ramp sign for other fun games and activities. Simply bear towards the sign as you see one approaching.

Hint: If you miss your sign, you can pedal in reverse to back up.




OGRE MIX UP



Get the ogre army in line!

 
- Listen to the order Shrek wants the ogres to line up in - smallest to largest, tallest to shortest, by the numbers on their shields, etc.
- Use the joystick to scroll through the ogres. Then, press a red handlebar button to select the ogre.




- After selecting the ogre, use the joystick again to select a place in line. Then, press a red handlebar button to move the ogre into line.
- Repeat this procedure to line up all of the ogres.
- When you're finished with this activity, press the exit button  to return to the road. Pedal to the next activity.



FOREST FLIGHT

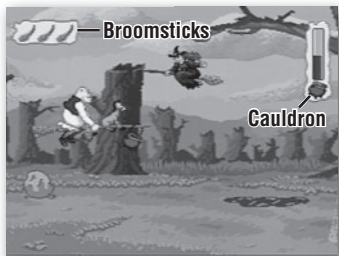

- Don't get hit by a witch or you will lose a broomstick.
- When you're finished with this activity, press the exit button  to return to the road. Pedal to the next activity.

Help Shrek and Donkey fill the cauldron and get to the castle!

- Use the joystick to move Shrek and Donkey through the forest.
- Push the joystick down to lower Shrek and Donkey to the ground and collect mud in their cauldron.

Level 1 - Collect mud from two puddles to fill the cauldron.

Level 2 - Collect mud from three puddles to fill the cauldron.


Level 3 - Collect mud from four puddles to fill the cauldron.



SOUNDS FROM THE TREES

 


Help spell the words!

- First, listen to the word you need to spell. Then, listen to the sound the missing letter makes.
- Use the joystick to scroll to the missing letter at the top of the screen. Then, press a red handlebar button to choose the letter.
- When you're finished with this activity, press the exit button  to return to the road. Pedal to the next activity.



BAKING WITH GINGY

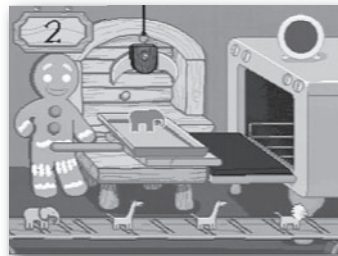

Bake cookies for Shrek!

- Use the joystick to move the crane. Press a red handlebar button to choose the cookies from the conveyor belt that matches the cookies on the baking sheet.
- Match all the cookies to move to the next level.

Level 1 - Match one cookie at a time.

Level 2 - Match up to two cookies at a time.

Level 3 - Match up to two cookies at a time, but pay attention to which direction the cookie is facing.

- When you're finished with this activity, press the exit button  to return to the road. Pedal to the next activity.

THE BIG RACE



Pedal as fast as you can to the finish line!

- Use the joystick to choose *1 Player* or *2 Player* game. Press either handlebar button to select the game.



1 Player

- Pedal down the track as fast as you can to the finish line. Try to speed past the other characters. Get to the finish line first and *you win!*

Hint: Drive over arrows along the way for a speed boost!



2 Player

- Each player takes a turn. Pedal down the track as fast as you can to the finish line. Look at your time.
- Now it's time for *Player 2* to beat your time.
- The player with the fastest time wins.
- When you're finished with this activity, press the exit button (🖱️) to return to the road. Pedal to the next activity.



DONKEY'S TREAT



Catch waffles for Donkey!

- Use the joystick to move Donkey and help him catch waffles on his plate. Count how many waffles Donkey catches!
- After Donkey catches all the waffles, pedal the cycle to pour syrup on them!
- When you're finished with this activity, press the exit button (🖱️) to return to the road. Pedal to the next activity.

TRAVEL JOURNAL






See previous
snapshot

See next
snapshot

 



Stamp Tool Erase

- Press the travel journal button . Then use the joystick and handlebar buttons to review and select a snapshot.

- Next, use the joystick and handlebar buttons to select the stamp tool  to decorate your picture.
- Choose a stamp with the joystick and handlebar buttons and place it on the snapshot.
- Select the erase button  to clear the screen and decorate another picture.

THE MAP

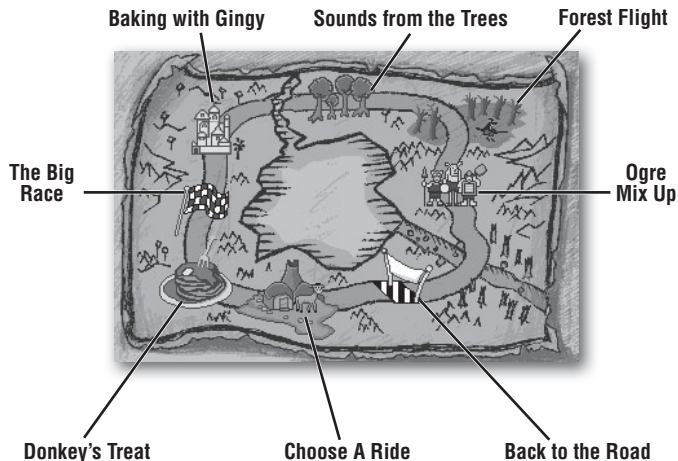

- You can travel around the track and head onto an off-ramp to access activities or simply press the map button  to visit any of the activities around the course.

CARE

- Wipe with a clean cloth dampened with a mild soap and water solution. Do not immerse.
- This product has no consumer serviceable parts. Do not take this product apart.



- Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities (Europe only).

CONSUMER INFORMATION



CONSUMER ASSISTANCE

1-800-432-5437 (US & Canada)
1300 135 312 (Australia)

service.fisher-price.com

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.
Hearing-impaired consumers: 1-800-382-7470.

Outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd.,
Mississauga, Ontario L5R 3W2; www.service.mattel.com.

Great Britain: Mattel UK Ltd, Vanwall Business Park,
Maidenhead SL6 4UB. Helpline: 01628 500303.
www.service.mattel.com/uk

Mattel Europa, B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.

Australia: Mattel Australia Pty. Ltd., 658 Church Street,
Locked Bag #870, Richmond, Victoria 3121 Australia.

New Zealand: 16-18 William Pickering Drive,
Albany 1331, Auckland.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>