

Fisher-Price®

N3216



WARNING

**IMPORTANT! KEEP
INSTRUCTIONS FOR
FUTURE REFERENCE.**

www.fisher-price.com.au

Download from Www.Somanuals.com. All Manuals Search And Download.

Important!



WARNING


To prevent strangulation with power cord, never place transmitter within reach of child.



CAUTION

This product cannot replace responsible adult supervision.

Important!

- For proper setup and use, please read these instructions.
- Please keep this instruction sheet for future reference, as it contains important information.
- Transmitter operates on AC current.
- Receivers operate on AC current (use enclosed AC adaptors) or six “AAA” (LR03) **alkaline** batteries (batteries not included).
- Adult assembly is required.
- Tool needed for battery installation: Phillips screwdriver (not included).
- This product is not intended to be used as a medical monitor and its use should not replace adult supervision.
- Test sound reception of receiver(s) before first-time use and whenever you change location of transmitter.
- To prevent entanglement:
 - Never place transmitter in a crib or playpen. Keep transmitter and receiver(s) out of baby's reach.
 - Never use extension cords with the AC adaptors.
- Never use transmitter or receiver(s) near water (ie.: bathtub, sink, laundry tub or wet basement, etc.).
- Always use transmitter and receiver(s) where there is adequate ventilation. To prevent overheating, keep transmitter and receiver(s) away from heat sources such as radiators, heat registers, direct sunlight, stoves, amplifiers, or other appliances which produce heat.
- Fisher-Price® does not recommend the use of two monitors in one house.
- Always remember that you are using public airwaves when using your monitor. Conversations, even from rooms near transmitter, may broadcast to other nursery monitors, radios, cordless telephones, or scanners outside your home. To protect privacy of your home, always turn transmitter off when not in use.
Carrier Frequency: 40 Mhz
Field Strength: 73.4dBuV/m at 3m
- Product features and decoration may vary from photos.
-  • Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities (Europe only).

AUSTRALIA

Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia.
Consumer Advisory Service 1300 135 312.

NEW ZEALAND

16-18 William Pickering Drive, Albany 1331, Auckland.



 
 
Features



Features


- ① Transmitter
- ② Power Indicator
- ③ Microphone
- ④ Power Button
- ⑤ Night Light – press to turn on a soft glow.
- ⑥ Channel Switch
- ⑦ Receiver
- ⑧ Speaker
- ⑨ On/Off/Volume Dial – Turns power on. Set volume to a comfortable level.
- ⑩ Clip - (backside of receiver). Fasten to your clothes to stay in touch with baby around the house or yard.
- ⑪ Sound Lights - let you see baby's sounds.
- ⑫ Power/Low Battery Indicator
- ⑬ Channel Switch

Assembly

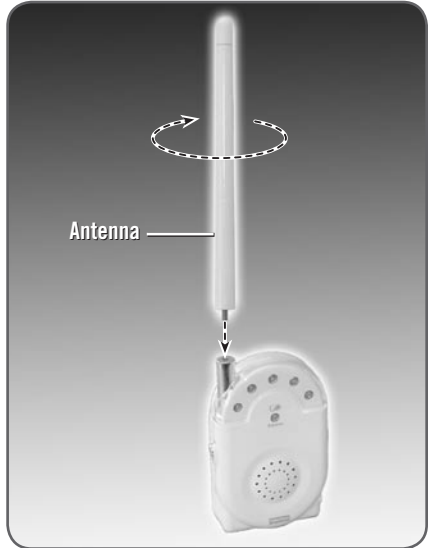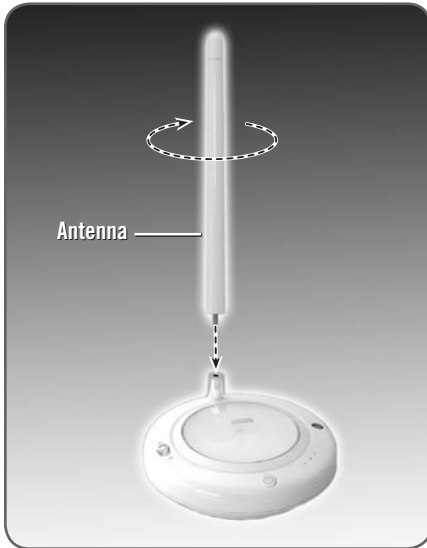

- Fit each antenna into the socket in the receiver and the transmitter. Turn the antennas to secure in place. **IMPORTANT!** This product is designed to operate properly with the antennas provided. To reduce the chance of potential radio interference to other users, assemble and use only the antennas provided.

 Receiver Battery Installation (Optional)

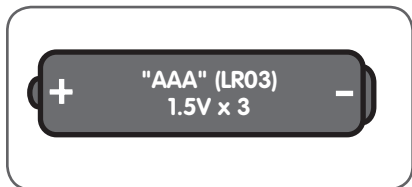

- Locate battery compartment door on back of receiver.
- Loosen screws in battery compartment door with a Phillips screwdriver. Remove battery compartment door.
- Insert three "AAA" (LR03) **alkaline** batteries into the battery compartment.
- Replace battery compartment door. Tighten screws with a Phillips screwdriver.

Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removeable, rechargeable batteries are used, they are only to be charged under adult supervision.

Testing Sound Reception

Test transmitter transmission and receiver reception each time you change location of use.



- Place transmitter in room in which you intend to use it.
- Press transmitter power button to turn power on. Power indicator lights.
- Set transmitter channel switch to same channel as receiver. Turn on a radio.

 
Testing Sound Reception



- Place a receiver in rooms in which you intend to use each.
- Turn on/off/volume dial to turn power on. Power/low battery indicator lights. Adjust receiver location for best reception.

Hint: If battery power is low, the power/low battery indicator turns orange. Replace batteries with three, new **alkaline** "AAA" (LR03) batteries or use AC adaptor for power source.

Testing Sound Reception

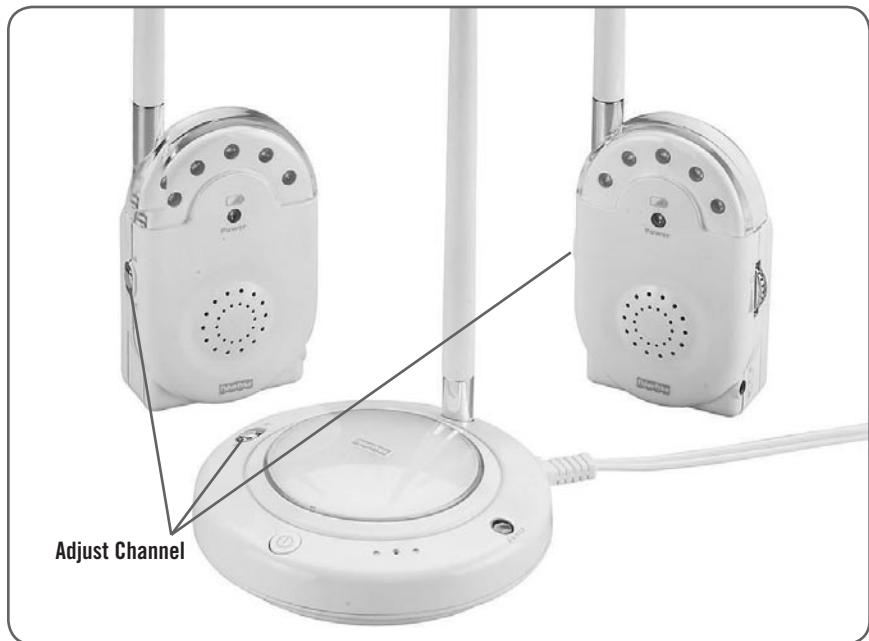

- Sound lights turn on when sound is received by a receiver.
 - One or two lights for shallow sounds
 - Three or more lights for louder sounds.
- If you experience interference (buzzing or static, etc.) while using one channel setting, switch all units to other channel. Selecting a channel is usually a one time adjustment.

Hint: You will see all five sound lights:

- If you turn receiver power on before transmitter power. You will also hear static noise. Turn volume down and turn transmitter power on.
- If the receiver is too far away from the transmitter. Move the receiver closer to the transmitter.
- If loud sounds are transmitting.

Setup & Use

IMPORTANT! Test sound reception of this monitor before first time use and whenever you change location of transmitter (see page 8).



- Set transmitter channel switch to same channel as receiver.

Setup & Use



- Place transmitter in same room with child. Point microphone directly toward crib/cot or play area.
- Unwrap and fully extend power cord for best transmission. Plug power cord into wall outlet.
- Use the power cord only in a wall outlet. Do not plug the power cord into a ceiling light.
- Press transmitter power button to turn power on.
- Press night light on transmitter for a soft, glowing light. (Press again to turn off night light.)

Setup & Use



- Place receiver where you will see or hear it.
- Unwrap and fully extend AC adaptor cord for best reception. Insert AC adaptor jack into receiver socket and plug into wall outlet.

Note: To use batteries as a power source, refer to instructions on page 7.

- Rotate receiver on/off/volume dial to turn power on. Power/low battery indicator lights. Rotate on/off/volume dial to adjust volume.

Setup & Use



- Clip to your clothes to stay in touch with baby around your house or yard.

Hint: Under permitting conditions, the receiver receives sounds up to 122 meters away from baby!

Problems & Solutions

Problem	Solution
You hear static or buzzing	Receiver is out of range of transmitter. Move receiver closer to transmitter. Note: Range varies depending on surrounding conditions such as noise levels, physical obstructions and signal interference.
	Transmitter power is off. Turn transmitter power on.
	Channel switches are on different channels. Make sure channel switches on both transmitter and receiver are set to same channel.
	Loose power cord connection and transmitter power is off. Check transmitter power cord plug-to-outlet connection.
	No power to wall outlet and transmitter power is off. Make sure light switch that controls power flow to wall outlet is on.
	Power is off because circuit breaker for room is off. Make sure house fuses and circuit breakers are on.
Receiver power/low battery indicator does not light	Receiver power is off. Turn receiver power on.
	Batteries in receiver are weak or dead. Replace all batteries with three, alkaline "AAA" (LR03) batteries or use AC adaptor as power source.
	Power is off because circuit breaker for room is off. Make sure house fuses and circuit breakers are on.
	No power to wall outlet and power is off. Make sure light switch that controls power flow to wall outlet is on.
Receiver power/low battery indicator turns orange	Batteries in receiver are weak or dead. Replace all batteries with three, alkaline "AAA" (LR03) batteries or use AC adaptor as power source.
Transmitter power indicator does not light	Transmitter power is off. Turn transmitter power on.
	Loose power cord connection and transmitter power is off. Check transmitter power cord plug-to-outlet connection.
	No power to wall outlet and transmitter power is off. Make sure light switch that controls power flow to wall outlet is on.
	Power is off because circuit breaker for baby's room is off. Make sure house fuses and circuit breakers are on.
You can hear conversations or sounds from other homes	There is signal interference due to other nursery monitors on same channel or cordless telephone use. Change channel switches on both transmitter and receiver to eliminate source of interference.

Hint: If, after checking all of these solutions, you believe that your transmitter power cord or AC adaptor are damaged, please contact Fisher-Price®.

One (1) Year Limited Warranty

Mattel Australia Pty., Ltd., (658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia) warrants to the original owner that this product is free from all defects in material and workmanship when used under normal conditions for a period of one (1) year from the date of purchase. Should the product fail to perform properly, we will repair replace it at our option, free of charge. Purchaser is responsible for shipping the product to the Fisher-Price Product Service Department at the address indicated above and for all associated freight and insurance costs. Fisher-Price Inc., will bear the cost of shipping the repaired or replacement item to you. The warranty is void if the owner repairs or modifies the product. The is warranty excludes any liability other than that expressly stated above, including, but not limited to, any incidental or consequential damages.

SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH MAY VARY FROM STATE TO STATE.

Consumer Advisory Service phone numbers are as follows:

Australia 1300 135 312

New Zealand 0800 174 063

Care

Excess dirt in transmitter microphone will hamper transmission of sound. Clean outer surface of transmitter and receiver with a cloth lightly dampened with a mild cleaning solution. Never immerse transmitter, receivers or AC adaptors.

Fisher-Price, Inc., a subsidiary of Mattel, Inc./une filiale de Mattel, Inc., East Aurora, New York 14052, U.S.A./É. -U.
©2008 Mattel, Inc. All Rights Reserved/Tous droits réservés.

® and ™ designate U.S. trademarks of Mattel, Inc./® et ™ désignent des marques de Mattel, Inc. aux É.-U.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>