

Fisher-Price

P8897

SMART CYCLE[®] Extreme

PHYSICAL LEARNING ARCADE SYSTEM



NOTICE ABOUT EPILEPSY AND SEIZURES

PLEASE READ THIS NOTICE BEFORE YOU OR YOUR CHILD USE ANY VIDEO GAME.

A very small portion of the population have a condition which may cause a momentary loss of consciousness when viewing certain kinds of flashing lights or patterns that are commonly present in our daily environment. This condition may cause seizures while watching some kinds of television pictures or playing certain video games. Players who have not had any previous seizures may nonetheless have an undetected epileptic condition.

If you or anyone in your family has experienced symptoms linked to an epileptic condition (e.g. a seizure or loss of awareness), consult your physician before playing video games. We recommend that parents observe their children while they play video games. If you or your child experience any of the following symptoms such as dizziness, altered vision, eye or muscle twitching, involuntary movements, loss of awareness, disorientation or convulsions, **DISCONTINUE USE IMMEDIATELY** and consult your physician.

Additionally, please follow these precautions whenever playing a video game:

- Do not sit or stand too close to the television screen. Play as far back from the screen as possible.
- Do not play if you are tired or need sleep.
- Always play in a well lit room.
- Be sure to take a 10-15 minute break every hour while playing.

CONSUMER INFORMATION

- Please keep these instructions for future reference, as they contain important information.

 
GETTING STARTED



- Insert the game cartridge into the socket in the side of the cycle. Push to be sure it's fully inserted.
- Turn your TV or DVD/VCR power **ON**.
- Slide the power switch on the cycle to **ON I**.
- To find the picture on your TV screen, set your TV's or DVD/VCR's mode selector to INPUT or VIDEO IN.

Note: You can use this Smart Cycle® software with any Smart Cycle® model. The Rumble Action feature is only available with the Smart Cycle® Extreme model.

CYCLE CONTROLS

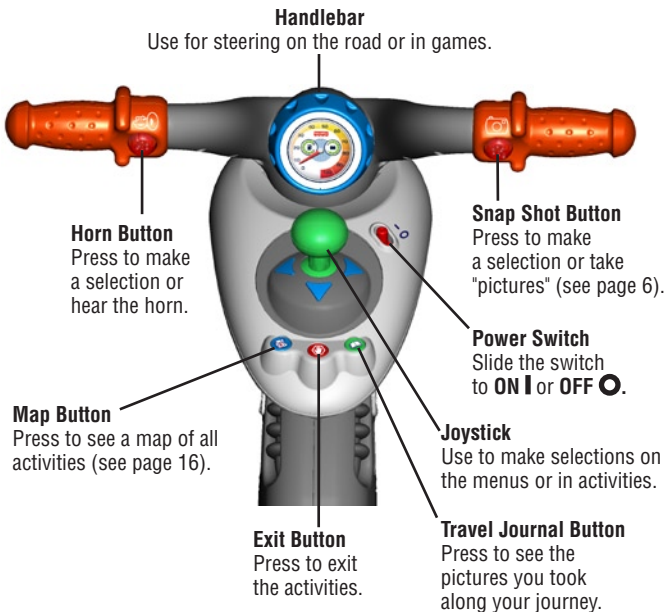



CHOOSE A RIDE



Customize your vehicle!

- Use the joystick to scroll through vehicle choices. Press a red handlebar button to make your selection.
- Repeat this process to choose the color and horn for your vehicle.



- Use the joystick to choose to turn the rumble feature on or off.
- Press either handlebar button to make your selection.



SUNFLOWER VALLEY

Supplies




Find the supplies.

- Pedal the cycle to move down the road. *The faster you pedal the faster you go!* Use the handlebars to steer.
- Collect the supplies shown in the upper left corner of the screen to see what you can build. Simply drive into them. Don't bump into the other objects.

 


Taking snap shots.

- Press the right handlebar button  to take snap shots (only in this activity).



MUD BLAST

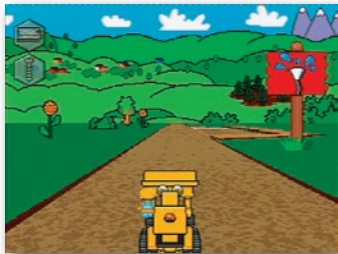

Off ramps

- Keep traveling down the road or head onto an off-ramp for other fun games and activities. Simply bear to the side of the road as you see one approaching.

Hint: If you miss your ramp, you can pedal in reverse to back up.




Clean the mud off the vehicles.

- Pedal the cycle to fill the water pump.
- Use the handlebars to move the hose and press a red handlebar button to spray water.
- Aim the hose at the muddy puzzle pieces to clean them off.

 


TOOLBOX TILES




- Collect all the pieces and help finish the puzzle.
- Use the joystick to move the pieces onto the puzzle and press a red handlebar button to put the piece in place.
- Collect more puzzle pieces in every level!
- When you're finished with this activity, press the exit button  to return to the road. Pedal to the next activity.

Matching Tiles

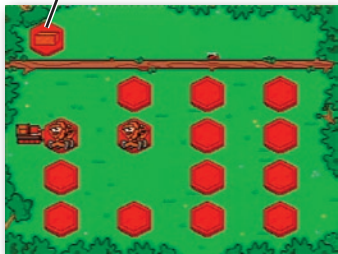

Find the matching tiles!

 
- Use the joystick to choose a tile and press the red handlebar button to select it. Repeat to turn over another tile.
- See your matching tiles at the top of the screen. Try to match all the tiles!
- When you're finished with this activity, press the exit button  to return to the road. Pedal to the next activity.



RED, GREEN, CLEAN!

Timer


Light

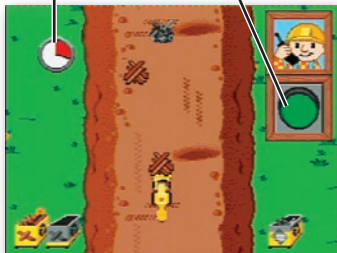

Help fill the recycling bins!

- Listen to hear how many bins you need to fill.
- When Bob says green light, pedal the cycle and collect as much wood and metal as you can.



- When Bob says red light, stop pedalling until he says green light again.
- Fill as many bins as you can before time runs out!
- There are even more bins in every level!
- When you're finished with this activity, press the exit button  to return to the road. Pedal to the next activity.



THE BIG RACE



***Pedal as fast as you can
to the finish line!***

- Use the joystick to choose *1 Player* or *2 Player* game. Press a red handlebar button to select the game.



Recycling Sign

 
1 Player

- Pedal down the road as fast as you can to the finish line. Try to speed past the other characters. Get to the finish line first and *you win!*


Hint: Collect recycling signs along the way for a speed boost!



BOB'S WOODSHED

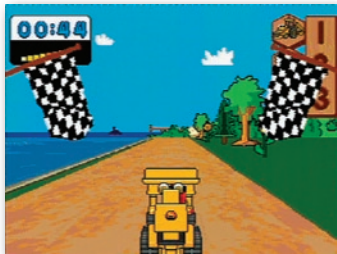

2 Player

- Each player takes a turn. Pedal down the road as fast as you can to the finish line. Look at your time.
- Now it's time for *Player 2* to beat your time.
- The player with the fastest time wins.
- When you're finished with this activity, press the exit button  to return to the road. Pedal to the next activity.



Help Bob the Builder build a wood shed!

- Pedal the cycle to help bulldoze the area for the shed and count how many feet long the shed will be.
- Move the handlebars to help saw the wood for the shed.



- Use the joystick to scroll through roof choices. Press a red handlebar button to select it.
- Repeat this process to choose a door.




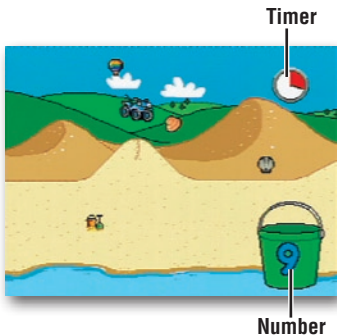 
- Next, help attach the door to the shed.
- Pedal the cycle to drill a hole in the door. Next, move the handlebars to turn the screwdriver. Then, press a red handlebar button to hammer the nails.



SCRAMBLER'S DUNE JUMP



- Move the joystick and press a red handlebar button to choose a paint color. Move the joystick to spray paint the shed.
- When you're finished with this activity, press the exit button  to return to the road. Pedal to the next activity.



Collect shells on the beach!

- Pedal the cycle to ride along the beach.
- Press a red handlebar button to jump and collect sea shells.



HAMMER THE PEGS




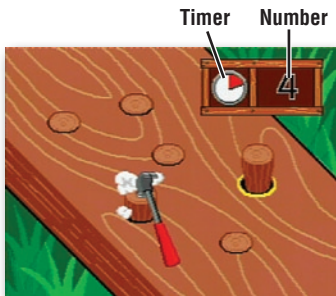 
- Then, count how many sea shells you collected! Move the joystick and press a red handlebar button to make your selection.

Level 1 - Count how many seas shells you collected.


Level 2 - Count even more sea shells.

Level 3 - Add the sea shells.

- When you're finished with this activity, press the exit button  to return to the road. Pedal to the next activity.



Hammer the pegs!

- Complete all the activities to unlock the bonus activity.
- Move the joystick to hammer as many pegs as you can before time runs out!
- Check your score to see how many pegs you hammered!
- When you're finished with this activity, press the exit button  to return to the road. Pedal to the next activity.




TRAVEL JOURNAL





See previous
snap shot

See next
snap shot

- Press the travel journal button . Then use the joystick and handlebar buttons to review and select a snap shot.

 



Stamp Tool Erase

- Next, use the joystick and handlebar buttons to select the stamp tool  to decorate your picture.
- Choose a stamp with the joystick and handlebar buttons and place it on the snap shot.
- Select the erase button  to clear the screen and decorate another picture.




THE MAP

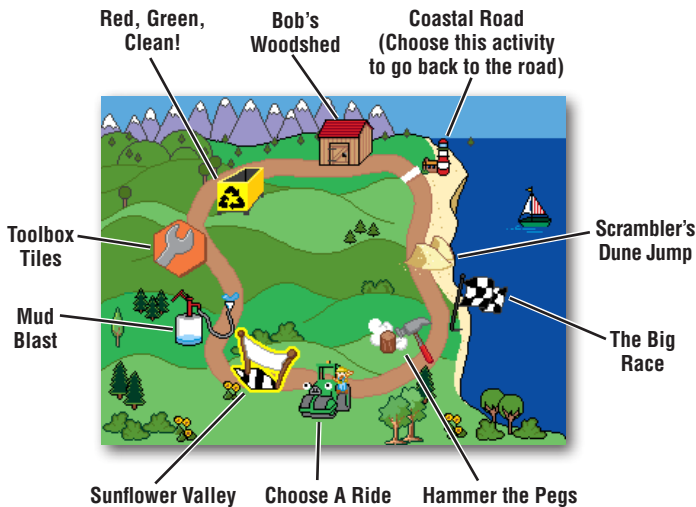

- You can travel down the road and head onto an off-ramp to access activities or simply press the map button  to visit any of the activities around the course.

CARE

- Wipe with a clean cloth dampened with a mild soap and water solution. Do not immerse.
 - This product has no consumer serviceable parts. Do not take this product apart.
-  Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities (Europe only).

CONSUMER INFORMATION

VISIT US ON LINE AT
WWW.SERVICE.FISHER-PRICE.COM

Call our Consumer Relations Department, toll-free at **1-800-432-5437**, 9 AM - 7 PM EST Monday through Friday and 11 AM - 5 PM EST Saturday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Write to us at: Fisher-Price® Consumer Relations, 636 Girard Avenue, East Aurora, New York 14052.

GREAT BRITAIN: Mattel UK Ltd, Vanwall Business Park, Maidenhead SL6 4UB.
Helpline: 01628 500303. www.service.mattel.com/uk

For countries outside the United States:

CANADA: Questions? 1-800-432-5437. Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2; www.service.mattel.com.

AUSTRALIA: Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

NEW ZEALAND: 16-18 William Pickering Drive, Albany 1331, Auckland.


ASIA: Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.


Fisher-Price, Inc., a subsidiary of Mattel, Inc., East Aurora, NY 14052 U.S.A. ©2009 Mattel, Inc.
All Rights Reserved. © and ™ designate U.S. trademarks of Mattel, Inc., unless otherwise indicated.

Stretch your mind with other software titles for your Smart Cycle®!

Each sold separately and subject to availability.



www.bobthebuilder.com ©2009 HIT Entertainment Limited and Keith Chapman. All Rights Reserved.
The Bob the Builder name and character, related characters and riveted logo are trademarks of HIT
Entertainment Limited. Reg. U.S. & Tm. Off. and other countries. ©2009 HIT Entertainment
Limited. HIT and the HIT logo are trademarks of HIT Entertainment Limited. 

©2009 Viacom International Inc. All Rights Reserved. Nickelodeon, SpongeBob SquarePants
and all related titles, logos and characters are trademarks of Viacom International Inc.
Created by Stephen Hillenburg. 

Disney/Pixar elements © Disney/Pixar

www.fisher-price.com

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>