

# Play My Way

R4567



**Fisher-Price**

[www.fisher-price.com](http://www.fisher-price.com)

Download from [Www.Somanuals.com](http://Www.Somanuals.com). All Manuals Search And Download.

# Consumer Information



## WARNING

### CHOKING HAZARD – Small Parts

Not suitable for children under 3 years.

- Please keep this instruction booklet for future reference, as it contains important information.
- This product (art supplies) may stain or stick to some surfaces. Place newspaper or another protective material on the play area before use.
- Software should be installed by an adult.
- For proper use of this product we recommend that your computer meet minimum system requirements.

## Minimum System Requirements

Operating System.....	Microsoft® Windows Vista™ or Windows XP
Processor.....	1.2GHz
Memory.....	256MB RAM
Hard Drive.....	200MB available
Video Resolution.....	800x600 32-bit color DirectX9.0c compatible
Sound.....	16-bit DirectX compatible
CD or DVD Drive	

### Recommended:

Printer, Internet Connection (for software updates)

## Install the Software

- You will need Administrator privileges to install the software. If you have multiple logons on your computer, be sure the logon you are using has Administrator privileges.
- Insert the CD into the CD-ROM or DVD drive of your computer.
- The software installer launches automatically. Follow the on-screen instructions to complete installation.
- You will be asked to set a password as part of the installation process. Refer to the Parental Controls section for instructions to set a password.

**Note:** You will need to install all components to use this software.

- If Installation of the software does not launch automatically, go to the “Start” menu, click on “Run” and type “D:\”.

**Note:** If you are using Windows Vista™, you will need to restart your computer after installing the software.

## Uninstall the Software


- Click on the following items (in order):
  - “Start” menu on your computer task bar
  - “Programs”
  - “Fisher-Price”
  - “Play My Way”
  - “Coloring Fun”
  - “Uninstall Coloring Fun”

## Start the Software



- Double-click on the Coloring Fun icon on your computer desktop.

# Main Menu

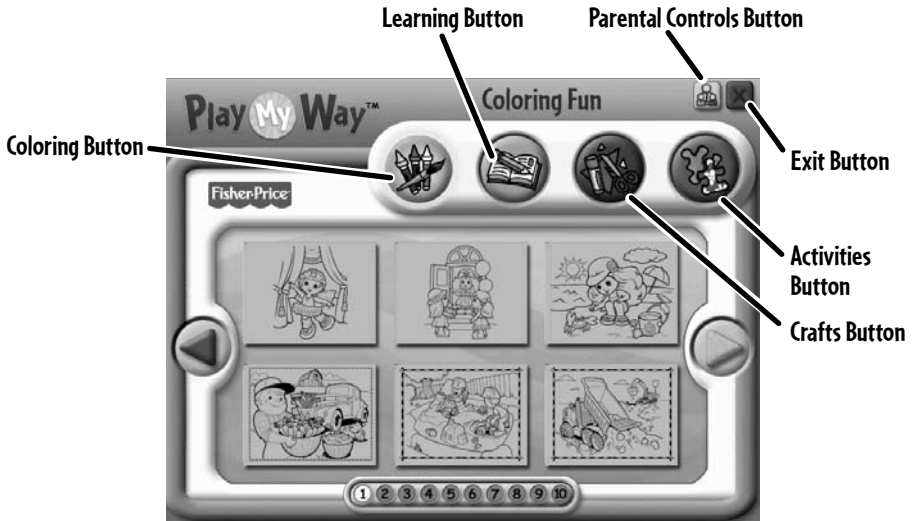


- From the main menu, click on a button to choose from coloring, learning, craft or activity prints.
- Click on the large arrows ◀ ▶ on each side of the screen or the numbers on the bottom of the screen to view more pictures.
- Click on the parental controls icon 👤 to set a password, receive software updates, and control the number of prints your child can print during each session of use.



# Parental Controls




Parental  
Controls  
Button

- To set up or change parental controls, click on the Parental Controls button , located on the upper right portion of the main menu screen.



- Click on the Password, Software Update, Number of Prints, or System Information button.

**Note:** When you click on the System Information button, you can review information about your software, operating system, firmware and accessories.

- To exit, click on the  button.



## Parental Controls



### Password

- Protect your desktop and hard drive by setting a password. Click the ON radio button.
- Type your password in the Enter Password and Confirm Password fields. Select a hint to help you remember your password.

**Note:** If you set a password, you cannot enter Parental Controls or exit the software without entering the password.

- Click on the checkmark button  to save your password.



### Software Update

- Click the ON radio button to automatically check for software updates.

**Note:** You must have an Internet connection on your computer for this feature to work.

- Click on the checkmark button  to save your selection.



# Parental Controls



## Number of Prints

- Click on the arrows to select the number of prints for each session.
- Choose a number from 0 to 20 or select unlimited. If you do not make a choice, the number of prints defaults to unlimited.
- Click on the checkmark button  to save your selection.


# Coloring



- Click on the coloring  button for prints you can color!
- Click on the arrows or numbers to see more pictures.
- Click on a picture to print it.

# Learning




- Click on the learning  button for prints with letters, numbers, writing and addition!
- Click on the arrows or numbers to see more prints.
- Click on a print to print it.




# Crafts



- Click on the crafts  button for instructions for fun craft projects!
  - Click on the arrows or numbers to see more projects.
- Note:** Craft projects may require more than one piece of paper to print.
- Click on a project to print it.


# Activities



- Click on the activities  button for prints with fun activities you can complete and then color!
- Click on the arrows or numbers to see more activities.
- Click on an activity to print it.

# Printables



- Click on the picture you want to print! The printer icon  will appear over the picture you are printing.

**Note:** Make sure your printer is ON and connected to your computer.

## Coloring Fun!



- Use the included art supplies to complete your printed projects!

# Cleanup and Storage

- To remove markings from skin, use soap and water.
- Replace the caps on the markers after each use.



- All your supplies easily store inside the bin.
- Store your bin in the art center (sold separately and subject to availability).



## CONSUMER ASSISTANCE

1-888-892-6123 (US & Canada)

1300 135 312 (Australia)

 [service.fisher-price.com](http://service.fisher-price.com)

**Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.**

**Hearing-impaired consumers: 1-800-382-7470.**

---

Outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd.,  
Mississauga, Ontario L5R 3W2; [www.service.mattel.com](http://www.service.mattel.com).

Great Britain: Mattel UK Ltd, Vanwall Business Park,  
Maidenhead SL6 4UB. Helpline: 01628 500303.  
[www.service.mattel.com/uk](http://www.service.mattel.com/uk)

Australia: Mattel Australia Pty. Ltd., 658 Church Street,  
Locked Bag #870, Richmond, Victoria 3121 Australia.

New Zealand: 16-18 William Pickering Drive,  
Albany 1331, Auckland.

Windows is a registered trademark of Microsoft Corporation in the United States and other countries.

Windows Vista is either a registered trademark or trademark  
of Microsoft Corporation in the United States and/or other countries.

Fisher-Price, Inc., a subsidiary of Mattel, Inc., East Aurora, NY 14052 U.S.A.

©2009 Mattel, Inc. All Rights Reserved.

® and TM designate U.S. trademarks of Mattel, Inc., unless otherwise indicated.

**PRINTED IN CHINA**

**R4567a-0920**

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>