

Fisher-Price®

R8127

SMARTCYCLE[®] EXtreme

PHYSICAL LEARNING ARCADE SYSTEM



NOTICE ABOUT EPILEPSY AND SEIZURES

PLEASE READ THIS NOTICE BEFORE YOU OR YOUR CHILD USE ANY VIDEO GAME.

A very small portion of the population have a condition which may cause a momentary loss of consciousness when viewing certain kinds of flashing lights or patterns that are commonly present in our daily environment. This condition may cause seizures while watching some kinds of television pictures or playing certain video games. Players who have not had any previous seizures may nonetheless have an undetected epileptic condition.

If you or anyone in your family has experienced symptoms linked to an epileptic condition (e.g. a seizure or loss of awareness), consult your physician before playing video games. We recommend that parents observe their children while they play video games. If you or your child experience any of the following symptoms such as dizziness, altered vision, eye or muscle twitching, involuntary movements, loss of awareness, disorientation or convulsions, **DISCONTINUE USE IMMEDIATELY** and consult your physician.

Additionally, please follow these precautions whenever playing a video game:

- Do not sit or stand too close to the television screen. Play as far back from the screen as possible.
- Do not play if you are tired or need sleep.
- Always play in a well lit room.
- Be sure to take a 10-15 minute break every hour while playing.

CONSUMER INFORMATION

- Please keep these instructions for future reference, as they contain important information.

GETTING STARTED



 
- Insert the game cartridge into the socket in the side of the cycle. Push to be sure it's fully inserted.
- Turn your TV or VCR power **on**.
- Slide the power switch on the cycle to **on** **I**.
- To find the picture on your TV screen, set your TV's or VCR's mode selector to INPUT or VIDEO IN.

Note: You can use this Smart Cycle® software with any Smart Cycle® model. The Rumble Action feature is only available with the Smart Cycle® Extreme model.

CYCLE CONTROLS

Handlebar

Use for steering on the road or in games.

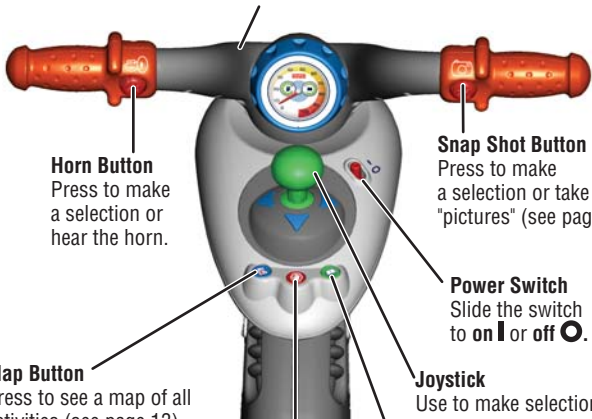

Horn Button

Press to make a selection or hear the horn.

Snap Shot Button

Press to make a selection or take "pictures" (see page 6).

Power Switch

Slide the switch to on **I** or off **O**.

Map Button

Press to see a map of all activities (see page 13).

Joystick

Use to make selections on the menus or in activities.

Exit Button

Press to exit the activities.

Travel Journal Button

Press to see the pictures you took along your journey.



CHOOSE A RIDE



Customize your vehicle!

- Use the joystick to scroll through vehicle choices. Press either handlebar button to make your selection.
- Repeat this process to choose the color and horn for your vehicle.
- Use the joystick to choose to turn the rumble feature on or off.
- Press either handlebar button to make your selection.



BACK TO THE ROAD

Object Number Collected



Find the objects.

- Pedal the cycle to move down the road. *The faster you pedal the faster you go!* Use the handlebar to steer.
- Collect the object shown in the upper left corner of the screen. Simply drive into them. Don't bump into the other objects. Look at the number of objects you've collected in the upper left corner of the screen.



Taking snap shots.

- Press the right handlebar button  to take snap shots (only in this activity).



Off ramps

- Keep traveling down the road or head onto an off-ramp for other fun games and activities. Simply bear to the side of the road as you see one approaching.

Hint: If you miss your ramp, you can pedal in reverse to back up.

3 MUD MATH



Numbers

Hit the falling mud balls!

- Use the joystick to move the dinosaur into the mudballs.

Level 1 - Hit only mud balls highlighted on the bottom of the screen.

Level 2 - Hit the mud balls in numerical order.

Level 3 - Hit the mud balls in numerical order, counting by 2's.

- When you're finished with this activity, press the exit button  to return to the road. Pedal to the next activity.




DINO-SIZE



 
Rocks

Learn about different dinosaur sizes!

- Count the rocks on the bottom of the screen to see how big the dinosaur is!
- Pedal the cycle to allow Diego to fly over the dinosaur.
- When you're finished with this activity, press the exit button  to return to the road. Pedal to the next activity.




IN A ROW DINO

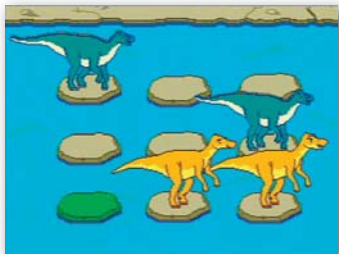

Help baby dinos cross the river!

- Use the joystick to choose a rock. Press a red handlebar button to select the rock and place a dino on it.
- Watch, as the game chooses a rock. You're next, choose another rock.

- Get three dinosaurs in a row (up and down, side to side or diagonal) and you win!
- Count how many baby dinos cross the river.
- When you're finished with this activity, press the exit button  to return to the road. Pedal to the next activity.



THE BIG RACE



***Pedal as fast as you can
to the finish line!***

- Use the joystick to choose *1 Player* or *2 Player* game. Press either handlebar button to select the game.




1 Player

- Pedal down the road as fast as you can to the finish line. Try to speed past the other characters. Get to the finish line first and *you win!*

Hint: Collect stars along the way for a speed boost!

 


2 Player

- Each player takes a turn. Pedal down the road as fast as you can to the finish line. Look at your time.
- Now it's time for *Player 2* to beat your time.
- The player with the fastest time wins.
- When you're finished with this activity, press the exit button  to return to the road. Pedal to the next activity.




EGG RESCUE

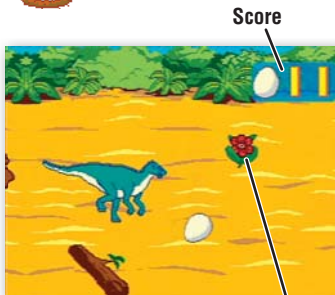

Flower

Help the mommy dinosaur collect her eggs to take back to the nest!


- Use the joystick to move the mommy dinosaur toward an egg.
- Hint: Pedal the cycle to move faster.***
- Collect as many eggs as you can. Try to collect all 20 eggs! Be careful not to slip in mud or puddles or trip on a log.
- Eat flowers along the way for a speed boost.
- Look at your score on the screen!
- When you're finished with this activity, press the exit button  to return to the road. Pedal to the next activity.



PREHIS-SORTING



Help Dora sort the objects.


- Listen as Dora tells you how to sort the objects: biggest to smallest, tallest to shortest, etc.
- Look at the bottom of the screen. Use the joystick to choose an object. Press a red handlebar button to select the object and put it in place.
- When you're finished with this activity, press the exit button  to return to the road. Pedal to the next activity.



BONUS ACTIVITY



Move like a dinosaur!

- Complete all the activities to unlock the bonus activity.
- Pedal the cycle to jump and roar like a real dinosaur!
- When you're finished with this activity, press the exit button  to return to the road. Pedal to the next activity.



TRAVEL JOURNAL






See previous
snap shot

See next
snap shot

 



Stamp Tool Erase

- Press the travel journal button . Then use the joystick and handlebar buttons to review and select a snap shot.
- Next, use the joystick and handlebar buttons to select the stamp tool  to decorate your picture.
- Choose a stamp with the joystick and handlebar buttons and place it on the snap shot.
- Select the erase button  to clear the screen and decorate another picture.



THE MAP

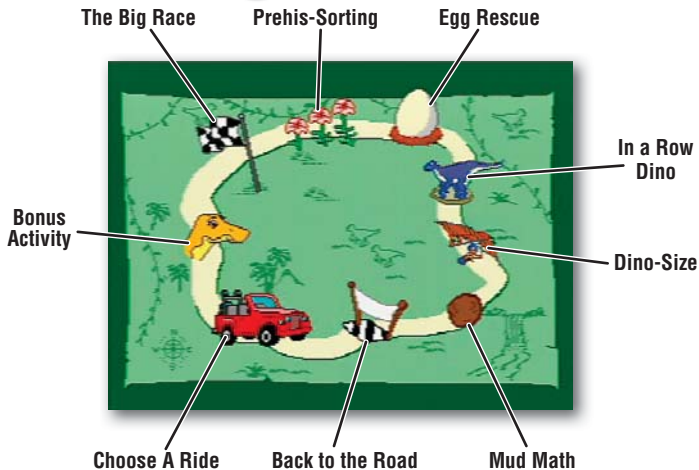

- You can travel down the road and head onto an off-ramp to access activities or simply press the map button  to visit any of the activities around the course.

CARE

- Wipe with a clean cloth dampened with a mild soap and water solution. Do not immerse.
- This product has no consumer serviceable parts. Do not take this product apart.



Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities (Europe only).

CONSUMER INFORMATION

VISIT US ON LINE AT
WWW.SERVICE.FISHER-PRICE.COM

Call our Consumer Relations Department, toll-free at **1-800-432-5437**.
Hearing-impaired consumers using TTY/TDD equipment, please call
1-800-382-7470. Write to us at: Fisher-Price® Consumer Relations,
636 Girard Avenue, East Aurora, New York 14052.

GREAT BRITAIN: Mattel UK Ltd, Vanwall Business Park, Maidenhead SL6 4UB.
Helpline: 01628 500303. www.service.mattel.com/uk

For countries outside the United States:

CANADA: Questions? 1-800-432-5437. Mattel Canada Inc., 6155 Freemont Blvd.,
Mississauga, Ontario L5R 3W2; www.service.mattel.com.

AUSTRALIA: Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870,
Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

NEW ZEALAND: 16-18 William Pickering Drive, Albany 1331, Auckland.

ASIA: Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre,
Harbour City, Tsimshatsui, HK, China.

Stretch your mind with other software titles for your Smart Cycle®!

Each sold separately and subject to availability.



© 2009 Viacom International Inc. All Rights Reserved. Nickelodeon, SpongeBob SquarePants and all related titles, logos and characters are trademarks of Viacom International Inc. Created by Stephen Hillenburg.

Stephen Hillenburg

www.bobthebuilder.com © 2009 HIT Entertainment Limited and Keith Chapman. All Rights Reserved. The Bob the Builder name and character, related characters and riveted logo are trademarks of HIT Entertainment Limited. Reg. U.S. & Tm. Off. and other countries. ©2009 HIT Entertainment Limited. HIT and the HIT logo are trademarks of HIT Entertainment Limited.



©2009 HIT Entertainment Limited. HIT and the HIT logo are trademarks of HIT Entertainment Limited.

HOT WHEELS and associated trademarks and trade dress are owned by, and used under license from Mattel, Inc. © 2009 Mattel, Inc. All Rights Reserved.

Disney • Pixar elements ©Disney • Pixar

Fisher-Price, Inc., a subsidiary of Mattel, Inc., East Aurora, New York 14052 U.S.A.

©2009 Mattel, Inc. All Rights Reserved. ® and ™ designate U.S. trademarks of Mattel, Inc., unless otherwise indicated.

www.fisher-price.com

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>