

This Quick Reference Guide is not intended to replace your vehicle Owner's Guide which contains more detailed information concerning the features of your vehicle, as well as important safety warnings designed to help reduce the risk of injury to you and your passengers. Please read your entire Owner's Guide carefully as you begin learning about your new vehicle and refer to the appropriate sections when questions arise.

All information contained in this Quick Reference Guide was accurate at the time of duplication. We reserve the right to change features, operation and/or functionality of any vehicle specification at any time. Your Ford dealer is the best source for the most current information. For detailed operating and safety information, please consult your Owner's Guide.

Ford Motor Company | Customer Relationship Center | P.O. Box 6248 | Dearborn, MI 48121
1-800-392-3673 (FORD) | (TDD for the hearing impaired: 1-800-232-5952)



9R3J 19G217 AA

FUSES

If your electrical components are not working properly, a fuse may have blown. For more detailed information, please refer to your Owner's Guide.

FUEL PUMP SHUT-OFF SWITCH


This device stops the electric fuel pump from sending fuel to the engine when your vehicle has had a substantial jolt. After an accident, if the engine cranks but does not start, this switch may have been activated. The fuel pump shut-off switch is located in the driver's footwell.

CHANGING THE TIRES

Your vehicle is equipped with either a temporary spare tire (with jack and tools) or a temporary mobility kit, which is located under the carpeted floor panel in the trunk. The temporary mobility kit contains a sealing compound (seals most punctures caused by nails or similar objects) and an air compressor to re-inflate the tire. Do not attempt to use this kit to repair large punctures or damage to the tire's sidewall and/or wheel. The mobility kit provides temporary sealing that will allow you to drive up to 120 miles at a maximum speed of 50 mph. After sealant use, the Tire Pressure Monitor System sensor and valve stem on the affected wheel must be replaced by an authorized Ford dealer. **NOTE** The sealant canister repairs only one tire. See your authorized dealer for replacement canisters. For complete details on how to change your tire or how to use the temporary mobility kit, please refer to the Roadside Emergencies chapter in your Owner's Guide.

TIRE PRESSURE

Your tire pressure is properly set at the dealership according to the recommended specifications found

on the Safety Compliance Certification Label or Tire Label located on the edge of the driver's door. Check your tire pressure at least once a month and before long trips (including spare, if equipped). As an added safety feature, your vehicle has been equipped with a **TIRE PRESSURE MONITORING SYSTEM (TPMS)** that illuminates a low tire pressure warning light  when one or more of your tires is significantly under-inflated. **WARNING** Improperly inflated tires can affect vehicle handling and can fail suddenly, possibly resulting in loss of vehicle control.

FUEL TANK CAPACITY

Your tank holds 16 gallons (60.6L) of fuel. For optimum performance use "Regular" unleaded fuel with a pump (R+M)/2 octane rating of at least 87. Do not use E85 fuels because your vehicle was not designed to run on fuels with more than 10% ethanol.

ROADSIDE ASSISTANCE


Your new Ford Mustang comes with the assurance and support of 24-hour emergency roadside assistance. Roadside assistance includes such services as: lockout assistance, limited fuel delivery, battery jump starts, changing a flat tire, towing and winch out. To receive roadside assistance in the United States, call 1 (800) 241-3673. In Canada, call 1 (800) 665-2006. For more information on coverage and details of service, refer to your Roadside Assistance information card.

FORD MUSTANG

APRIL 2008

FIRST PRINTING

 QUICK REFERENCE GUIDE

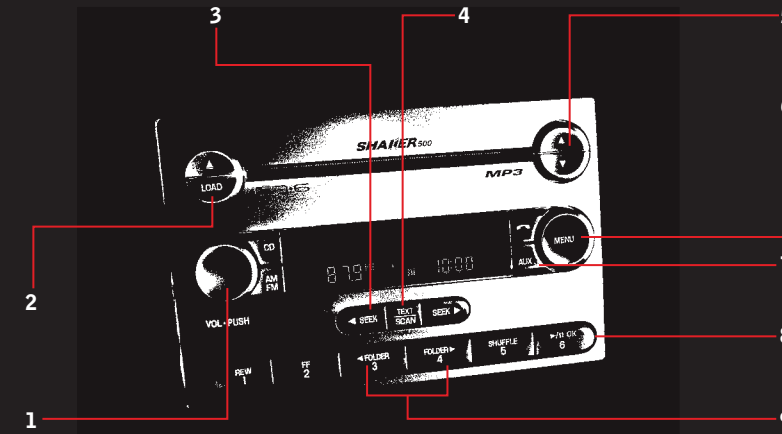

1 POWER / VOLUME

Press to turn ON or OFF. Turn the knob to increase or decrease volume.

2 LOAD BUTTON

To load a CD, press LOAD, and, when prompted, use the presets to select the desired slot. Press and hold LOAD to autolead up to six CDs. Load CDs one at a time when prompted, label side up.

3 SEEK BUTTONS

Press to access the previous or next strong station or track. In satellite radio mode (if equipped), press to seek to the previous/next channel.

4 TEXT / SCAN BUTTON

In radio or CD/MP3 mode, press and hold for a brief sampling of stations or tracks. In CD/MP3 mode, press and release to display track, title, artist name, disc title and file name (if available). In satellite radio mode (if equipped), press and release to display the current song title.

5 TUNE / DISC SELECTOR

Press to manually move up or down the radio frequency or to the desired disc. Press and hold for fast advance.

6 MENU BUTTON

Use the MENU button to cycle through the possible modes (Bass, Treble, Fade, and Balance, among others). Then use SEEK or ▲/▼ to adjust the setting. Fade adjusts audio between the front and rear speakers and Balance adjusts between left and right speakers.

SETTING THE CLOCK: Press MENU until SELECT HOUR or SELECT MINS is displayed. Press SEEK or ▲/▼ to adjust hours/minutes.

SATELLITE RADIO CONTROLS (IF EQUIPPED)

7 AUX

Press AUX repeatedly to cycle through SAT1, SAT2 or SAT3 (satellite radio modes, if equipped) or LINE IN (auxiliary audio mode). Once satellite radio mode is active, you may then press MENU. When SATELLITE RADIO MENU appears in the display, press OK to enter the satellite radio menu. Press ▲/▼ to access the following options:

CATEGORY, SAVE SONG, DELETE SONG, DELETE ALL SONGS, ENABLE ALERTS/DISABLE ALERTS. For more information on these features, please refer to your Owner's Guide.

8 SETTING MEMORY PRESETS

To set a station, select the desired radio station or satellite radio channel (if equipped), then press and hold a preset button (1-6) until sound returns.

9 MP3 TRACK / FOLDER MODE

Available only on MP3 discs in CD mode. Press to access previous/next folder.

NAVIGATION SYSTEM (IF EQUIPPED)

Your vehicle may be equipped with a navigation system. Before loading the map DVD, ensure that the vehicle is in neutral, with the parking brake applied and your hands are off the gearshift lever. For further information, refer to your Navigation Supplement.



CONVERTIBLE (IF EQUIPPED)

Do not store articles behind rear seat. Articles stored in the convertible top stowage compartment may break the rear glass window when the top is lowered. The convertible top can be lowered with the windows down. The windows automatically lower when lowering or raising the top. Do not lower the top when the top material is wet. **NOTE** The convertible top will not operate unless the vehicle is traveling under 3 mph (5 km/h).

TO LOWER THE CONVERTIBLE TOP

1 Stop the vehicle completely. Turn the key to the ON position. Recommended: Run the vehicle's engine when lowering or raising the top to prevent draining the battery. **2** Ensure the convertible top stowage compartment behind the rear seat is empty and ready to receive the top. Ensure the convertible top outer surface is free of leaves and debris. **3** Unclamp the top from the windshield header at both the right and left sides by pulling each handle down and rearward until the handle clears the windshield header. **NOTE** If the top has not been lowered for a while and sticks to the windshield header, push the front of the top up slightly with your hand to loosen it. **4** Push the convertible top switch on the overhead console and hold until the windows are completely down and the top is completely stored.

TO RAISE THE CONVERTIBLE TOP

1 Stop the vehicle completely. Turn the key to the ON position. Recommended: Run the vehicle's engine when raising or lowering the top to prevent draining the battery. **2** Push and hold the convertible top switch until the windows lower completely and the top unfolds and moves forward toward the windshield header. **3** Open both handles before the top meets the windshield header. **4** Continue to use the convertible top switch to raise the top until it has reached the fully closed position flush to the header. The two pins under the forward edge of the top should seat in the matching holes in the header. **5** To fasten both handles securely, rotate the handles into the header on the top until they reach the full forward position and push up on the handle to the stowed position. Pulling down on the header at the center grip while closing the handles may assist in fastening the top. **6** Raise the rear windows first and then raise the front windows.

POWER SIDE VIEW MIRRORS

Rotate the control clockwise to adjust the right mirror or counterclockwise to adjust the left mirror. Move the control in the direction you wish to tilt the mirror. Return the control to the center position to lock the mirrors in place.

POWER WINDOWS

Push or pull the rocker switches to open or close your windows. Push down and hold the switch to open. Pull up and hold the switch to close. Express Down and Express Up allows the driver to fully open and close the window without holding the control down. **Express Down:** Push the switch completely down to the second detent and release quickly. The window will open fully. **Express Up:** Pull the switch completely up to the second detent and release quickly. The window will automatically fully close. Momentarily press the switch to any position to stop window operation.

GLASS ROOF AND SUN SHADE (IF EQUIPPED)

Your vehicle may be equipped with a glass roof as well as a roller blind sun shade. To close the sun shade, slide it towards the front of the vehicle. To open, slide the shade towards the rear of the vehicle.


SHORT DROP GLASS (FRONT WINDOWS ONLY)

In order to improve door efforts and sealing, your vehicle is equipped with short drop glass. This feature lowers the glass when either door is opened. The glass returns to its closed position when the door is closed. For more detailed information, please refer to your Owner's Guide.

REMOTE ENTRY SYSTEM

This feature allows you to lock or unlock the vehicle's doors without a key. It also allows you to release the trunk lid, activate a personal alarm, and arm or disarm the active anti-theft alarm system (if equipped). **NOTE** The Panic function will only operate when the ignition is turned off and the trunk lid release function only operates when the vehicle speed is less than 3 mph (5 km/h). Up to six remote transmitters can be programmed to your vehicle.

CAR FINDER

Press  twice on your remote entry transmitter within 3 seconds. The horn will chirp and turn lamps will flash. It is recommended that this method be used to locate your vehicle, rather than using the panic alarm.

AUXILIARY INPUT JACK

 
Your vehicle is equipped with an Auxiliary Input Jack located in the console bin. This allows you to plug and play auxiliary audio devices. Press AUX repeatedly on your audio system until LINE IN appears in the display, and then plug in your auxiliary audio device. For more detailed information, please refer to your Owner's Guide.

AUTOMATIC DIMMING INSIDE REAR VIEW MIRROR (IF EQUIPPED)

The auto dimming rear view mirror is equipped with a feature that will reduce glare in the rear view mirror when bright lights are detected. It automatically returns to normal/clear when the vehicle is placed in Reverse (R). For more detailed information, please refer to your Owner's Guide.

COMBINATION LAP AND SHOULDER BELTS

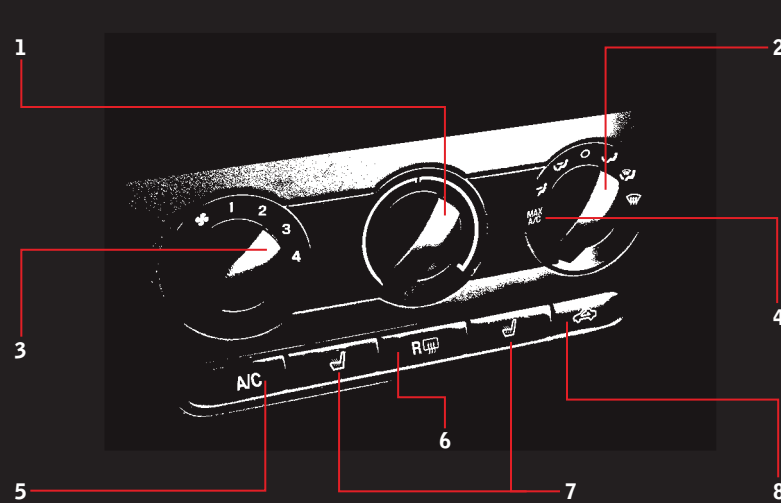


For easier access to the front safety belt for the front seat occupant, rotate the presenter arm toward the front of the vehicle until it locks into place. To access the second row seats, rotate the arm back to its original position against the trim panel.



1 TEMPERATURE CONTROL

Rotate the knob to adjust the temperature of the airflow in the vehicle.

2 MODE SELECTOR

Controls the source of airflow into the vehicle. You can choose floor , instrument panel  or windshield defroster  air vents, or combinations of these.



3 FAN SPEED

Rotate the knob to adjust the volume of air circulated in the vehicle.

4 MAX A/C

Distributes recirculated air through the instrument panel vents to cool the vehicle. This re-cooling of the interior air is more economical and efficient. Set the temperature knob to full cold position. Set to highest fan speed initially, then adjust to maintain comfort.

5 A/C

Press to activate/deactivate air conditioning. Use with recirculated air to improve cooling performance. Engages automatically in MAX A/C,  and .

6 REAR DEFROST AND DEFOGGING

Ensure that the ignition is turned ON. Press the

control

to clear the rear window of thin ice and fog. The LED will illuminate. The rear defroster turns off automatically after 15 minutes or when the ignition is turned OFF. To manually turn off the rear defroster, push the control again.

7 DRIVER & PASSENGER HEATED SEATS (IF EQUIPPED)

Press to activate or deactivate the driver or passenger heated seat. **NOTE** Heated seats will turn off automatically after 10 minutes of use.


8 RECIRCULATED AIR CONTROL

Press to activate/deactivate recirculated air in the cabin. Recirculated air may reduce the amount of time required to cool down the interior of the vehicle and may also help reduce undesired exterior odors from reaching the interior of the vehicle. Recirculated air engages automatically in MAX A/C or can be engaged manually in any other mode, except defrost.

REDUCING FOG BUILDUP

Place the airflow selector in the  or  position.

REDUCING HUMIDITY BUILDUP

Do not drive with the airflow selector in the OFF (O) position or with recirculated air  engaged.



MUSTANG QUICK REFERENCE GUIDE 2009



ESSENTIAL INFORMATION

AUDIO SYSTEM

CONVERTIBLE TOP

ADDITIONAL FEATURES

CLIMATE CONTROL

How does it feel to own an American Icon?

Your 2009 Mustang is the newest member of a proud family of legendary road machines.

45 years of refinement and innovation have made

your new Mustang one of the most exciting,

comfortable, safest and smartest cars to ever roam

the American road. This Quick Reference Guide

was designed to help you get to know your new

Mustang. It will allow you to familiarize yourself with many of your new Mustang's features and functions.

For the most detailed information and important

safety information refer to your Owner's Guide.

Use extreme caution when using any device or

 
feature that may take your attention off the road.

Your primary responsibility is the safe operation of




the vehicle. Only use non-essential features and

devices when it is safe to do so.

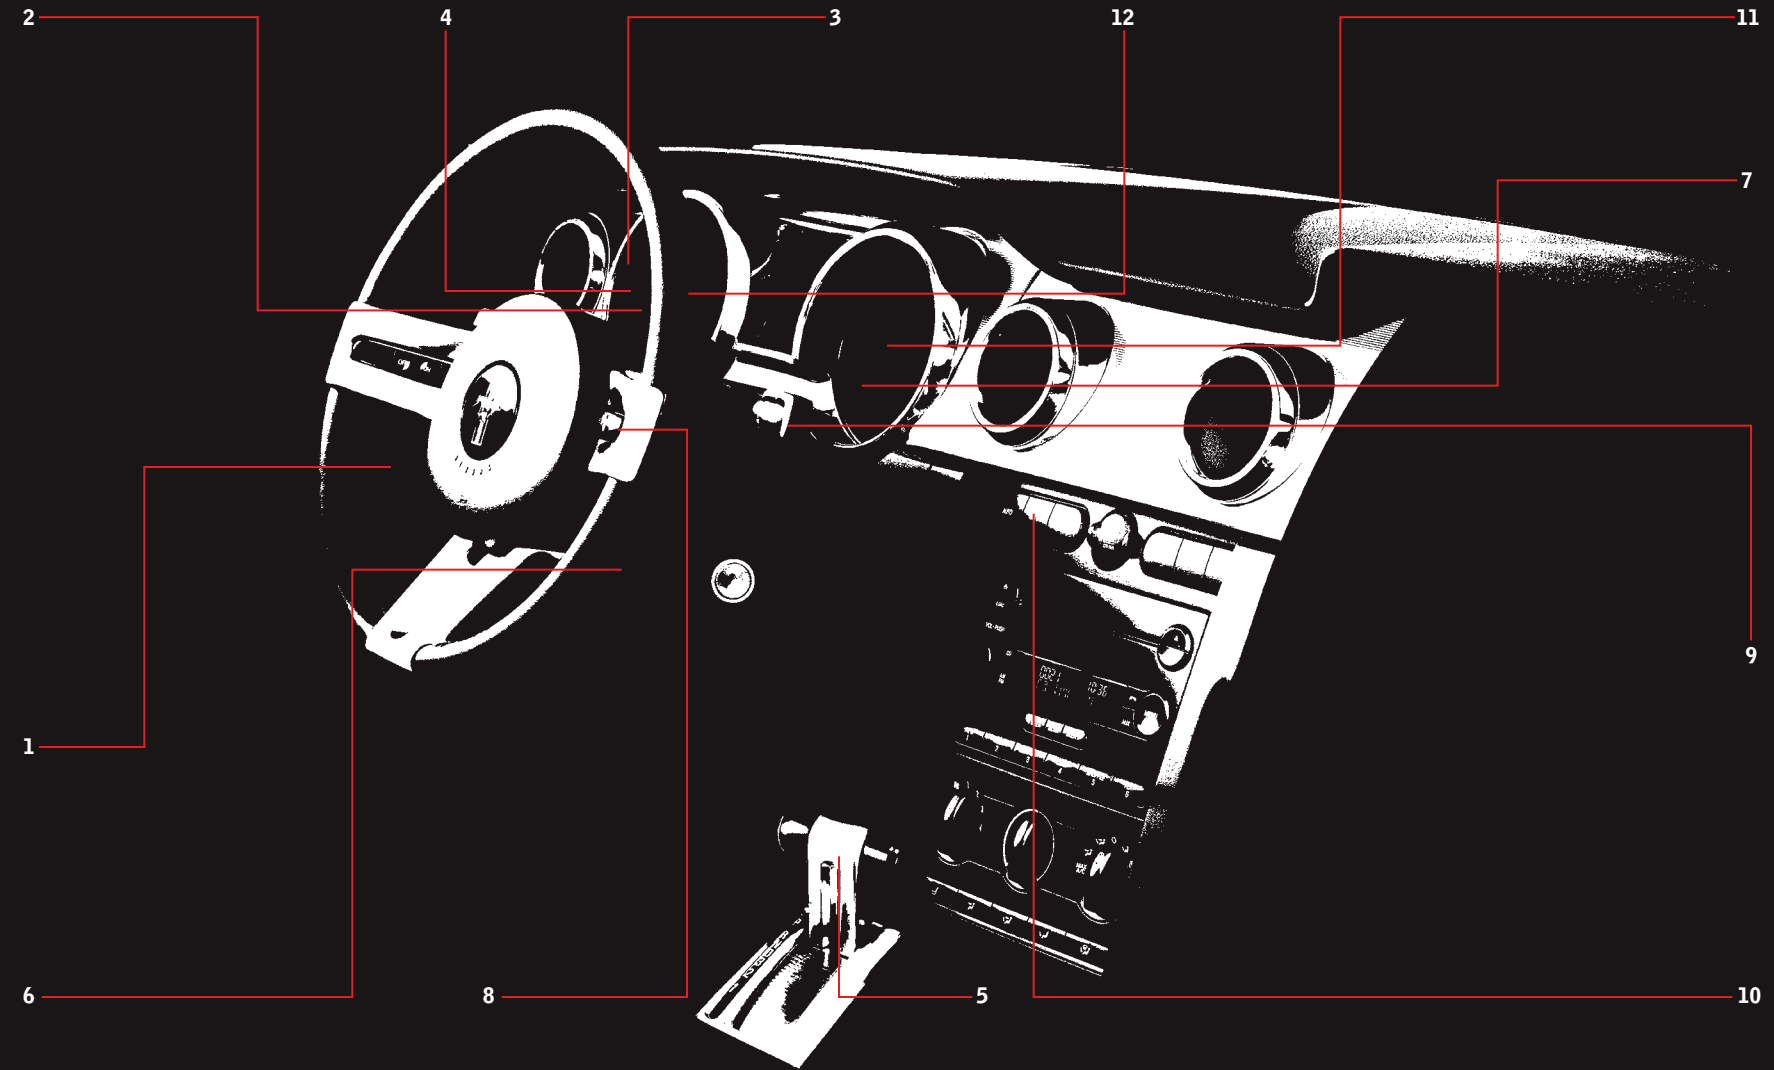MUSTANG QUICK REFERENCE GUIDE 2009



 
1 HEADLAMPS, FOG LAMPS (IF EQUIPPED) AND PANEL DIMMER CONTROL

Turn the control one position to the right  to turn on the parking lamps, instrument panel lamps, license plate lamps and tail lamps. Turn the control to the second position on the right  to turn on the headlamps. Pull the control towards you to activate the fog lamps (if equipped). The fog lamps will not operate when the control is turned off  or when the high beams are on. Use the panel dimmer control to adjust the level of brightness on the instrument panel during parking lamp and headlamp operation. Move the control to the full upright position, past the detent, to turn on the interior lamps.




2 TIRE PRESSURE MONITORING SYSTEM (TPMS)

 When the Tire Pressure Monitoring System (TPMS) warning light is lit, one or more of your tires is significantly under-inflated. You should stop and check the tires as soon as possible and inflate them to the proper pressure, as shown on the Safety Compliance Certification Label or Tire Label (located on the edge of the driver's door). Driving on a significantly under-inflated tire causes the tire to overheat and can eventually lead to tire failure. **NOTE** Outside temperatures affect tire pressure; refer to the Owner's Guide for additional tire information.

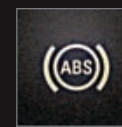

3 ANTI-LOCK BRAKE SYSTEM (IF EQUIPPED)

 The ABS warning lamp will momentarily illuminate when the ignition is turned on. If the light fails to illuminate when the ignition is turned on, stays on or flashes, have your vehicle serviced. In an emergency, apply continuous force to the brake pedal. Do not pump the brakes. Any pulsation or mechanical noise you may feel or hear is normal.

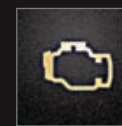

4 SERVICE ENGINE SOON LIGHT

The Service Engine Soon indicator light illuminates when the ignition is first turned on. If the light stays on or blinks, the On Board Diagnostics System has detected a malfunction. Drive moderately (avoid heavy acceleration or deceleration) and have your vehicle serviced immediately.



 
5 GEARSHIFT / OVERDRIVE CONTROL

Drive with the vehicle in D (Overdrive) for the best fuel economy. You can deactivate overdrive by pressing the transmission control switch on the right side of the shift handle. You may want to deactivate overdrive when driving conditions cause excessive shifting such as heavy city traffic, hilly terrain, heavy loads, etc. and when engine braking is required. To return to overdrive, simply press the transmission control switch again.



6 TILT STEERING COLUMN (IF EQUIPPED)

To adjust the steering wheel, push the lever down to unlock the steering column. While the lever is in the down position, tilt the steering column to your desired position. Then, while holding the steering column in place, pull the lever up to its original position to lock the steering column.

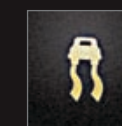


7 TRACTION CONTROL™ (IF EQUIPPED)

This system helps you maintain the stability and steerability of your vehicle on slippery road surfaces such as snow, ice or gravel. The system works closely with many of the elements already present in the Anti-Lock Braking System. The system defaults to on. However, should you become stuck, try switching the Traction Control™ off. Remember to reactivate Traction Control™ once you resume normal driving.



8 SPEED CONTROL

To set the speed control, press and release ON. Accelerate to the desired speed. Press and release the SET + control. Take your foot off the accelerator pedal. The speed control indicator light  will illuminate in the cluster. To set a higher speed: press and hold SET+ until the desired speed is reached, or briefly press SET+ to increase the speed by small amounts. To set a lower speed: press and hold SET- until the desired speed is reached, or briefly press SET- to decrease the speed by small amounts. Press RESUME to return to the previously set speed. To turn speed control off, depress the brake pedal or clutch pedal (if equipped).



9 WINDSHIELD WIPER / WASHER

The windshield wiper/washer lever controls the windshield wiper modes, speeds and the windshield washer. For intermittent operation, move the control up one position, then rotate the rotary control to the speed you want. For normal or low speed wiper operation, move the control up two positions from OFF. For high-speed operation, move the control up three positions from OFF. For windshield washer control, pull the end of the stalk toward you. A quick pull and hold, and the wipers will swipe three times with washer fluid. A long pull and hold, and the wipers and washer fluid will be activated for up to ten seconds.



10 MYCOLOR™ (IF EQUIPPED)

The instrument cluster gauges are backlit with white backlighting when the headlamps are off. When the headlamps are on, you can select one of six preset colors or create your own color (MyColor™) for the nighttime gauge backlighting. Headlamps must be on to set up the nighttime display. **NOTE** A gauge in a warning condition will be lit red when the headlamps are on. Press SETUP to get to the DISPLAY COLOR set-up menu.



Pressing RESET will scroll through the following selectable colors: Green, Purple, Orange, Blue, White, Red, and Adjust (to define MyColor™).

Adjusting MyColor™: The vehicle must be stationary to enter the MyColor™ adjust mode. To enter the MyColor™ adjust mode, hold RESET for three seconds at the Adjust menu, or press SETUP to scroll through the display colors again. When in the MyColor™ adjust mode, pressing RESET will step through the Red, Green, Blue and Exit options. You can create your own color by adjusting the levels of the three primary colors to achieve any of 125 different combinations. Pressing SETUP will increment the proportion of the color (Red, Green, or Blue) being adjusted. Try many combinations and record your favorites. To save and exit MyColor™, adjust and hold RESET for three seconds when prompted.*



11 MESSAGE CENTER (IF EQUIPPED)

With the ignition turned on, the message center displays important vehicle information by constantly monitoring vehicle systems. You may select display features on the message center for a display of status. The system will also notify you of potential vehicle problems with a display of system warnings followed by a long indicator chime.*



12 SECURILOCK™ PASSIVE ANTI-THEFT SYSTEM

This system is designed to help prevent the engine from being started unless a coded key programmed to your vehicle is used. Your SecuriLock™ system is armed immediately after turning the ignition off. The theft indicator (if equipped) will flash every two seconds when the vehicle is armed. Switching the ignition to the ON position with a coded key disarms the system. Your vehicle comes with two coded keys. You can purchase additional coded keys from your dealer.*



AMBIENT / MOOD LIGHTING (IF EQUIPPED)

Your vehicle may be equipped with an ambient lighting feature which, when activated, illuminates the footwells, cup holders and console bin with a choice of seven colors. Ambient lighting is operational when the ignition is on or in the accessory position. Press the control repeatedly to turn on, cycle through your color choices, and turn off.



ADJUSTING THE FRONT POWER SEATS (IF EQUIPPED)

The control is located on the side of the seat. Press the front to raise or lower the front portion of the seat cushion. Press the rear to raise or lower the rear portion of the seat cushion. Press the control to move the seat forward, backward, up or down.*

*For more detailed information, please refer to your Owner's Guide.

INSTRUMENT PANEL

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>