



2008 FORD TAURUS

ADDITIONAL INFORMATION



POWER MIRRORS

To adjust your mirrors, rotate the control clockwise to adjust the right mirror and counterclockwise to adjust the left mirror. Move the control in the direction you wish to tilt the mirror. Then rotate the control to the center position to lock the mirrors in place.



MEMORY FEATURE (IF EQUIPPED)

This feature will allow you to set two positions for the driver's seat, power mirrors and adjustable pedals (if equipped). Set the position by pressing the SET button (indicator will illuminate) then press the 1 or 2 button to set the position to either Driver 1 or Driver 2. This memory setting can then be recalled when you press the 1 or 2 button, and with your remote entry transmitter or with your keyless entry pad (if they are programmed to a memory position). A position can be recalled in any gearshift position if the ignition is not in the RUN position or only in P (Park) or N (Neutral) if the ignition is in the run position.



KEYLESS ENTRY KEY PAD

The keyless entry keypad can be used to lock or unlock the doors without using a key. It can also control the memory seat, power mirrors and adjustable pedals (if equipped). For more information, please consult your Owner's Guide.




INTEGRATED KEYHEAD TRANSMITTER (IKT) AND REMOTE ENTRY SYSTEM

Your vehicle comes equipped with two specially programmed Integrated Keyhead Transmitters (IKTs). IKTs are both a programmed ignition key and a remote keyless entry transmitter. Handle the IKT carefully when starting the car to avoid accidentally pressing any of the remote entry buttons. Press once to unlock the driver's door. The interior lamps will illuminate. Press twice to unlock all the doors. Press once to lock all the doors, the turn lamps will flash. Press twice within three seconds to confirm all the doors and trunk are closed. The horn will chirp and the turn signal lamps will flash once if all the doors and the trunk are closed. Press to activate the panic alarm. Press again or turn the key in the ignition to deactivate the panic alarm. Press twice within 3 seconds to activate the car finder feature; your horn will chirp and your turn signal lamps will flash. It is recommended that this method be used to locate your vehicle, rather than using the panic alarm. Press twice within 3 seconds to open the trunk. Ensure that you keep the IKT adhesive security label in a safe place for future reference. Replacements are only available through an authorized dealer.

2008 FORD TAURUS

ADDITIONAL INFORMATION

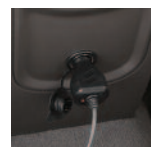


SECOND ROW POWERPOINT

A third rear auxiliary power point is located on the rear of the center console. The power point is accessible from the rear seat.



AUXILIARY INPUT JACK

Your vehicle is equipped with an Auxiliary Input Jack located inside the console bin. This allows you to plug and play auxiliary audio devices, including MP3 Players. Press AUX repeatedly on your audio system to access. When LINE IN appears in the display, plug in your auxiliary audio device. For more information, please consult your Owner's Guide.

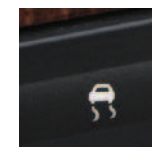

ADVANCETRAC® (IF EQUIPPED)

The Advantetrac® system helps the driver maintain the stability and steerability of the vehicle. The system integrates anti-lock braking system (ABS) and Traction Control™ and a more advanced function to further enhance the stability of the vehicle. The Advantetrac® system automatically turns on when the engine is started. However, the system does not function when the vehicle is traveling in R (Reverse).



CENTER CONSOLE STORAGE

The utility compartment may have a clamshell tray for flexible storage of MP3 players, CDs or handbags.



USB PORT (IF EQUIPPED)

Your vehicle may be equipped with a USB port inside your center console. This feature allows you to plug in media playing devices among other options. For more information, please refer to "Using your USB port" in the SYNC or Navigation Supplement (if equipped).



SPLIT-FOLDING REAR SEAT

One or both rear seat backs can be folded down to provide additional cargo space.

To lower the seat backs, pull the strap located on the outboard side of the seat back to release it, and then fold the seat back down.

Note: When raising the seat back(s), make sure to firmly lock them into place and tug forward to ensure that they are fully latched.

FRONT PASSENGER FOLD FLAT SEAT BACK

The front passenger seat back can be folded down to a horizontal position to allow room for a long load. Ensure that the seat is in the rearmost position and the head restraint is fully down, prior to pulling the strap located on the back of the seat.



DUAL ZONE AUTOMATIC CLIMATE CONTROL WITH HEATED SEATS (IF EQUIPPED)

DRIVER AND PASSENGER TEMPERATURE
Set desired cabin temperature with the **1** or **2** blue and red buttons. Press **1** for driver's side, **2** for passenger's side. Recommended settings 72°F (22°C) to 75°F (24°C).

DUAL CONTROL (IF EQUIPPED)

Press **10** DUAL to engage/disengage separate passenger side temperature control. For controls without a **10** DUAL button, press and hold **2** AUTO to engage/disengage separate passenger side temperature control.

AUTOMATIC OPERATION

Set desired **1** cabin temperature.

Press **2** AUTO button for full automatic operation. The system will automatically adjust airflow temperature, fan speed, airflow direction, A/C and recirculated air, based on the selected temperature to

heat or cool the vehicle to the desired temperature as quickly as possible.

MAX A/C OPERATION

AUTOMATIC OPERATION: Press **2** AUTO button for full automatic operation. Do not override A/C or recirculated air. Set temperature to 60°F (16°C).

OVERIDE OPERATION:

Select **7** air distribution.

Select **3** A/C and **9** recirculated air. Use recirculated air with A/C to provide colder airflow. Set temperature setting to 60°F (16°C).

MANUAL OVERRIDE OPERATION

Press **1** to set desired cabin temperature. Adjust any of the following for personal comfort preferences: **3** fan speed, **7** airflow direction, **3** A/C and **9** recirculated air. Fan speed, A/C and

recirculated air overrides will not turn off the AUTO indicator light. Airflow direction overrides will turn off the AUTO indicator light.

AIRFLOW DIRECTION CONTROL (IF EQUIPPED)

Press **7** repeatedly to select airflow direction.

DEFOGGING/DEMISTING

Press **3** to distribute outside air through the windshield defroster vents and demister vents.

To reduce humidity buildup in the vehicle, do not drive with the climate control turned off. Also, do not drive with recirculated air selected unless A/C is operating.

HEATED SEATS (IF EQUIPPED)

Press **4** to cycle through available settings of high heat (2 lights), low heat (1 light), and off (no lights).



PREMIUM / AUDIOPHILE IN-DASH 6-CD / MP3 SOUND SYSTEM (IF EQUIPPED)

ON / OFF / VOLUME CONTROL
Press **5** to turn the system ON or OFF. Turn to increase or decrease volume. If the volume is set above a certain level and the ignition is turned back on at a "nominal" level when the ignition switch is turned back on.

TUNER / DISC SELECTOR

Press **3** or **4** ▲▼ to manually go up or down the radio frequency band or to select a desired disc. Also use in menu mode to select various settings.

BASS / TREBLE

Press **3** MENU until Bass or Treble settings are displayed. Adjust using the **3** or **4** ▲▼ controls.

LOAD

Press **2** LOAD to begin the CD load sequence. Press and hold to autoloop up to 6 CDs.

BALANCE / FADE

Press **3** MENU until Balance is displayed. Press to adjust the audio between the left and right speakers using the **3** or **4** ▲▼ controls. Press **3** MENU again to display Fade. Press the **3** or **4** ▲▼ controls to adjust the audio between the front and rear speakers.

CD

Press **4** to enter CD mode. If a CD is already loaded into the system, the CD will begin playing where it last ended.

SHUFFLE

Press **16** to play tracks in random order.

CD FAST FORWARD

Press **15** FF to manually advance in a CD track.

CD REWIND

Press **12** REW to manually reverse in a CD track.

CD EJECT

Press **1** to eject a CD. Press and hold to eject all CDs.

AM / FM

Press **7** to select AM or FM frequency bands.

SCAN FUNCTION

Press **10** SCAN for a brief sampling of radio stations or CD tracks. Press again to stop.

SEEK FUNCTION

Press **9** or **11** SEEK to access the previous/next strong station or track.

MP3 TRACK / FOLDER MODE

In Track mode, pressing **9** or **11** SEEK will scroll through all tracks on the disc. In Folder mode, pressing **9** or **11** SEEK will scroll only through tracks within a selected folder.

SETTING MEMORY PRESETS

To set a station: Press **7** to select AM or FM frequency band, tune to a station, then press and hold a preset button until the sound returns.

SETTING THE CLOCK

Press **3** MENU until SELECT HOUR or SELECT MINS is displayed. Press the up and down **3** or **4** ▲▼ control to manually increase or decrease the time. Press **3** MENU again to disengage clock mode.

FOLDER FUNCTION

Press **14** or **15** FOLDER to access next or previous folder on MP3 discs.

NAVIGATION SYSTEM (IF EQUIPPED)

Please refer to your Navigation Supplement for more information on the Navigation System.

2008 QUICK REFERENCE GUIDE

FORD TAURUS



This Quick Reference Guide is not intended to replace your vehicle Owner's Guide which contains more detailed information concerning the features of your vehicle, as well as important safety warnings designed to help reduce the risk of injury to you and your passengers. Please read your entire Owner's Guide carefully as you begin learning about your new vehicle and refer to the appropriate sections when questions arise.

All information contained in this Quick Reference Guide was accurate at the time of duplication. We reserve the right to change features, operation and/or functionality of any vehicle specification at any time. Your Ford dealer is the best source for the most current information.

For detailed operating and safety information, please consult your Owner's Guide.

Ford Motor Company
Customer Relationship Center
P.O. Box 6248
Dearborn, MI 48121
1-800-392-3673 (FORD)
(TDD for the hearing impaired: 1-800-232-5952)



FORD TAURUS
SEPTEMBER 2007
SECOND PRINTING
QUICK REFERENCE GUIDE



8G1J 19G217 CA

CLIMATE CONTROL

AUDIO SYSTEMS

ESSENTIAL INFORMATION

LOCATION OF SPARE TIRE AND TOOLS

Your vehicle is equipped with a temporary spare tire, which is smaller than a regular tire, and designed for emergency use only. The jack, spare tire, jack handle, and lug nut wrench are under the cargo cover in the trunk of the vehicle.

FUSES

If your electrical components are not working properly, a fuse may have blown. For more information, please consult your Owner's Guide.

FUEL PUMP SHUT-OFF SWITCH

 
This device stops the electric fuel pump from sending fuel to the engine when your vehicle has had a substantial jolt. After an accident, if the engine cranks but does not start, this switch may have been activated. The fuel pump shut-off switch is located in the front passenger footwell area in the right upper corner.

UNLEADED FUEL RECOMMENDATIONS

For optimum performance, use "Regular" unleaded fuel with a pump (R+M)/2 octane rating of at least 87. We do not recommend the use of gasolines labeled as "Regular" with octane ratings of 86 or lower that are sold in high altitude areas.

TIRE PRESSURE

Safe operation of your Taurus requires that your tires be properly inflated. The Ford recommended inflation pressure is found on the Tire Label or the Safety Compliance Certification Label located near the front door latch on the edge of the driver's door. At least once a month and before long trips, inspect each tire and check the air pressure with a digital or dial-type tire gauge. Don't forget the spare. Air pressure should be checked when the tires are cold. Inflate all tires to the inflation pressure recommended by Ford Motor Company.

As an added safety feature, your vehicle has been equipped with a tire pressure monitoring system (TPMS) that illuminates a low tire pressure warning light  when one or more of your tires is significantly under-inflated.

ROADSIDE ASSISTANCE

In addition to your New Vehicle Limited Warranty, Ford provides new vehicle owners with a complimentary roadside assistance program. It covers changing a flat tire, jump starts, limited fuel delivery, lock-out assistance, winch out and towing of your vehicle.

United States
(800) 241 - 3673

Canada
(800) 665 - 2006

HOOD RELEASE

To open the hood, pull the hood release handle under the bottom of the instrument panel near the steering column. Go to the front of the vehicle and release the auxiliary latch located under the front center of the hood. Use the prop rod to support the raised hood. Lift the prop rod by the sleeve, not the bare metal.

REAR WINDOW BUFFETING

When one or both of your rear windows are fully open, you may experience a wind throb or buffeting noise. This is common among all vehicles and can be eliminated simply by lowering a front window two to three inches.


SAFETY

Please wear your safety belt, pay attention to changing road conditions and drive safely. For more safety related information, please consult your Owner's Guide.




TILT STEERING COLUMN

To adjust the steering wheel, push the adjustment lever down to unlock the steering column. While the lever is down, tilt the steering column to your desired position. Then, while holding the steering column in place, pull the lever up to its original position to lock the steering column. Do not adjust while driving.

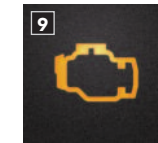


SERVICE ENGINE SOON

The service engine soon indicator lamp illuminates when the ignition is first turned to the ON position to check the bulb. If the light turns solid or blinks, the On Board Diagnostics System has detected a malfunction. Drive in a moderate fashion (avoid heavy acceleration or deceleration) and have your vehicle serviced immediately.

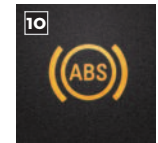

ABS WARNING LAMP

In an emergency, apply continuous force to the brake pedal. Do not pump the brakes. Any pulsation or mechanical noise you may feel or hear is normal. If the lamp doesn't illuminate or stays on, have your vehicle serviced. Normal braking is still functional unless the brake warning lamp is also illuminated.

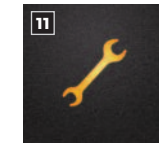


THROTTLE CONTROL / TRANSMISSION LAMP

The throttle control / transmission lamp illuminates when a powertrain fault has been detected. Contact your dealer as soon as possible.





NAVIGATION HANDS FREE FEATURE (IF EQUIPPED)

Press  to access and use voice commands through your navigation system and SYNC (if equipped). For more information, please refer to your Navigation Supplement.



SYNC STEERING WHEEL CONTROLS (IF EQUIPPED)

Press  to access and use SYNC's voice recognition system. Press OK to confirm a selection in SYNC mode. Press  to access SYNC's hands-free calling features. Press MENU when in SYNC mode to access the previous (-) or next (+) menu item. For more information, please refer to your SYNC supplement.



STEERING WHEEL AUDIO CONTROLS (IF EQUIPPED)

These controls allow you to adjust the radio and CD features from the steering wheel. Press MEDIA to select AM, FM1, FM2 or CD. Press SEEK to access the previous/next strong station or track on a CD. Press VOL +/- to adjust volume, and MUTE to mute the volume.



SPEED CONTROL

For your speed control to work, you must press and release the ON button. Pressing and releasing the OFF button disengages the system and turns it off. To set a speed, press the ON button, accelerate to the desired speed, press the SET+ button, then take your foot off the accelerator pedal. You can increase your speed by pressing and releasing the SET+ button until you reach the desired speed, increasing speed by 1 mph (1.6 km/h) with each tap. You can decrease speed in the same way using the SET- button. Pressing the RSM (resume) button will automatically return the vehicle to the previously set speed. To disengage the speed control, press the OFF or CNCL button or depress the brake pedal.



MESSAGE CENTER (IF EQUIPPED)

With the ignition in the ON position, the message center displays important vehicle information by constantly monitoring vehicle systems. You may select display features on the message center for a display of status. The system will also notify you of potential vehicle problems with a display of system warnings. For more information, please consult your Owner's Guide.



WINDSHIELD WIPER / WASHER

The multifunction lever controls the windshield wiper modes, speeds and the windshield washer. Rotate the end of the control away from you to increase the speed of the wipers. Rotate the control towards you to decrease the speed of the wipers.

For windshield washer control, push the end of the stalk briefly to cause a single swipe of the wiper. With a quick push and hold, the wipers will swipe three times with washer fluid. With a long push and hold, the wipers and washer fluid will activate for up to ten seconds.



FOGLAMP CONTROL (IF EQUIPPED)

With the ignition on, the foglamps can be turned on when the headlamp control is in the parking lamp, headlamp or autolamp position, and the high beams are not on. Simply pull the headlamp control toward you to turn on the foglamps. The foglamp indicator light will illuminate. The foglamps will not operate when the high beams are activated.



PANEL DIMMER

Use this control to adjust the brightness of the instrument panel and all applicable switches in the vehicle during headlamp and parking lamp operation. Move the control to the full upright position, past the detent, to turn on the interior lamps.



HEADLAMP CONTROL

Turning the headlamp control clockwise to the first position turns on the parking lamps, instrument panel lamps, license plate lamps and the tail lamps. Continuing to turn the headlamp control to the second position turns on the headlamps.

To use the autolamp light-sensitive, automatic on-off control for the headlamps, turn the headlamp control counterclockwise. If the windshield wipers are turned on for a fixed period of time, the exterior lamps will turn on with the headlamp control in the autolamp position. To turn autolamps off, turn the control clockwise to the OFF position.

To activate the high beams, simply push the turn signal lever toward the instrument panel. Pull the lever toward you to deactivate high beams. Use the same lever to activate the "Flash to Pass" feature. Pull the lever toward you to slightly activate and release it to deactivate.



FORD TAURUS



Your new Taurus speaks volumes without saying a word.

You have chosen well. Your new Ford Taurus is the car that was

built around you. Surrounding you with sleek, trim good looks

and unexpected luxury. Putting you in command with impeccable

road manners. Giving you the peace of mind knowing you're

driving one of the smartest cars the road has ever known.

This Quick Reference Guide was designed to help you get to

know your new Taurus. For the most detailed information, consult

your Owner's Guide. So, let's get to know your new Taurus.

The road is waiting.

Use extreme caution when using any device or feature that may

take your attention off the road. Your primary responsibility is the

safe operation of the vehicle. Only use non-essential features and

devices when it is safe to do so.

2008 QUICK REFERENCE GUIDE

INSTRUMENT PANEL

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>